

AUHMI-8XXB Series

10.1", 15.6", and 21.5" Intel Elkhart Lake
Fanless Industrial Compact Size Panel PC

User Manual

Release Date

June 2024

Revision

V1.0

©2024 Aplex Technology, Inc.

All Rights Reserved.

Published in Taiwan

Aplex Technology, Inc.

15F-1, No.186, Jian Yi Road, Zhonghe District, New Taipei City 235, Taiwan

Tel: 886-2-82262881 Fax: 886-2-82262883 URL: <https://www.aplex.com/>

Revision History

Reversion	Date	Description
1.0	2024/6/21	Initiation

Warning!

This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, it may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Electric Shock Hazard – Do not operate the machine with its back cover removed. There are dangerous high voltages inside.

Caution

Risk of explosion if the battery is replaced with an incorrect type.

Batteries should be recycled where possible. Disposal of used batteries must be in accordance with local environmental regulations.

Disclaimer

This information in this document is subject to change without notice. In no event shall Apex Technology Inc. be liable for damages of any kind, whether incidental or consequential, arising from either the use or misuse of information in this document or in any related materials.

Safety Precautions

Follow the messages below to prevent your systems from damage:

- ◆ Avoid your system from static electricity on all occasions.
- ◆ Prevent electric shock. Don't touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
- ◆ Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

Table of Contents

Revision History	1
Warning!	2
Safety Precautions	3
Chapter 1 System Product	6
1.1 Features	6
1.2 Specifications	6
1.3 Standard LCD.....	8
1.4 High Brightness LCD	8
1.5 Mechanical.....	9
1.6 Dimensions.....	9
1.7 Brief Description of AUHMI-8XXB Series	11
1.8 VESA Mounting	14
1.9 Panel Mounting.....	15
1.10 Cable Cover	17
1.11 Battery Kit Installation	18
1.12 MB Box kit attaches to the Front Kit.....	19
1.13 Warning for separating AUHMI BOX PC	20
Chapter 2 Hardware	21
2.1 Specifications	21
2.2 Board Dimensions	23
2.3 Jumpers and Connectors Location.....	24
2.4 Jumpers Setting and Connectors	26
2.5 Daughter Boards (Options)	35
2.6 M.2 Slot Installation.....	40
Chapter 3 BIOS Setup Description	42
3.1 Operations after POST Screen	42
3.2 BIOS SETUP UTILITY.....	42
3.3 Main Settings	43
3.4 Advanced Settings.....	44
3.5 Chipset Settings	60
3.6 Security Settings.....	91
3.7 Boot Settings.....	92
3.8 Save & Exit Settings.....	93
Chapter 4 Installation of Drivers	95
4.1 Intel Chipset	96
4.2 Intel® HD Graphics Chipset	98
4.3 Realtek HD Audio Driver Installation	101
4.4 Intel® Management Engine Interface	102

4.5	LAN Driver	104
4.6	Touch Screen Installation.....	107

List of Figures

FIGURE 1	DIMENSIONS OF AUHMI-810B	9
FIGURE 2	DIMENSIONS OF AUHMI-816B	10
FIGURE 3	DIMENSIONS OF AUHMI-821B	10
FIGURE 4	FRONT VIEW OF AUHMI-810BP(H)	11
FIGURE 5	REAR VIEW OF AUHMI-810BP(H).....	11
FIGURE 6	FRONT VIEW OF AUHMI-816BP(H)	12
FIGURE 7	REAR VIEW OF AUHMI-816BP(H).....	12
FIGURE 8	FRONT VIEW OF AUHMI-821BP(H)	13
FIGURE 9	REAR VIEW OF AUHMI-821BP(H).....	13
FIGURE 10	AUHMI-810B VESA MOUNTING	14
FIGURE 11	AUHMI-816B/AUHMI-821B VESA MOUNTING.....	14
FIGURE 12	AUHMI-810B PANEL MOUNTING.....	15
FIGURE 13	AUHMI-816B/AUHMI-821B PANEL MOUNTING	16
FIGURE 14	AUHMI-816B/AUHMI-821B CABLE COVER INSTALLATION	17
FIGURE 15	AUHMI-810B MB BOX KIT ATTACHES TO FRONT KIT	19
FIGURE 16	AUHMI-816B/821B MB BOX KIT ATTACHES TO FRONT KIT.....	19
FIGURE 17	AUHMI-8XXB BOX PC SEPARATION WARNINGS	20

1.1 Features

- Intel Elkhart lake Fanless HMI Panel PC
- Flat front panel touch screen
- Fanless design
- Front Panel IP66
- Gap free sealing and Slim Front Frame architecture at front bezel
- 9~36V DC wide-ranging power input

1.2 Specifications

AUHMI-9XXC	
System	
CPU	Intel® Celeron® J6412 (1.8GHz /2.60GHz, 1.5MB L2 cache,10W TDP) Intel® Atom® x6425E (1.8GHz/3.0GHz, 1.5MB L2 cache,12W TDP) (by project)
Chipset	SoC
Memory	1 x DDR4 SO-DIMM slot, 3200MHz up to 32GB
LVDS	1 x 18/24bit Dual Channel on board
IO Port	
USB	2 x USB 3.2 Gen2 type A 2x USB 2.0 ,Type-A
Serial/Parallel	1 x RS232/422/485 (Default RS232, pin9 RI(default)/5V/12V, select via BIOS, DB9 (COM1))
Audio	1 x Audio Line Out
LAN	2 x 2.5GbE LAN RJ-45
Power	1 x 3-pin DC Power Input terminal 1 x 2-pin connector for power on/off button
Display port	1 x DP
Option	<ul style="list-style-type: none"> ● TB-528 Series: <ol style="list-style-type: none"> 1. 4 x USB 2.0 type A (TB-528U4) 2. 4 x USB 2.0 type A + 1 x Mini-PCIe + 1 x SIM slot (TB-528U4ME1) 3. 2 x COM(RS-232) (TB-528C2) 4. 1 x COM*RS-232) + 2 x USB 2.0 (TB-528C1U2) 5. 1 x COM(RS-232) + 2 x USB2.0 + 1 x Mini PCIe slot(TB-528C1U2P1) 6. 2 x CAN (TB-528CAN2) 7. 2 x COM(RS-232) + 1 x Mini-PCIe slot (TB-528C2ME1) 8. 2 x COM (RS-422/485, isolated) (TB-528C2I) 9. 1 x LAN + 2 x USB 2.0 type A (TB-528E1U2)

	<ul style="list-style-type: none"> ◆ Smart Battery (turbo off in bios; new PCBA PB-434 must be installed with smart battery, keep the system working at least 30 minutes, depend on different size) ◆ 1 x 2W Speaker ◆ Auto Dimming (Exclusive LED indicator) ◆ GPIO (4xDI, 4xDO) ◆ WIFI (through M.2 converter to mPCIe module, or through mPCIe WiFi module) ◆ LTE 4G, WWAN module <p>(Speaker, TB-528 series and Backup Battery, choose one from three, do not use meanwhile)</p>
Storage Space	
Storage	<p>1x M.2 B key(SATA 3) 2280</p> <p>1x SATA 3 (optional)</p>
Expansion	
Expansion Slot	<p>1 x M.2 2230 E-key socket for optional Wi-Fi/BT Module (PCIe×2+USB2.0)</p> <p>1 x M.2 B-Key(PCIe×1,USB3.0,SIMBus) w/1xNano SIM Socket, Support 3042/3052</p>
Touch Screen –PCT Type	
TS Control	COF
Interface	USB
Light Transmission	90%
Wireless LAN and Antenna	
Wireless LAN	Wifi 4/5/6e viaM.2 Key module card (option)
Antenna	reserve 4 external antenna holes (default 2 antenna)
Power	
Power Input	DC 9~36V
Backup Battery	
Backup battery	<p>3250mAH(option)</p> <p>*When the Backup battery is installed; it cannot run full loading program; it may cause the system shot down</p>
Mechanical	
Mechanical Construction	Aluminum die-casting chassis
Front Bezel Metal	Aluminum/Panel Mounting
Mounting	VESA Mount 100 x 100
Chassis Color	Black
IP Rating	Front Panel IP66
Operating System Support	
OS Support	<p>Windows 10 IoT</p> <p>Windows 11</p> <p>Linux Ubuntu 20.04 above</p>
Environmental	
Operating Temperature	0~50°C/-20°C to 60°C (optional for 10.1", 15.6")

Storage Temperature	-30~70°C
Humidity	10 to 95% @ 40°C, non-condensing
Certification	CE / FCC Class B, RoHS/REACH Compliant

1.3 Standard LCD

	AUHMI-810BP	AUHMI-816BP	AUHMI-821BP
Display Type	10.1" LED Backlight	15.6" LED Backlight	21.5" LED Backlight
Max. Resolution	1280 x 800	1366 x 768 1920 x 1080	1920 x 1080
Max. Color	16.7M	16.2M	16.7M
Luminance(cd/m ²)	350	500-HD 800-FHD	250
Contrast Ratio	800:1	500:1-HD 800:1-FHD	1000:1
Viewing angle(H/V)	170 /170	160 / 160-HD 170 / 170-FHD	178 / 178
Backlight Lifetime (Hrs)	30,000	50,000	50,000

1.4 High Brightness LCD

	AUHMI-810BP	AUHMI-816BP	AUHMI-821BP
Display Type	10.1" LED Backlight	15.6" LED Backlight	21.5" LED Backlight
Max. Resolution	1280 x 800	1366 x 768 1920 x 1080	1920 x 1080
Max. Color	16.2M	16.7M-HD 16.2M-FHD	16.7M
Luminance(cd/m ²)	1000	1000	1500
Contrast Ratio	1300:1	800:1	1000:1
Viewing angle(H/V)	165 /165	176 / 130-HD 170 / 170-FHD	178 / 178
Backlight Lifetime (Hrs)	50,000	50,000	50,000

1.5 Mechanical

	AUHMI-810BP	AUHMI-816BP	AUHMI-821BP
Mounting	VESA 100 x 100; Panel Mount	VESA 100 x 100; Panel Mount	VESA 100 x 100; Panel Mount
Dimensions(mm)	269x189x51	405x256x59	541x330x59
Net Weight(Kg)	TBD	3.7	6.5
Power Consumption	35	40	50

1.6 Dimensions

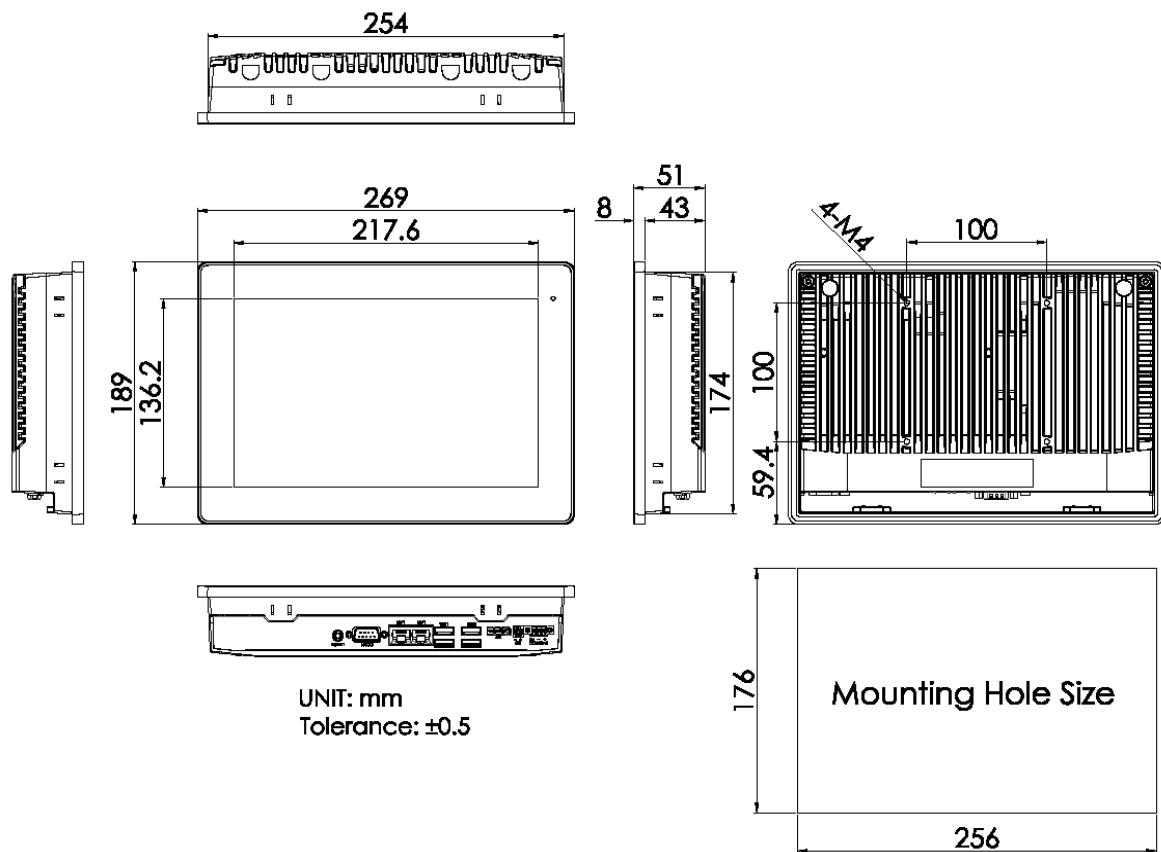


Figure 1 Dimensions of AUHMI-810B

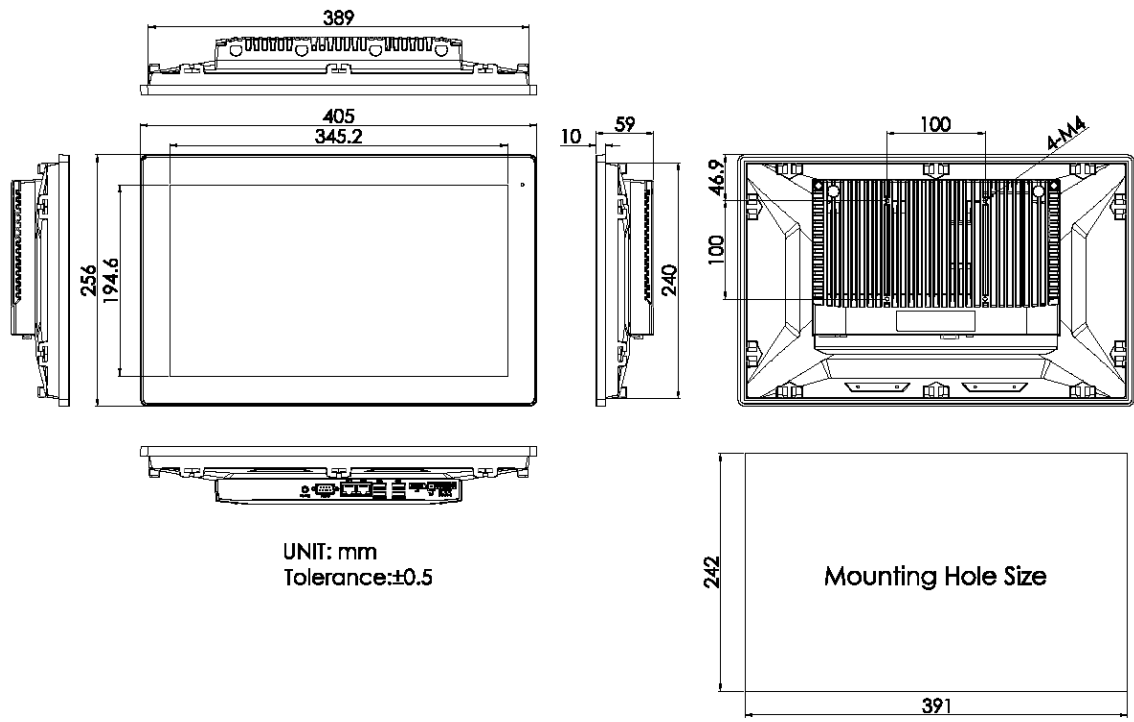


Figure 2 Dimensions of AUHMI-816B

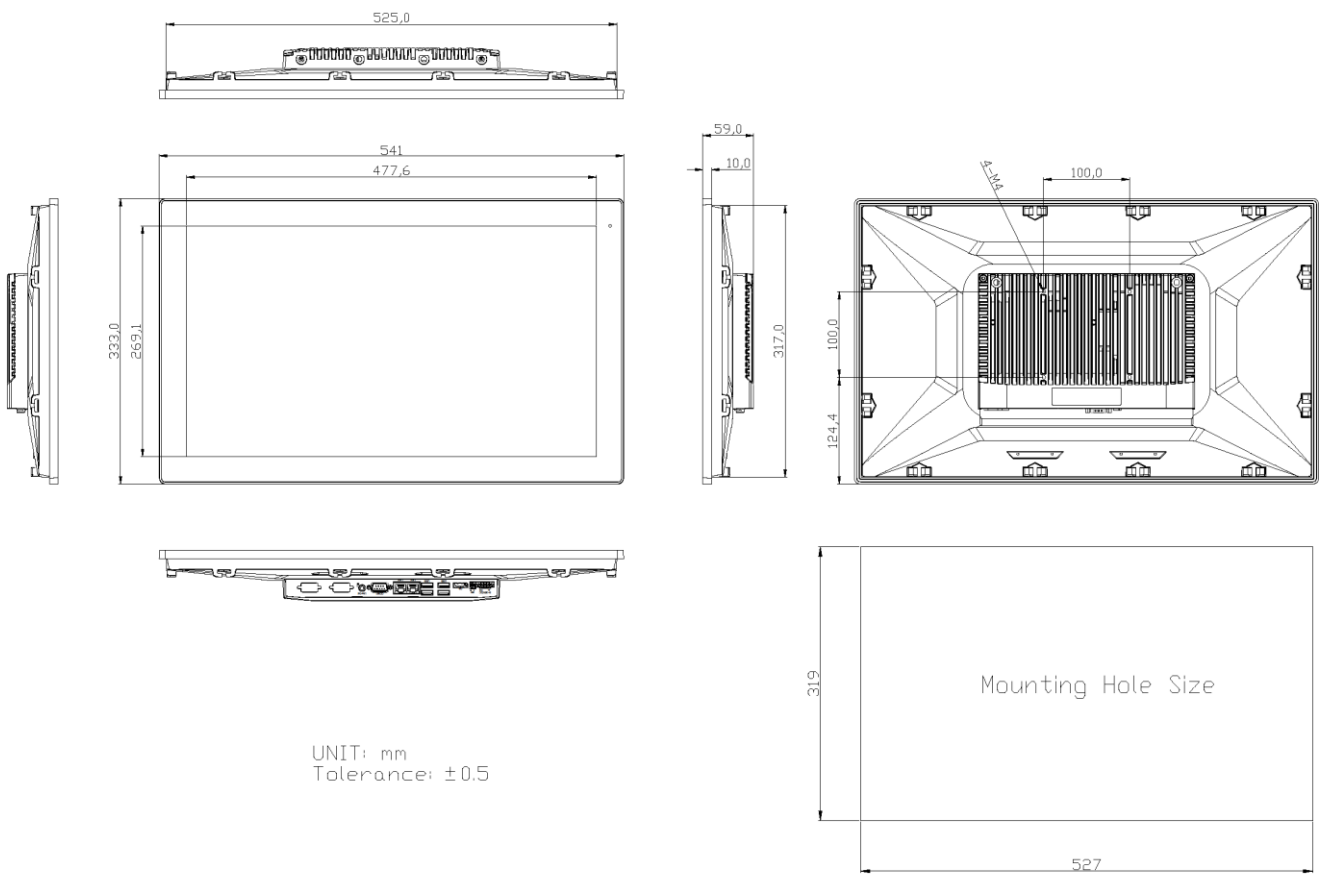


Figure 3 Dimensions of AUHMI-821B

1.7 Brief Description of AUHMI-8XXB Series

There are 10.1" , 15.6" , 21.5" Industrial Compact Size Panel PC in AUHMI-8XXB series, which comes with flat front panel touch screen and fanless design. It is powered by Intel® Celeron® J6412 CPU Processors with SO-DIMM DDR4 slot, up to 32GB 3200 MHz. These systems support DC 9~36V wide-ranging power input and IP66 compliant front panel. Projected capacitive touch support 7H anti-scratch surface is ideal for use as PC-based controller for Industrial Automation & Factory Automation. Furthermore, AUHMI-8XXB Series are capable of expanding the function by option expansion I/O boards, TB-528 series, includes Mini-PCIe, CAN bus, USB, and isolation I/O module to improve competitive advantage through providing critical flexibility and expansibility for the variety of application and requirement.

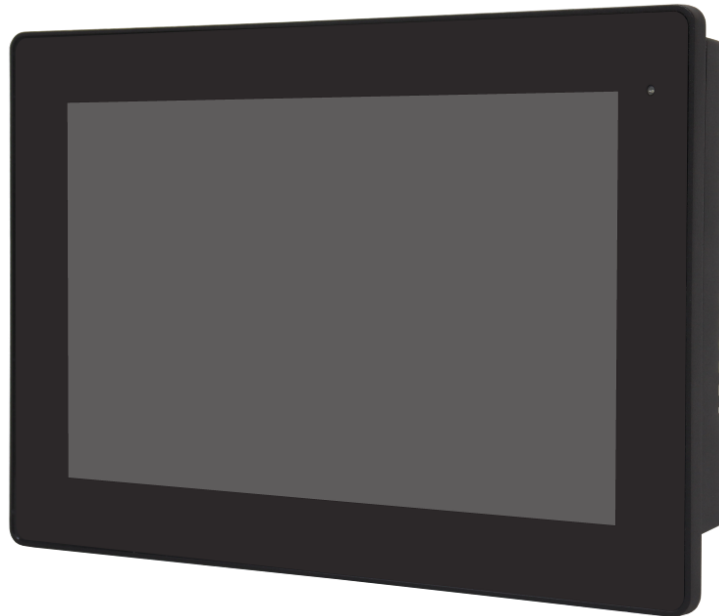


Figure 4 Front View of AUHMI-810BP(H)



Figure 5 Rear View of AUHMI-810BP(H)

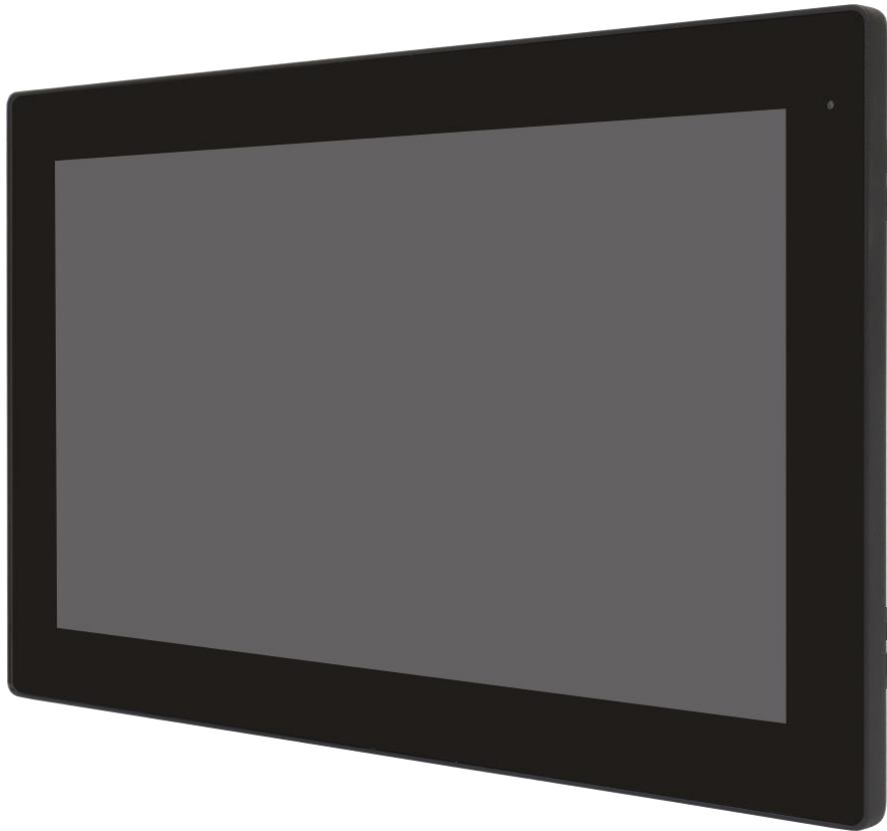


Figure 6 Front View of AUHMI-816BP(H)



Figure 7 Rear View of AUHMI-816BP(H)



Figure 8 Front View of AUHMI-821BP(H)



Figure 9 Rear View of AUHMI-821BP(H)

1.8 VESA Mounting

1.8.1. 10.1"

The AUHMI-810B is designed to be VESA mounted as shown in Picture. Just carefully place the unit through the hole and tighten the given 4 x M4x8 screws from the rear to secure the mounting.

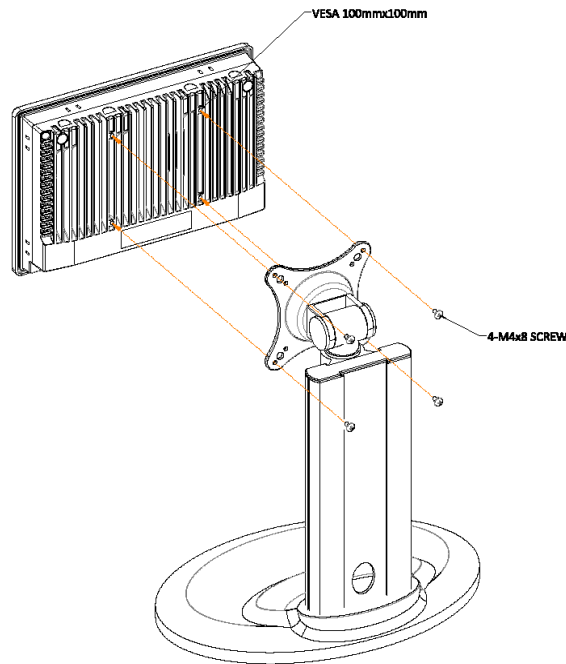


Figure 10 AUHMI-810B VESA Mounting

1.8.2. 15.6" and 21.5"

The AUHMI-816B and AUHMI-821B are designed to be VESA mounted as shown in Picture. Just carefully place the unit through the hole and tighten the given 4 x M4x8 screws from the rear to secure the mounting.

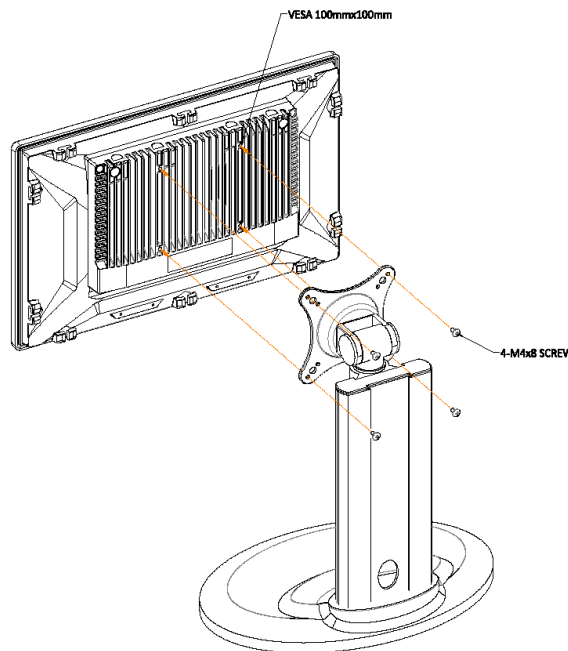


Figure 11 AUHMI-816B/AUHMI-821B VESA Mounting

1.9 Panel Mounting

1.9.1. 10.1”

Step1: Embed the main AUHMI-810B machine into the panel frame.

Step2: Insert the latch into the specific hole on AUHMI-810B.

Step3: Fix the latch with screw.


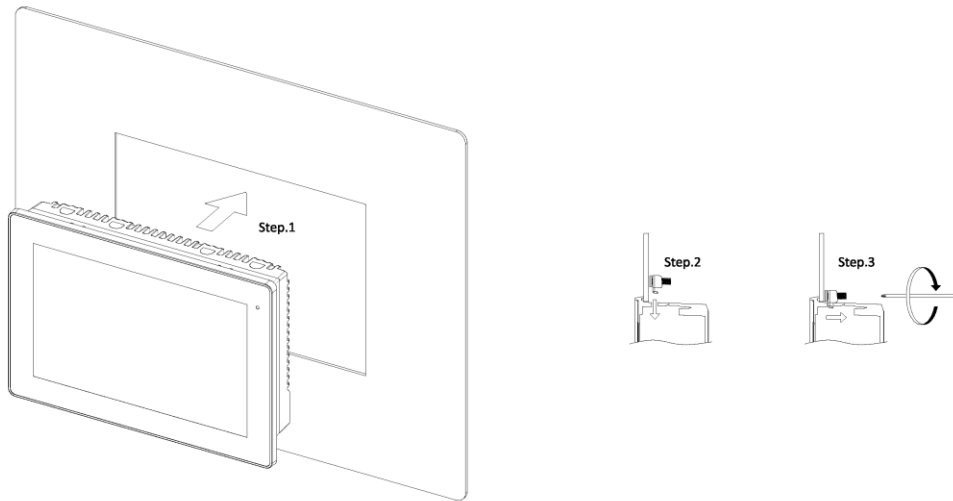


Figure 12 AUHMI-810B Panel Mounting

1.9.2. 15.6” and 21.5”

Step1: Embed the main AUHMI-816B/821B machine into the panel frame.

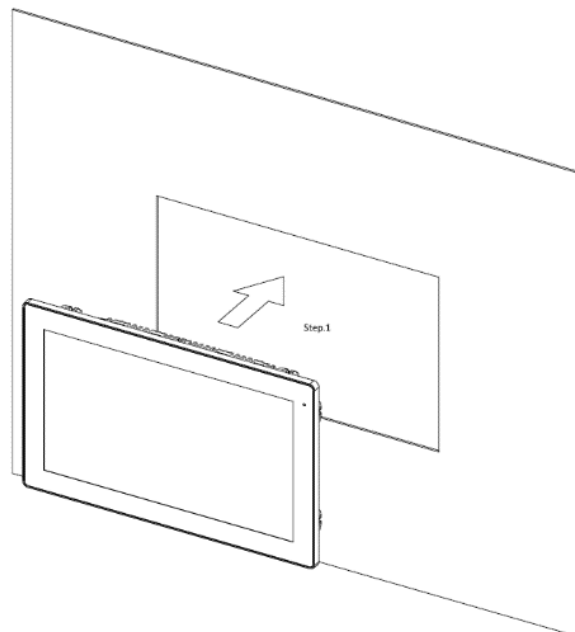

Step2: Insert the latch into the specific hole on AUHMI-816B/821B.(The mounting kits are different from AUHMI-810B)

Step3: Fix the latch with screw.

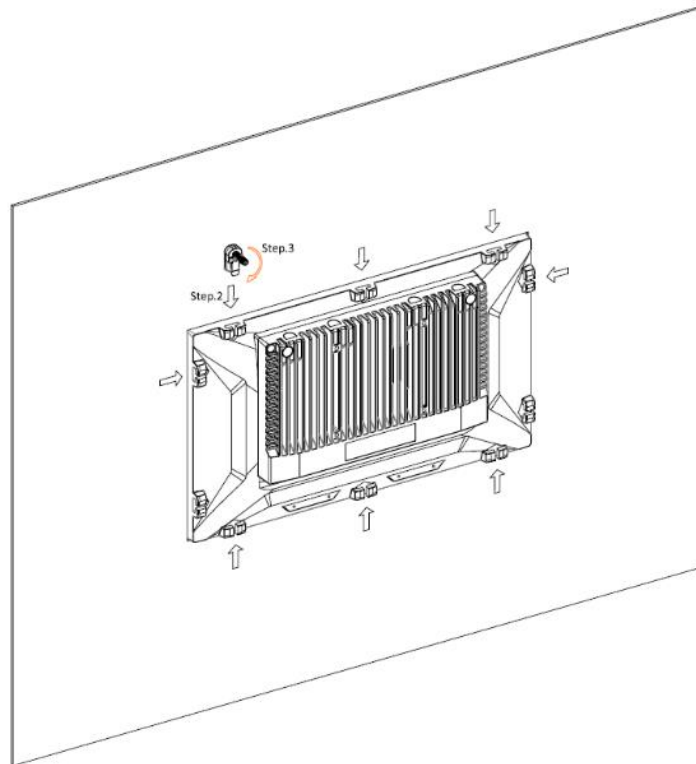


Figure 13 AUHMI-816B/AUHMI-821B Panel Mounting

1.10 Cable Cover

Due to mechanical limits, cable cover only fits 15.6" and 21.5" model.

Turn the two small brackets into two sides to separate from 15.6" and 21.5" printing.

Step1: Insert the cover via the two brackets onto machine.

Step2: Fix the cover with 2x M3x6 screws.


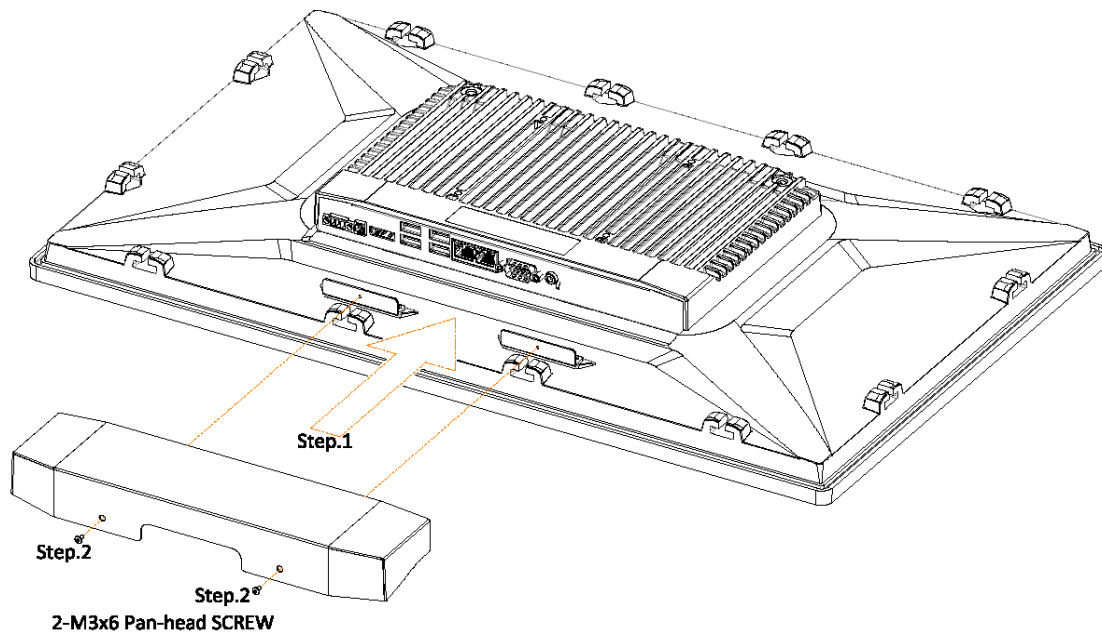



Figure 14 AUHMI-816B/AUHMI-821B Cable Cover Installation

1.11 Battery Kit Installation

Step1: Insert the battery kit to the MB box kit and screw it with 4pcs M3x6 screws.

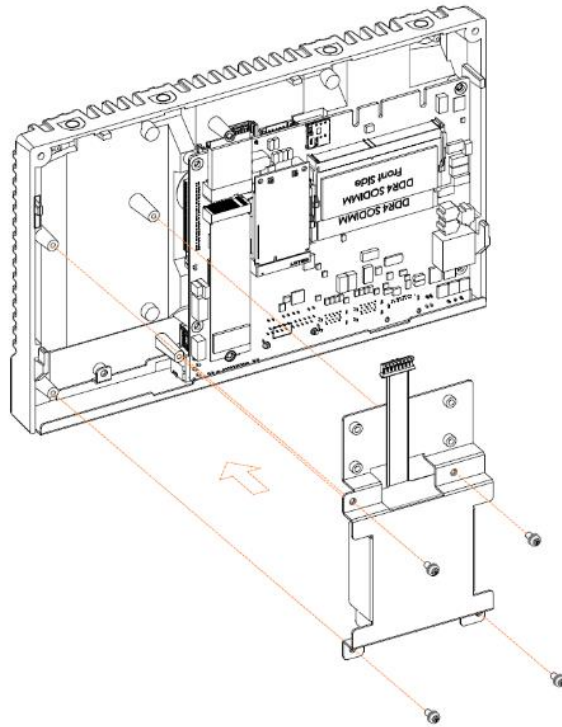

Step2: Connect the battery cable to the MB connector.

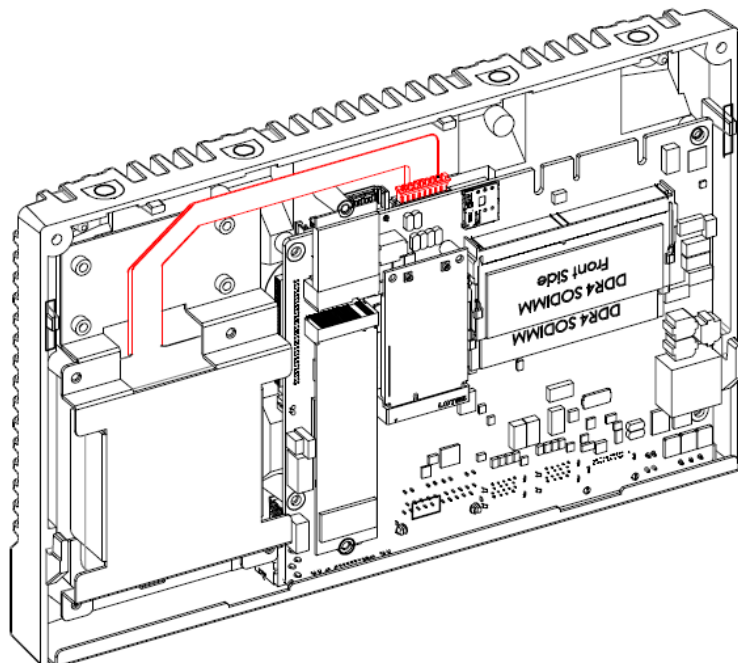

1.12 MB Box kit attaches to the Front Kit

This part fits for all 10.1", 15.6" and 21.5" models.

Step1: Insert the MB Box Kit to the Front Kit.

Step2: Use 2x M3x6 Pan-head screw to fix MB Box kit with Front kit at both left side and right side.

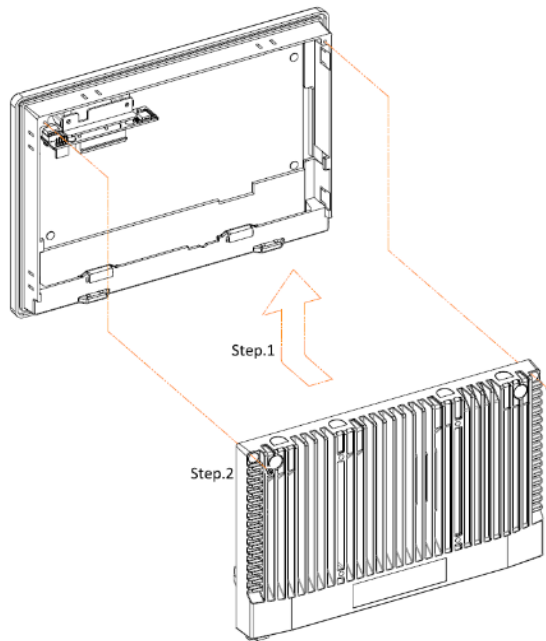


Figure 15 AUHMI-810B MB Box kit attaches to Front Kit

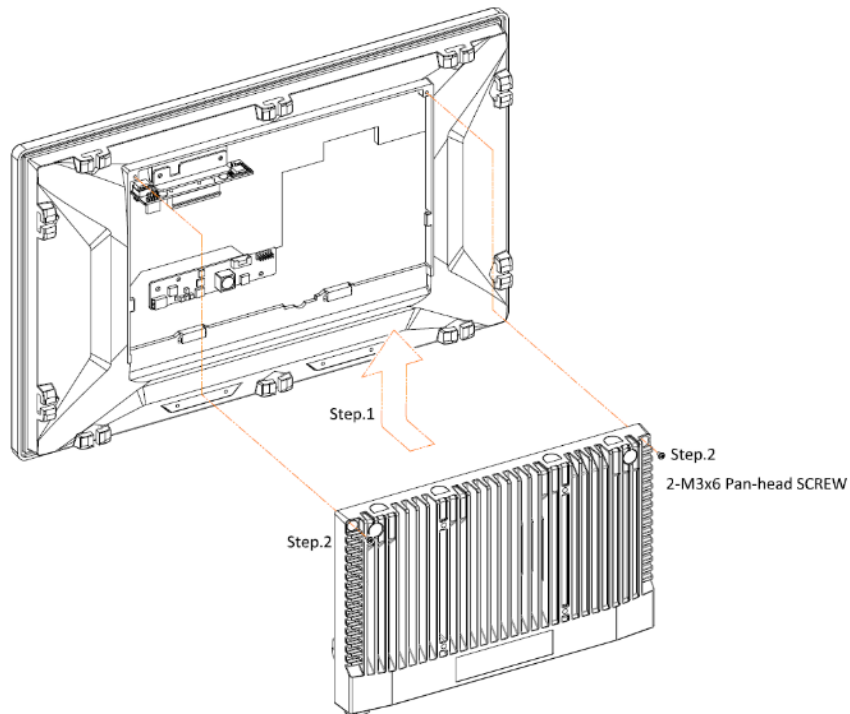


Figure 16 AUHMI-816B/821B MB Box kit attaches to Front Kit

1.13 Warning for separating AUHMI BOX PC

Step1: Recognize BOX PC is the blue one shown as picture above.

Step2: Separate the BOX PC from Front Kit slightly.

Step3: Separate successfully.

Note: It may cause the M.2 space copper pillar damage if separate roughly.

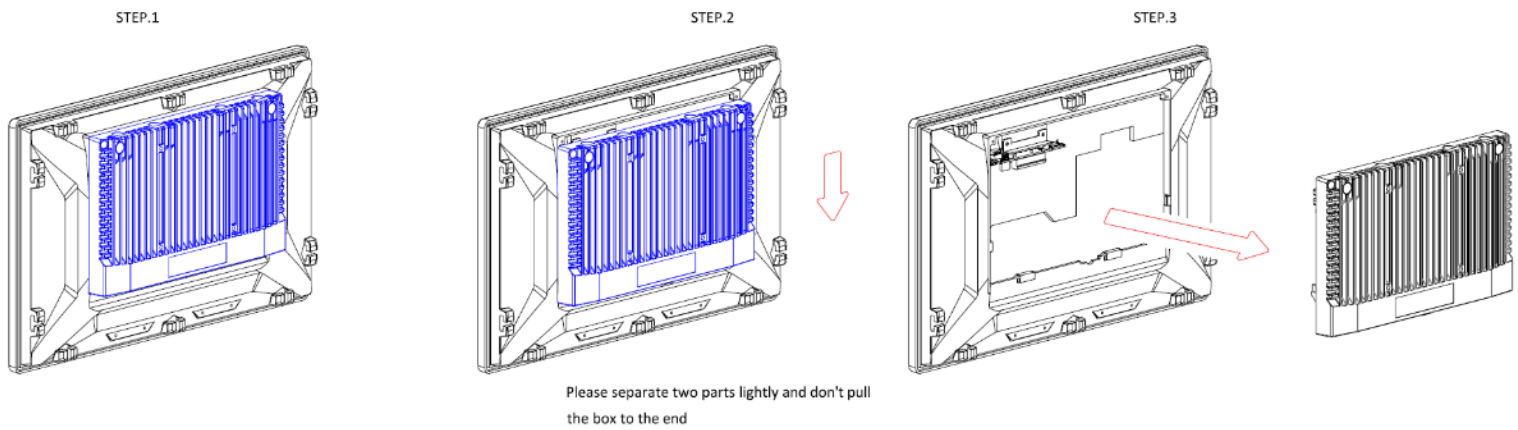


Figure 17 AUHMI-8XXB BOX PC separation warnings

SBC-7131 is a industrial motherboard developed on the basis of Intel Elkhart Lake, which provides abundant peripheral interfaces to meet the needs of different customers. Also, it features dual RJ45 connectors, 6-COM ports and one M.2 M-Key configuration, one DP/HDMI combo connector, one LVDS interface. To satisfy the special needs of high-end customers, 1 x M.2 E-Key slot and 1 x mini PCIe richer extension functions. The product is widely used in various sectors of industrial control.


2.1 Specifications

Chapter 3 Specifications	
Board Size	155mm x 125mm
CPU Support	Intel Celeron J6412 Processor, 2.0GHz up to 2.60GHz, 10W Intel Atom x6425E Processor, 2.0GHz up to 3.00GHz, 12W (option)
Chipset	SOC
Memory Support	1x SO-DIMM (260pins), up to 32GB DDR4 3200MT/s
Graphics	Integrated Intel UHD Graphics 400/800 MHz (J6412) Integrated Intel UHD Graphics 500/750 MHz (x6425E)
Front Panel Interface	1 x 64 Pin PCIe x4 gold finger, connect with front panel daughter board TB-616. Contains eDP/2xUSB2.0/Backlight Power & Control/Power LED/HDD LED.
Display Mode	1 x DisplayPort 1.4, DP++ via DP Port 1 x LVDS (18/24-bit dual LVDS)
Support Resolution	DP: support up to 4096 x 2160 @60Hz LVDS: support up to 1920 x 1200
BIOS	AMI/UEFI BIOS
Storage	1 x SATA III via 7pin SATA connector 1 x M.2 M-Key (SATA III), 2242 for Storage
Ethernet	2 x 10/100/1000/2.5GbE LAN via intel® I225-LM/I226-LM controller (PXE/WoL)
USB	2 x USB3.2 gen2/USB2.0, Type-A stack ports (USB3_1) 2 x USB2.0, Type-A stack ports (USB1) 2 x USB2.0 via pitch 2.0mm 2x5pin header (USB2)
Serial	1 x RS-232 (default)/422/485, signals select via BIOS (COM1),

	<p>pin9 RI(default)/5V/12V, select via JP1. (DB9, COM1)</p> <p>1 x RS-232 via pitch 2.0mm 2x5pin header, pin9</p> <p>RI(default)/5V/12V, select via JP2 (COM2)</p>
GPIO	<p>8-bit digital I/O by Pin header (GPIO1)</p> <p>4-bit digital Input</p> <p>4-bit digital Output</p>
Audio	<p>Support Audio via Realtek ALC888S-VD2 HD audio codec</p> <p>1x Line out via 3.5mm audio jack</p> <p>Support 2x2W speakers (SPKR1/SPKL1)</p> <p>Support Line-in,Line-out,MIC by 2x6-pin header</p>
Expansion Slots	<p>1 x M.2 B-Key(PCIe3.0 x1, USB3.2 gen1/USB2.0, SMBus),2242/3052 for 4G/5G and expansion modules</p> <p>1 x M.2 E-Key(PCIex1,USB2.0),2230 for WIFI/BT module</p> <p>1 x Pitch1.25mm 2x30pin female header for TB-528 series(CN2)</p> <p>-Contains 2 x USB 2.0/2 x UART/1 x PCIe2.0 x1/4 x GPIO/1 x SPI/1 x SMBus/1 x Power Button</p>
SIM	1x Nano-SIM slot (SIM1) for M.2_B1
FAN	1x 4pin fan connector
Watchdog Timer	Software programmable 1–255 level
TPM	<p>Onboard TPM IC Infineon_SLB9670AQ2.0</p> <p>Support fTPM, select via BIOS</p>
Switches and LED Indicators	<p>1 x Power on/off switch (BT1/BT2)</p> <p>1 x Reset (BT3)</p> <p>1 x Buzzer</p>
Battery	Support 3V RTC Li-battery via 2pin wafer (BAT1)
Power Management	Wide range DC 9~36V±10% power input via 2pin terminal block AT/ATX mode selectable
Smart battery & PoE Power Input	<p>1 x Smart battery / PoE Power Input (option)</p> <p>-Connect to smart battery charger board & PoE power input via pitch1.25mm DF13-30P</p> <p>-Support 3 Serial Li battery by 9-pin header (PB-434 R1.00/PB-434 R2.00)</p>
Temperature	<p>Operating: -20°C to 70°C</p> <p>Storage: -40°C to 85°C</p>
Humidity	10% - 90%, non-condensing, operating
Certifications	Meet

	CE/FCC class B UL RoHS2.0
--	---------------------------------


2.2 Board Dimensions

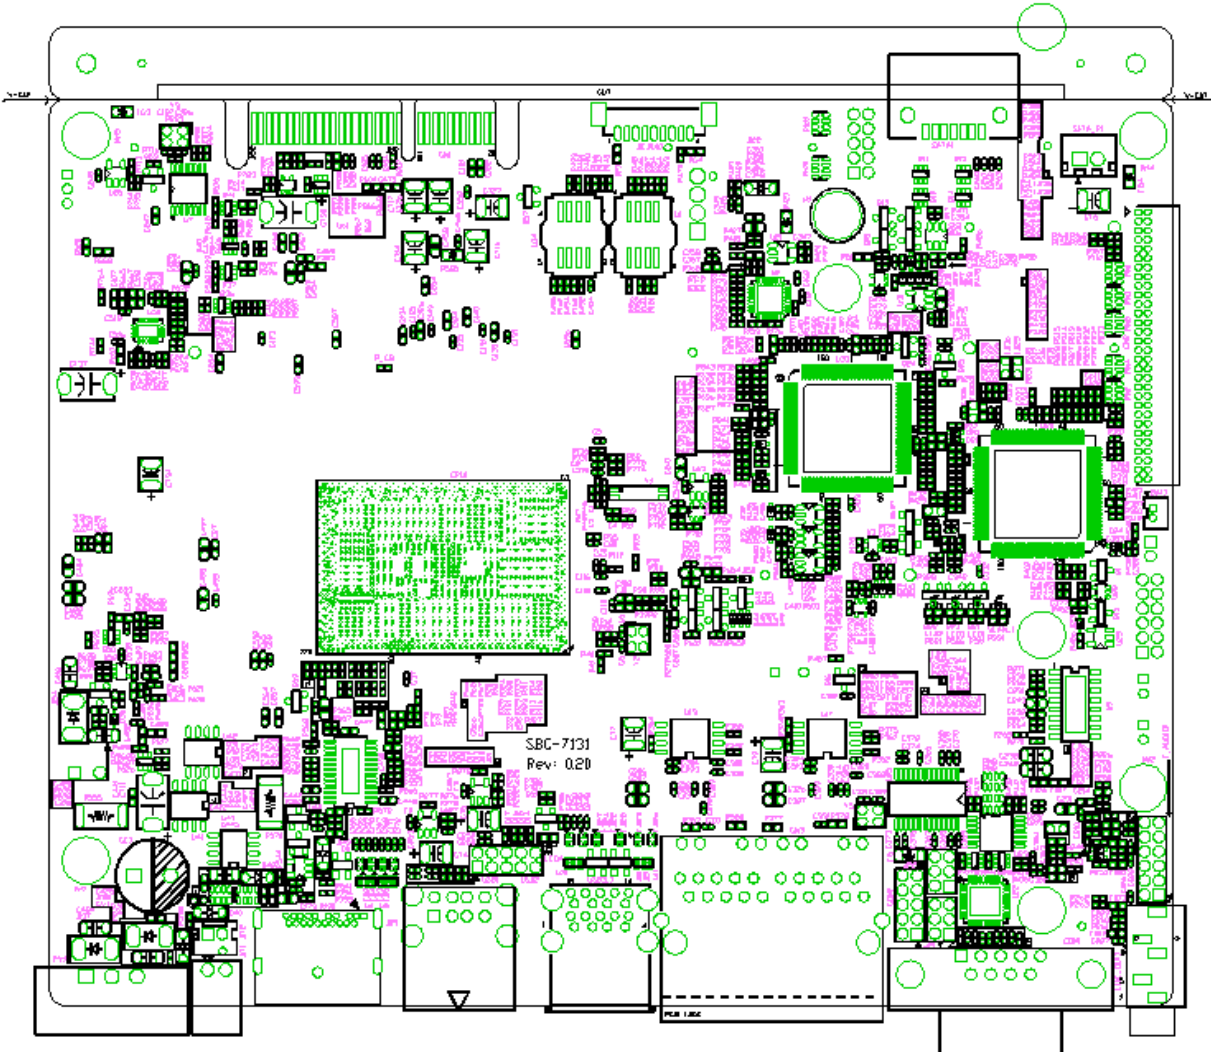


Dimensions: 155 x 125 (units :mm)

2.3 Jumpers and Connectors Location



Board Top

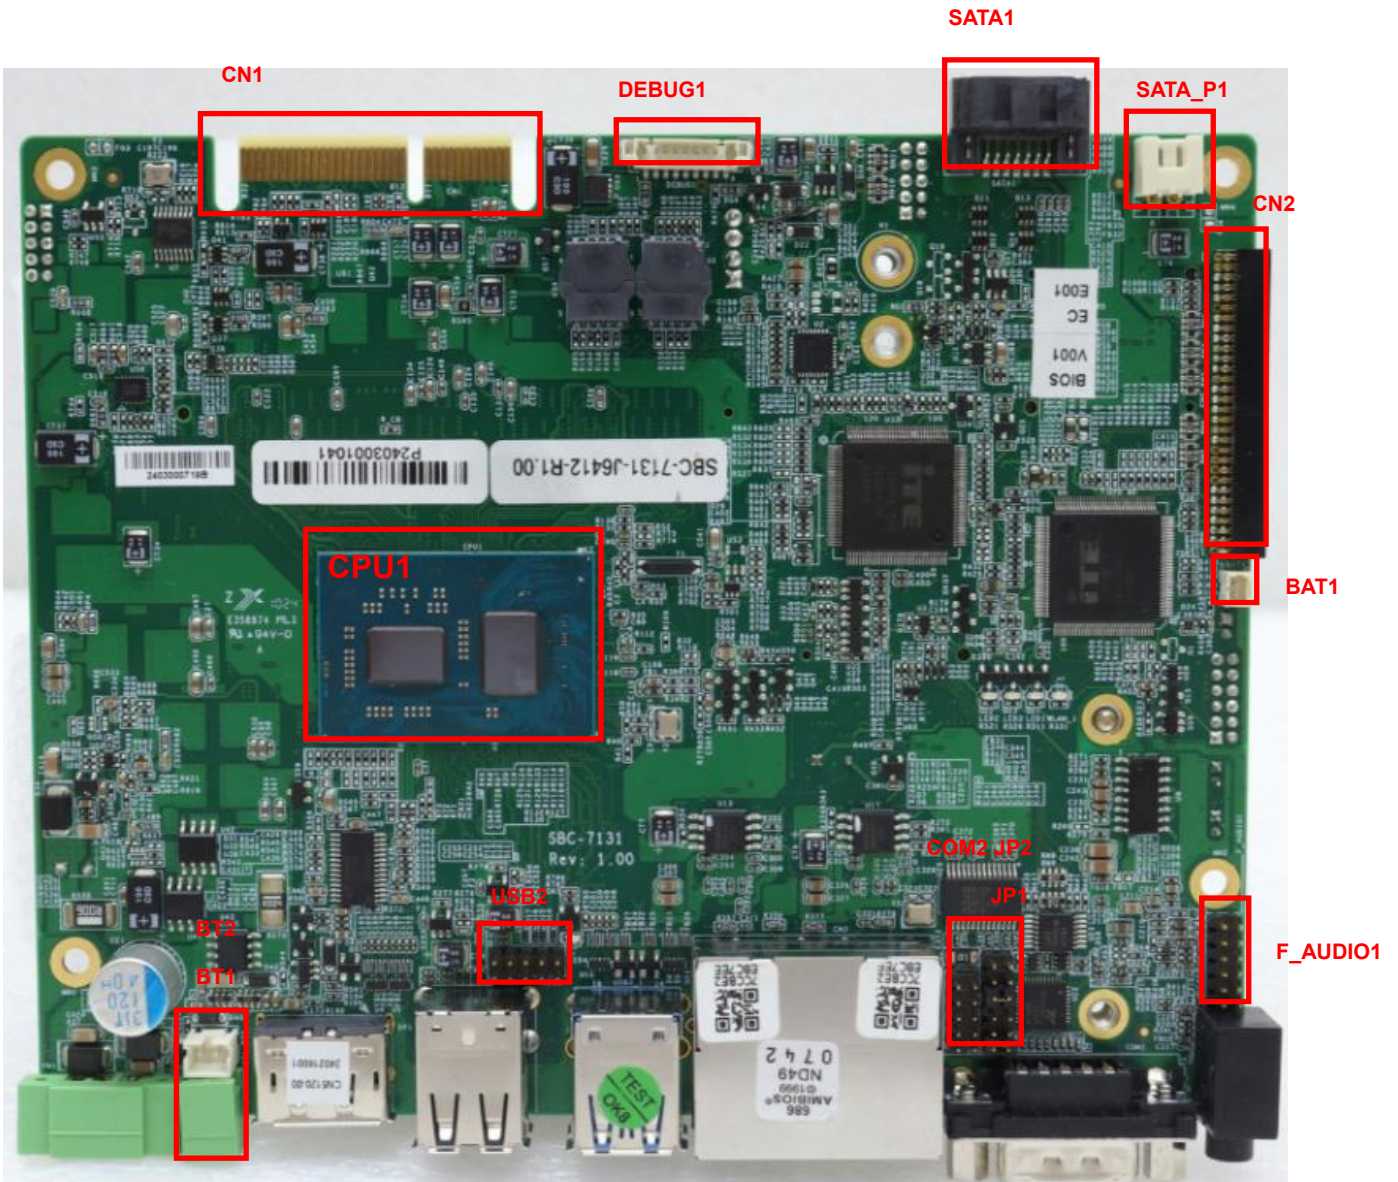

Board Bottom

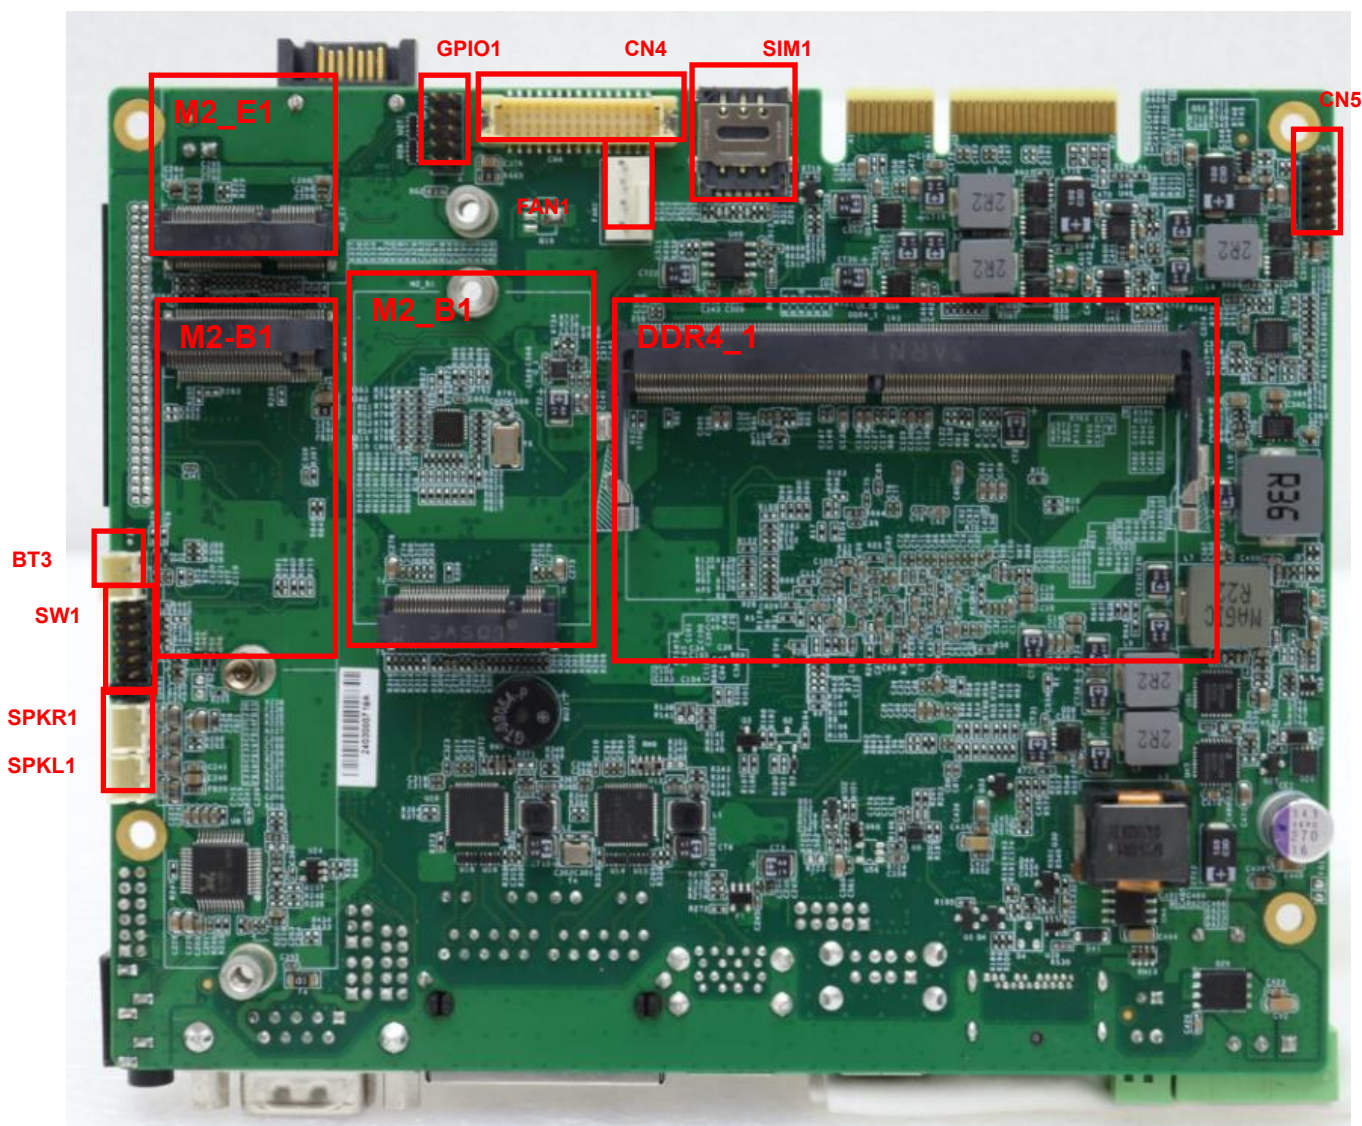

External IO

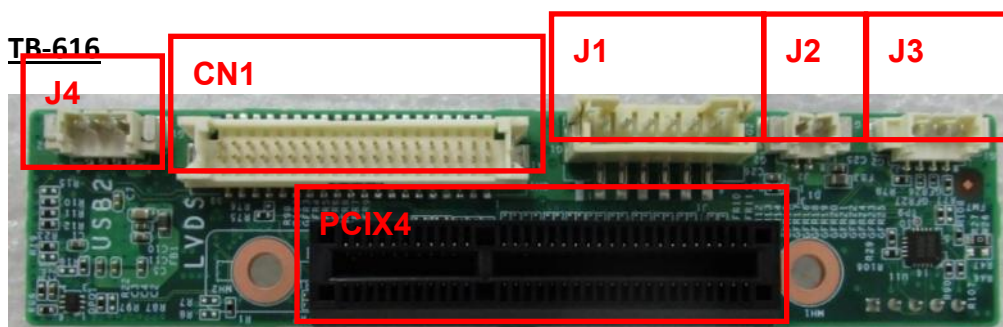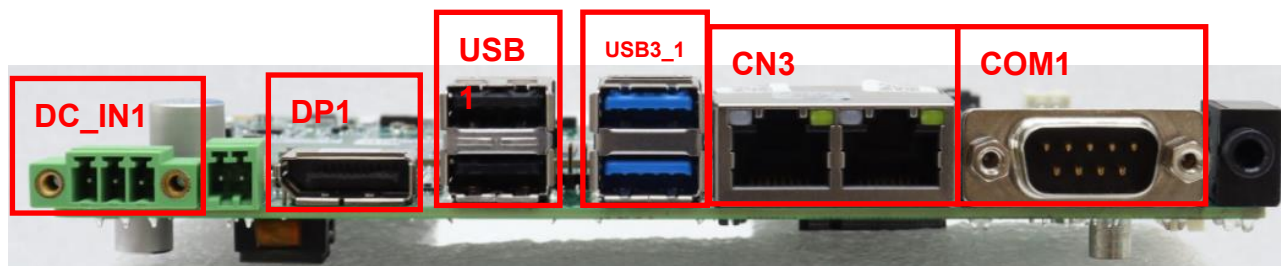

2.4 Jumpers Setting and Connectors

1. CPU1:

(FCBGA1493) Onboard Intel Elkhart Lake SoC

Model	SoC				
	Number	PBF	Cores/ Threads	TDP	Remarks
SBC-7131-J6412	J6412	2.0~2.6GHz	4 / 4	10W	Default
SBC-7131-X6425E	X6425E	2.0~3.0GHz	4 / 4	12W	Option

2. DDR4_1:

(SO-DIMM 260Pin slot) DDR4 memory socket, the socket is located at the top of the board and supports 260Pin 1.2V DDR4 SO-DIMM memory module up to 32GB.


Max Memory Size (dependent on memory type).

3. BAT1:

(1.25mm Pitch 1x2 wafer Pin Header) 3.0V Li battery is embedded to provide power for CMOS.

Pin#	Signal Name
Pin1	VCC_RTC
Pin2	GND

4. SW1:

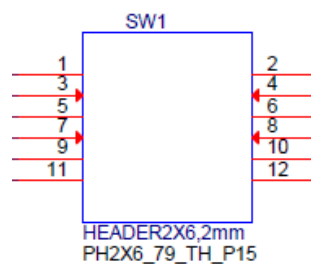

(2.00mm Pitch 2x6 Pin Header) Power mode and LVDS setting.

Switch	Open	Close
Pin1-2	Default, PWRBTN-ON	Auto-PSON
Pin3-4	ATX Mode	Default, AT Mode
Pin5-6	Default, Normal	Close 1sec to Clear CMOS
Pin7-8	Default, Normal	Write EDID
Pin9-10	Default, LVDS Dual CH.	LVDS Single CH.
Pin11-12	Default, LVDS 6 bit Signal	LVDS 8 bit Signal

CMOS clear switch, CMOS clear operation will permanently reset old BIOS settings to factory defaults.




Procedures of CMOS clear:

- a) Turn off the system and unplug the power cord from the power outlet.
- b) To clear the CMOS settings, close Pin5-6 for 1 second
- c) Power on the system again.
- d) When entering the POST screen, press the key to enter CMOS Setup Utility to load optimal defaults.
- e) After the above operations, save changes and exit BIOS Setup.

5. FAN1:

(2.54mm Pitch 1x4 Pin Header) Fan connector, cooling fans can be connected directly for use. You may set the rotation condition of cooling fan in menu of BIOS CMOS Setup.

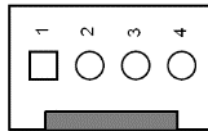

Pin#	Signal Name
1	GND
2	VCC(12V_S0)
3	CPU_FANTACH
4	CPU_FANPWM




Note:

Output power of cooling fan must be limited under 5W.

6. DC_IN1:

(3.50mm Pitch DINKLE_ ECH350RM-03P) DC9~36V system power input connector.

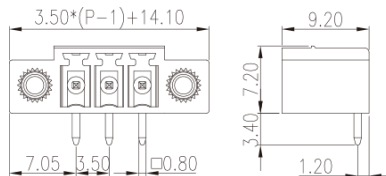

Pin#	Signal Name
Pin1	DC_IN+ (DC+9V~36V)
Pin2	DC_IN-

Pin3	FG
------	----

7. CN1:

(64 Pin PCIe x4 Gold Finger) Connector for daughter board TB-616. Contain eDP/2xUSB2.0/Backlight Power & Control/Power LED/HDD LED.

8. CN2:

(1.27mm Pitch 2x30 Female Header).For expand output connector, It provides four GPIO,two USB 2.0, one SPI, two Uart,one PClex1,one SMbus, connected to the TB-528 riser Card.

Function	Signal Name	Pin#		Signal Name	Function
	5V_S5	1	2	5V_S5	
	5V_S5	3	4	5V_S5	
	USB2_OC4_10-	5	6	PS_ON_ALL-	
USB9	USB9_N	7	8	USB9_P	USB9
USB2	USB2_N	9	10	USB2_P	USB2
	GND	11	12	GND	
SPI	IO_SPI_CLK	13	14	IO_SPI_MISO	SPI
	IO_SPI_CS0-	15	16	IO_SPI_MOSI	
COM4 (UART)	COM4_RI-	17	18	COM4_DCD-	COM4 (UART)
	COM4_TXD	19	20	COM4_RXD	
	COM4_DTR-	21	22	COM4_RTS-	
	COM4_DSR-	23	24	COM4_CTS-	
	GND	25	26	GND	
COM3 (UART)	COM3_RI-	27	28	COM3_DCD-	COM3 (UART)
	COM3_TXD	29	30	COM3_RXD	
	COM3_DTR-	31	32	COM3_RTS-	
	COM3_DSR-	33	34	COM3_CTS-	
GPIO	SIO_GP82	35	36	SIO_GP83	GPIO
	SIO_GP84	37	38	SIO_GP85	
	GND	39	40	GND	
PCIe1	PE6_TX_N0	41	42	PE6_TX_P0	PCIe1
	PE6_RX_N0	43	44	PE6_RX_P0	
	GND	45	46	GND	
	CLK_100M_PE4_N	47	48	CLK_100M_PE4_P	
	PM_PCIE_WAKE-	49	50	PLT_RST_BUF2-	
SMBus	SMB_CLK_S5	51	52	SMB_DATA_S5	SMBus
PCIe	CLKREQ_PE4-	53	54	Ground	
	3P3V_S5	55	56	FP-PWRBTN-	Power Auto on
	3P3V_S5	57	58	3P3V_S5	
	12V_S0	59	60	12V_S0	

9. CN4:

(1.25mm Pitch 2x15 Connector, DF13-30DP-1.25V) Connector for smart battery charger board PB-434 & PoE power input.

If you need technical support, please contact your sales or dealer window for technical support.

Signal Name	Pin#	Pin#	Signal Name
BAT_12V_S5	2	1	GND
BAT_12V_S5	4	3	GND
BAT_12V_S5	6	5	GND
BAT_12V_S5	8	7	GND
BAT_12V_S5	10	9	GND
BAT_12V_S5	12	11	12V_ALL
BAT_12V_S5	14	13	12V_ALL
GND	16	15	POE_ON
NC	18	17	ECH3_SEL_BAT1
FP_PWRBTN-	20	19	ECA1_CHG1_UP
3P3V_EC	22	21	ECH4_EN_CHG1
3P3V_EC	24	23	ECH5_EN_BAT1
SMB_DAT_BAT1	26	25	SMB_CLK_BAT1
VCC_BAT1	28	27	BAT1_TEMP-
VCC_BAT1	30	29	GND

10. CN5:

(2.00mm Pitch 2x6 Pin Header)

Signal Name	Pin#	Pin#	Signal Name
EC_SPI_CS-	1	2	3P3V_EC
EC_SPI_MSIO	3	4	NC
EC_SPI_CLK	5	6	MP2940_SCL
EC_SPI_MOSI	7	8	GND
GND	9	10	MP2940_SDA

11. DP1:



(DP Connector) DisplayPort Interface connector.

DisplayPort 1.4, DP++ support resolution up to 4096x2160@60Hz.

12. CN3:



(2 x RJ45 Connector) Provide 2.5GbE LAN via Intel® I226-LM.

13. LINE_OUT1:



Line out

(Diameter 3.5mm Jack) Provide line-out via onboard Realtek ALC888S codec.


14. F_AUDIO1:

(2.0mm Pitch 2x6 Pin Header) Provide line-in/line-out/mic-in via onboard Realtek ALC888S codec.

Signal Name	Pin#	Pin#	Signal Name
5V_S5	1	2	GND_AUD
LINE-OUT-L	3	4	LINE-OUT-R
FRONT_JD	5	6	LINE_JD
LINE-IN-L	7	8	LINE-IN-R
MIC-IN-L	9	10	MIC-IN-R
GND_AUD	11	12	MIC1_JD


15. USB3_1:

(Double stack USB typeA) Rear USB3.2 connector, provides up to 2 USB3.2 gen2/USB2.0 ports, USB3.2 gen2 allows data transfers up to 10.0Gbps.

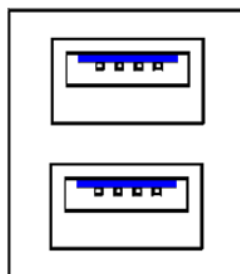

16. USB1:

(Double stack USB typeA) Rear USB2.0 connector, provides up to 2 USB2.0.

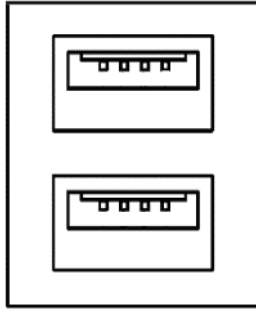


17. USB2:

(2.0mm Pitch 2x5 Pin Header) Provide 2xUSB2.0 signals.

Signal Name	Pin#	Pin#	Signal Name
5V_USB47	1	2	5V_USB47
USB4_N	3	4	USB7_N
USB4_P	5	6	USB7_P
GND	7	8	GND
GND	9	10	NC

18. COM1:

(DB9 connector) Provide serial RS232/422/485 via standard DB9 male connector. Default is set to RS232, RS422/485 can be selected via BIOS. Pin 9 RI/5V/12V select via JP1.

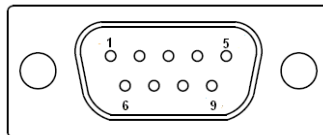

RS232 (Default):	
Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	GND
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	JP1 select Setting (RI/5V/12V)
BIOS Setup: Serial Port 1 Configuration 【RS-232】	

RS422 (option):	
Pin#	Signal Name
1	422_TX-
2	422_TX+
3	422_RX+
4	422_RX-
5	GND
6	NC
7	NC
8	NC
9	NC

BIOS Setup: Serial Port 1 Configuration 【RS-422】

RS485 (option):	
Pin#	Signal Name
1	485-
2	485+
3	NC
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC

BIOS Setup: Serial Port 1 Configuration 【RS-485】

19. JP1:

(2.0mm Pitch 2x3 Pin Header) For COM1 pin9 signal setting.

JP1 Pin#	Function
Close 1-2	COM1 Pin9 RI (Ring Indicator, Default)
Close 3-4	COM1 Pin9 = +5V
Close 5-6	COM1 Pin9 = +12V

20. COM2:

(2.0mm Pitch 2x5 Pin Header) Provide RS232, pin 9 RI/5V/12V select via JP2.

Signal Name	Pin#	Pin#	Signal Name
DCD	1	2	RXD
TXD	3	4	DTR

GND	5	6	DSR
RTS	7	8	CTS
RI/5V/12V via JP2	9	10	NC

21. JP2:

(2.0mm Pitch 2x3 Pin Header) For COM2 pin9 signal setting.

JP1 Pin#	Function
Close 1-2	COM2 Pin9 RI (Ring Indicator, Default)
Close 3-4	COM2 Pin9 = +5V
Close 5-6	COM2 Pin9 = +12V

22. GPIO1:

(2.0mm Pitch 2x5 Pin Header) Provide 8xGPIO(4xDI,4xDO) with 5V VCC.

Signal Name	Pin#	Pin#	Signal Name
5V_GPIO	1	2	GND
GPIO_IN1	3	4	GPIO_IN2
GPIO_IN3	5	6	GPIO_IN4
GPIO_OUT1	7	8	GPIO_OUT2
GPIO_OUT3	9	10	GPIO_OUT4

23. SKPR1/SPKL1:

(2.0mm Pitch 2 Pin Wafer Header) Provide speaker output, support up to 2x2W speaker.

SKPR1

Pin#	Signal Name
Pin1	OUTR+
Pin2	OUTR-

SKPL1

Pin#	Signal Name
Pin1	OUTL+
Pin2	OUTL-

24. BT1/BT2:

(2 Pin Connector) Provide connector for power button function.

BT1

(2.0mm Pitch 2 Pin Wafer Header)

Pin#	Signal Name
Pin1	FP_PWRBTN-
Pin2	GND

BT2

(2.5mm Pitch DINKLE_ECH250R-02P)



Pin#	Signal Name
Pin1	FP_PWRBTN-
Pin2	GND

25. BT3:

(2.0mm Pitch 2 Pin Wafer Header) Provide connector for system reset button function.

Pin#	Signal Name
Pin1	SYS_RST-
Pin2	GND

26. M2_B1:

(M.2 B-Key Socket) Support 2242/3052 wireless communication cards.

27. SIM1:

(Micro-SIM Slot) Support micro SIM card for M2_B1.

Pin#	Signal Name
1	NC
2	GND
3	SIMVCC
4	NC
5	SIM_RST
6	NC
7	SIM_IO
8	SIM_CLK

28. M2-B1:

(M.2 M-Key Socket) Support 2242/2280 SATA III interface SSD.

29. M2_E1:

(M.2 E-Key Socket) Provide USB2.0/PClex1, support E-key 2230 WiFi/BT expansion cards. Status LED is supported via green LED M2E_WLAN_LED.

30. SATA1:

(SATA 7Pin) SATA connector provide SATA III signal for storages.

31. SATA_P1:

(2.5mm Pitch 1x2 Wafer Pin Header) 5V power supply for SATA1 port device.

Pin#	Signal Name
1	5V_S0
2	GND




Note:

Output current of the connector must not be above 1A.

2.5 Daughter Boards (Options)

1. PB-434 R1.00:

This is the smart battery charger board. The size of this board is: 60 x 30mm.

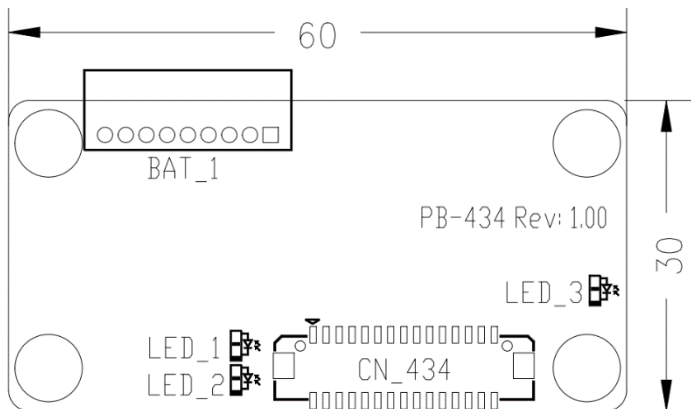

CN_434:

(1.25mm Pitch, DF13-30P), Connect the CN_434 Connector of PB-434 R1.00 to the CN434 connector of SBC-7131.

Signal Name	Pin#	Pin#	Signal Name
13V+BAT_S5	2	1	Ground
13V+BAT_S5	4	3	Ground

13V+BAT_S5	6	5	Ground
13V+BAT_S5	8	7	Ground
13V+BAT_S5	10	9	Ground
13V+BAT_S5	12	11	13V_12V_DC
13V+BAT_S5	14	13	13V_12V_DC
Ground	16	15	POE_ON
RSV	18	17	RSV
FP_PWRBTN-	20	19	ECA1_CHG1_UP
3P3V_ALLS	22	21	ECH4_EN_CHG1
3P3V_ALLS	24	23	ECH5_EN_BAT1
SMB_DAT_BAT1	26	25	SMB_CLK_BAT1
VCC_BAT1	28	27	BAT1_TEMP-
VCC_BAT1	30	29	Ground

BAT_1:

(1.25mm Pitch 1x9 Pin Header). Connection to 3S1P Smart Battery charger.

Pin#	Signal Name	Remarks
1	VCC_BAT1	Voltage: DC12.6V
2	VCC_BAT1	
3	VCC_BAT1	
4	SMB_DAT_CN1	
5	SMB_CLK_CN1	
6	BAT1_TEMP-	
7	Ground	
8	Ground	
9	Ground	

Function	Specifications
Nominal voltage (3S1P)	11.1~12.6V
Charge voltage	12.6V
Charge current	0.5C

LED_1 STATUS. Green LED for CHG1_STAT1 status.

LED_2 STATUS. Blue LED for CHG1_STAT2 status.

LED_3 STATUS. Green LED for 3P3V_BAT status.

2. PB-434 R2.00:

This is the smart battery charger board. The size of this board is: 90 x 20mm.

CN_434:

(1.25mm Pitch, DF13-30P), Connect the CN_434 Connector of PB-434 R2.00 to the CN434 connector of SBC-7131.

Signal Name	Pin#	Pin#	Signal Name
13V+BAT_S5	2	1	Ground
13V+BAT_S5	4	3	Ground
13V+BAT_S5	6	5	Ground
13V+BAT_S5	8	7	Ground
13V+BAT_S5	10	9	Ground
13V+BAT_S5	12	11	13V_12V_DC
13V+BAT_S5	14	13	13V_12V_DC
Ground	16	15	POE_ON
RSV	18	17	RSV
FP_PWRBTN-	20	19	ECA1_CHG1_UP
3P3V_ALLS	22	21	ECH4_EN_CHG1
3P3V_ALLS	24	23	ECH5_EN_BAT1
SMB_DAT_BAT1	26	25	SMB_CLK_BAT1
VCC_BAT1	28	27	BAT1_TEMP-
VCC_BAT1	30	29	Ground

BAT_1:

(1.25mm Pitch 1x9 Pin Header). Connection to 3S1P Smart Battery charger.

Pin#	Signal Name	Remarks
1	VCC_BAT1	BAT1 Voltage: 12.6V
2	VCC_BAT1	
3	VCC_BAT1	
4	SMB_DAT_CN1	
5	SMB_CLK_CN1	
6	BAT1_TEMP-	
7	Ground	
8	Ground	
9	Ground	

Function	Specifications
Nominal voltage (3S1P)	11.1~12.6V
Charge voltage	12.6V
Charge current	0.5C

LED_1 STATUS. Green LED for CHG1_STAT1 status.

LED_2 STATUS. Blue LED for CHG1_STAT2 status.

LED_3 STATUS. Green LED for 3P3V_BAT status.

3. TB-616:

This is the front panel daughter board. The size of this board is: 90 x 20 mm.

PCIX4:

(64 Pin PCIe x4 Socket) Connector to SBC-7131. Contain eDP/2xUSB2.0/Backlight Power & Control/Power LED/HDD LED from SBC-7131.

CN1:

(1.25mm Pitch 2x20 Connector, DF13-40DP),for 18/24-bit LVDS output connector.

Signal Name	Pin#		Signal Name
12V	2	1	12V
BKLT_EN_OUT	4	3	BKLT_CTRL
GND	6	5	GND
LVDS_VDD5	8	7	LVDS_VDD5
LVDS_VDD3	10	9	LVDS_VDD3
GND	12	11	GND
LA_D0_P	14	13	LA_D0_N
LA_D1_P	16	15	LA_D1_N
LA_D2_P	18	17	LA_D2_N
LA_D3_P	20	19	LA_D3_N
LA_CLKP	22	21	LA_CLKN
LB_D0_P	24	23	LB_D0_N
LB_D1_P	26	25	LB_D1_N
LB_D2_P	28	27	LB_D2_N
LB_D3_P	30	29	LB_D3_N
LB_CLKP	32	31	LB_CLKN
GND	34	33	CN_EDP_HPD
40P_USB_P	36	35	40P_USB_N
5V	38	37	LVDS_DDC_DATA
SUS_LED#	40	39	LVDS_DDC_CLK

J1:

(2.00mm Pitch 6pin Wafer Header),for LCD backlight.

Pin#	Signal Name
1	12V
2	12V
3	GND

4	GND
5	PANEL_EN
6	PANEL_BKTCTRL

J2:

(1.25mm Pitch 2pin Wafer Header),for ambient light sensor.

Pin#	Signal Name
1	GND
2	ALS

J3:

(1.25mm Pitch 4pin Wafer Header),provides system & HDD LED.

Pin#	Signal Name
1	3.3V
2	SUS_LED
3	HD_LED
4	3.3V

J4:

(1.25mm Pitch 4pin Wafer Header),provides 1 x USB2.0.

Pin#	Signal Name
1	5V
2	USB2_DP8
3	USB2_DN8
4	GND

J5:

(2.00mm Pitch 1x5pin Header),for MCU FW programing


Pin#	Signal Name
1	GND
2	EC_RST
3	TICECLK
4	TICEDAT
5	5V

2.6 M.2 Slot Installation

1. M.2 Module installation

Before installing the M.2 module into the M.2 socket, please make sure that the following safety cautions are well-attended.


1. Make sure the PC and all other peripheral devices connected to it has been powered down.
2. Disconnect all power cords and cables.
3. Locate the M.2 socket on the system board
4. Make sure the notch on card is aligned to the key on the socket.
5. Make sure the standoff screw is removed from the standoff.

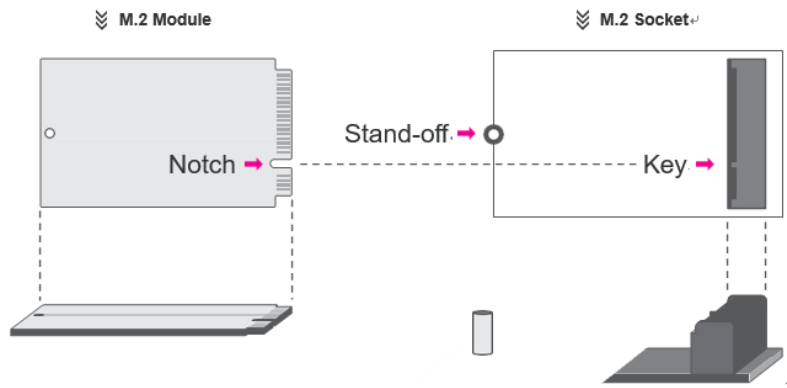

Please follow the steps below to install the card into the socket


Step 1:

Insert the card into the socket at an angle while making sure the notch and key are perfectly aligned.

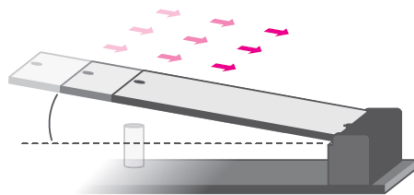


Step 2:

Press the end of the card far from the socket down until against the stand-off.

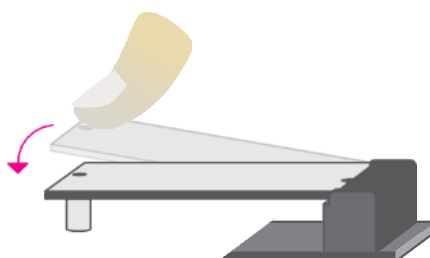


Step 3:

Screw tight the card onto the stand-off with a screw driver and a stand-off screw until the gap between the card and the stand-off closes up. The card should be lying parallel to the board when it's correctly mounted.

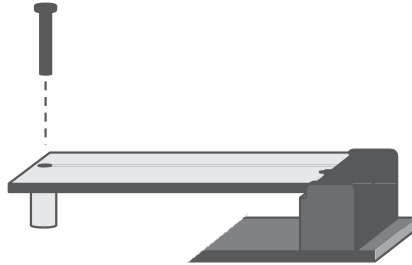

2. M.2 Storage Installation

If you would like to installation M.2 2242 by yourself, please remove one screw from 2280 screw stack, and install this screw to M.2 2242. To keep the storage on the horizontal status, and **keep from the storage parts interfering in the MB parts.**

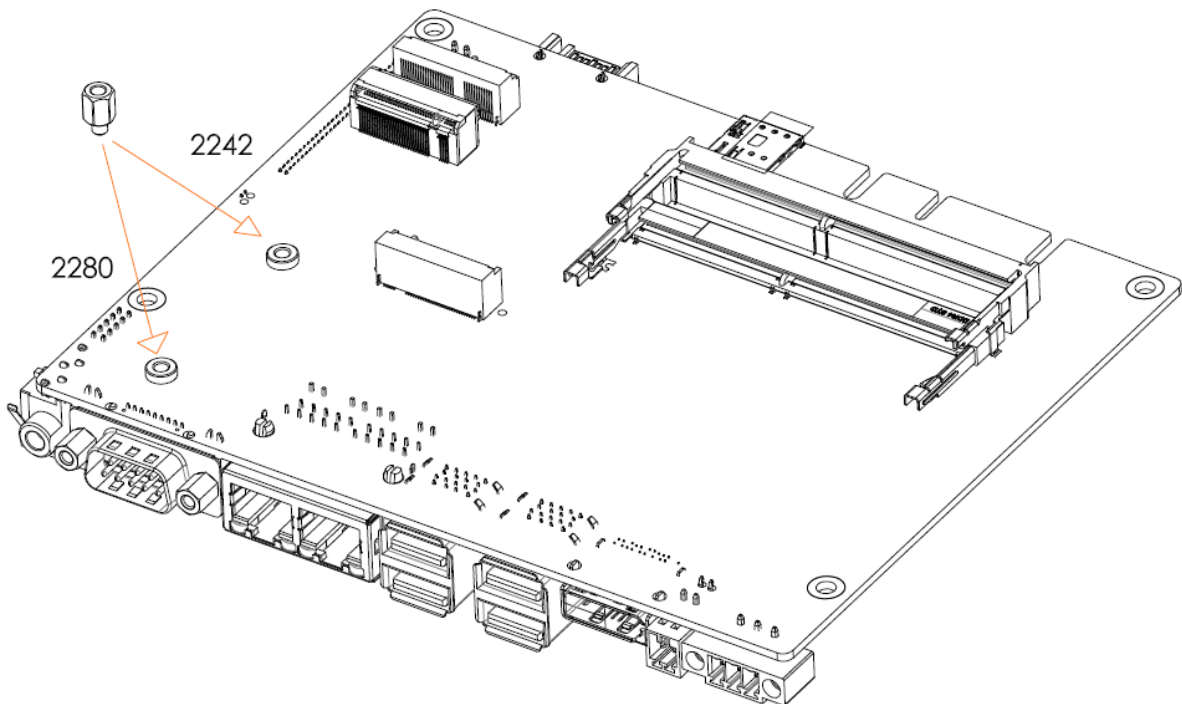

Chapter 3 BIOS Setup Description

3.1 Operations after POST Screen

After CMOS discharge or BIOS flashing operation. Press [Delete] key to enter CMOS Setup.



After optimizing and exiting CMOS Setup

3.2 BIOS SETUP UTILITY

Press [Delete] key to enter BIOS Setup utility during POST, and then a main menu containing system summary information will appear.

3.3 Main Settings

Aptio Setup - AMI					
Main	Advanced	Chipset	Security	Boot	Save & Exit
BIOS Information				Choose the system default language	
Project Version	7131V001				
EC VERSION	7131E210				
Build Date and Time	06/14/2023 16:22:58				
Compute Die Information					
Name	Elkhart Lake ULX				
Type	Intel Atom(R)				
X6425E					
	Processor		@		
2.00GHz					
Speed	2000MHz				
Number of Processors	4Core(s) / 4 Thread(s)				
Total Memory	8192 MB		→←: Select Screen		
Memory Date Rate	2400 MTPS		↑↓ : Select Item		
System Language	[English]		Enter : Select		
System Date	[Fri 01/01/2021]		+/- : Change Opt.		
System Time	[00:12:29]		F1 : General Help		
			F2 : Previous Values		
			F3 : Optimized Defaults		
			F4 : Save and Exit		
			ESC : Exit		
Version 2.22.1282. Copyright (C) 2023 AMI					

System Time:

Set the system time, the time format is:

Hour : 0 to 23

Minute : 0 to 59

Second : 0 to 59

System Date:

Set the system date, the date format is:


Day: Note that the 'Day' automatically changes when you set the date.

Month: 01 to 12

Date: 01 to 31

Year: 1998 to 2099

3.4 Advanced Settings

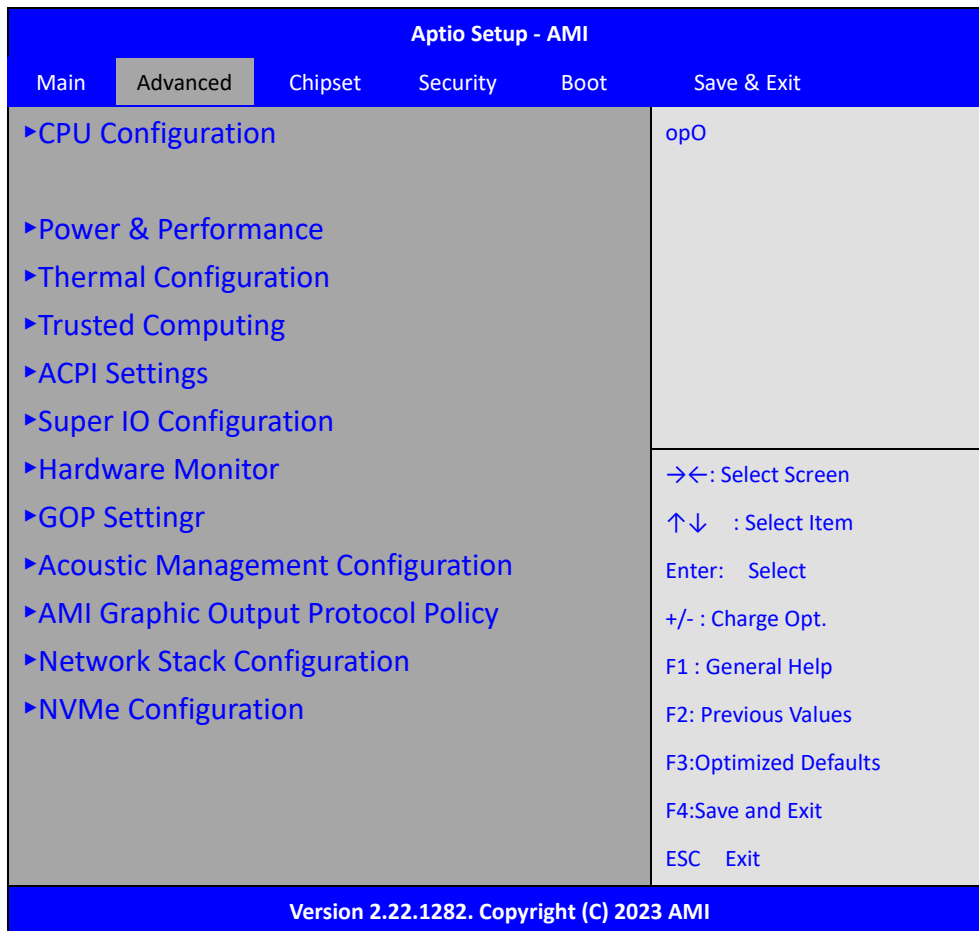

3.4.1 CPU Configuration

CPU Configuration

Type	Intel(R) Celeron(R) J6412 @ 2.00GHz
ID	0x90661
Speed	2000 MHz
L1 Data Cache	32 KB x 4
L1 Instruction Cache	32 KB x 4
L2 Cache	1536 KB x 4
L3 Cache	4 MB
L4 Cache	N/A
VMX	Supported
SMX/TXT	Not Supported

CPU Flex Ratio Override:

[Disabled]

[Enabled]

CPU Flex Ratio Settings

20

Hardware Prefetcher:

	[Disabled]
	[Enabled]
Intel (VNX) Virtualization Technology:	[Disabled]
	[Enabled]
PECI:	[Disabled]
	[Enabled]
Active Processor Cores:	[ALL]
	[1]
	[2]
	[3]
BIST:	[Disabled]
	[Enabled]
AP threads Idle Manner:	[HALT Loop]
	[MWAIT Loop]
	[RUN Loop]
AES:	[Disabled]
	[Enabled]
MachineCheck:	[Disabled]
	[Enabled]
MonitorMWait:	[Disabled]
	[Enabled]
CPU SMM Enhancement	
CPU SMM Enhancement	
SMM Use Delay Indication:	[Disabled]
	[Enabled]
SMM Use Block Indication:	[Disabled]
	[Enabled]
SMM Use SMM en-US Indication:	[Disabled]
	[Enabled]

#AC Split Lock:

[Enabled]

[Disabled]

3.4.2 Power & Performance

Power & Performance

CPU – Power Management Control

CPU – Power Management Control

P0 Fused Max Core Ratio N/A

P1 Fused Max Core Ratio N/A

P2 Fused Max Core Ratio N/A

P3 Fused Max Core Ratio N/A

Boot performance mode:

[Max Battery]

[Max Non-Turbo Performance]

[Turbo Performance]

Intel (R) SpeedStep(tm):

[Disabled]

[Enabled]

Race To Halt (RTH):

[Disabled]

[Enabled]

Intel (R) Speed Shift Technology:

[Disabled]

[Enabled]

HWP Autonomous EPP Grouping:

[Disabled]

[Enabled]

EPB override over PECC:

[Disabled]

[Enabled]

HWP Fast MSR Support:

[Disabled]

[Enabled]

HDC Control:

[Disabled]

[Enabled]

Turbo Mode:

[Disabled]

[Enabled]

View/Configure Turbo Options

Current Turbo Settings

Max Turbo Power Limit	4095.875
Min Turbo Power Limit	0.0
Package TDP Limit	10.0
Power Limit 1	10.0
Power Limit 2	20.0
1-core Turbo Ratio	26
2- core Turbo Ratio	26
3- core Turbo Ratio	26
4- core Turbo Ratio	26

Energy Efficient P-state:

[Disabled]

[Enabled]

Package Power Limit MSR Lock:

[Disabled]

[Enabled]

Power Limit 1 Override:

[Disabled]

[Enabled]

Power Limit 2 Override:

[Disabled]

[Enabled]

Power Limit 2	0
1-Core Ratio Limit Override	26
2-Core Ratio Limit Override	26
3-Core Ratio Limit Override	26
4-Core Ratio Limit Override	26

Energy Efficient Turbo:

[Disabled]

[Enabled]

CPU VR Settings

CPU VR Ssttings

PSYS Slope	0
PSYS Offset	0

PSYS Prefix:

[+]

[-]

PSYS PMax Power	0
Acoustic Noise Settings	
Acoustic Noise Settings	
Acoustic Noise Mitigation:	
	[Disabled]
	[Enabled]
Vccln VR Domain	
Disable Fast PKG C State Ramp for Vccln Domain:	
	[FALSE]
	[TRUE]
Slow Slew Rate for Vccln Domain:	
	[Fast/2]
	[Fast/4]
	[Fast/8]
	[Fast/16]
Vccln VR Settings	
Vccln VR Domain	
VR Config Enable:	
	[Disabled]
	[Enabled]
AC Loadline	880
DC Loadline	860
PS Current Threshold1	0
PS Current Threshold2	0
PS Current Threshold3	0
PS3 Enable:	
	[Disabled]
	[Enabled]
PS4 Enable:	
	[Disabled]
	[Enabled]
IMON Slope	100
IMON Offset	1
IMON Prefix	[+]
VR Current Limit	90
TDC Enable:	
	[Disabled]
	[Enabled]
TDC Current Limit	112
TDC Time Window:	

	[1 ms]
	[2 ms]
	[3 ms]
	[4 ms]
	[5 ms]
	[6 ms]
	[7 ms]
	[8 ms]
	[9 ms]
	[10 ms]
TDC Lock:	
	[Disabled]
	[Enabled]
RFI Settings	
RFI Domain	
RFI Current Frequency	139.200MHz
RFI Frequency	0
RFI Spread Spectrum	15
Platform PL1 Enable:	
	[Disabled]
	[Enabled]
Platform PL2 Enable:	
	[Disabled]
	[Enabled]
Power Limit 4 Override:	
	[Disabled]
	[Enabled]
C states:	
	[Disabled]
	[Enabled]
Enhanced C-states:	
	[Disabled]
	[Enabled]
C-state Auto Demotion	[C1]
C-state Un-demotion	[C1]
Package C-State Demotion:	
	[Disabled]
	[Enabled]
Package C-State Un-demotion:	
	[Disabled]

	[Enabled]
CState Pre-Wake:	
	[Disabled]
	[Enabled]
IO MWAIT Redirection:	
	[Disabled]
	[Enabled]
Package C State Limit	[C3]
C6/C7 Short Latency Control(MSR 0x60B)	
Time Unit	[1024 ns]
Latency	0
C6/C7 Short Latency Control(MSR 0x60C)	
Time Unit	[1024 ns]
Latency	0
C8 Latency Control(MSR 0x633)	
Time Unit	[1024 ns]
Latency	0
C9 Latency Control(MSR 0x634)	
Time Unit	[1024 ns]
Latency	0
C10 Latency Control(MSR 0x635)	
Time Unit	[1024 ns]
Latency	0
Thermal Monitor:	
	[Disabled]
	[Enabled]
Interrupt Redirection Mode Selection:	
	[Fixed Priority]
	[Round robin]
	[Hash Vector]
	[No Change]
Timed MWAIT:	
	[Disabled]
	[Enabled]
Custom P-state Table	
Custom P-state Table	
Number of P states	0
EC Turbo Control Mode:	
	[Disabled]
	[Enabled]
Energy Performance Gain:	

	[Disabled]
	[Enabled]
EPG DIMM Idd3N	26
EFG DIMM Idd3P	11
Power Limit 3 Settings	
CPU Lock Configuration	
CFG Lock:	[Disabled]
	[Enabled]
Overclocking Lock:	[Disabled]
	[Enabled]

GT – Power Management Control

GT – Power Management Control

Maximum GT frequency:

[Default Max Frequency]

[100Mhz]

[150Mhz]

[200Mhz]

[250Mhz]]

[300Mhz]

[350Mhz]

[400Mhz]

[450Mhz]

[500Mhz]

[550Mhz]

[600Mhz]

[650Mhz]

[700Mhz]

[750Mhz]

[800Mhz]

[850Mhz]

[900Mhz]

[950Mhz]

[1000Mhz]

[1050Mhz]

[1100Mhz]

[1150Mhz]

[1200Mhz]

Disable Turbo GT frequency:

[Enabled]

[Disabled]

3.4.3 Thermal Configuration

Thermal Configuration

Enable All Thermal Funcations:

[Disabled]

[Enabled]

CPU Thermal Configuration

Cpu Thermal Configuration

DTS SMM:

[Disabled]

[Enabled]

[Critical Temp Reporting(Out of

spec)]

Tcc Activation Offset

25

Tcc Offset Time Window:

[Disabled]

[5ms]

[10 ms]

[55 ms]

[156 ms]

[375 ms]

[500 ms]

[750 ms]

[1 sec]

[2 sec]

[3 sec]

[4 sec]

[5 sec]

[6 sec]

[7 sec]

[8 sec]

[10 sec]

[12 sec]

[14 sec]

[16 sec]

[20 sec]

[24 sec]

[28 sec]

[32 sec]

[40 sec]

[48 sec]

[56 sec]
[64 sec]
[80 sec]
[96 sec]
[112 sec]
[128 sec]
[160 sec]
[192 sec]
[224 sec]
[256 sec]
[320 sec]
[384 sec]
[448 sec]

Tcc Offset Clamp Enable:

[Disabled]
[Enabled]

Tcc Offset Lock Enable:

[Disabled]
[Enabled]

Bi-directional PROCHOT#:

[Disabled]
[Enabled]

Disable PROCHOT# Output:

[Disabled]
[Enabled]

Disable VR Thermal Alert:

[Disabled]
[Enabled]

PROCHOT Response:

[Disabled]
[Enabled]

PROCHOT Lock:

[Disabled]
[Enabled]

ACPI T-States:

[Disabled]
[Enabled]

Platform Thermal Configuration

Platform Thermal Configuration

Critical Trip Point:

[15 C]
[23 C]
[31 C]
[39 C]
[47 C]
[55 C]
[63 C]
[71 C]
[79 C]
[87 C]
[95 C]
[100 C]
[103 C]
[111 C]
[119 C (POR)]
[127 C]
[130 C]

Active Trip Point 0:

[Disabled]
[15 C]
[23 C]
[31 C]
[39 C]
[47 C]
[55 C]
[63 C]
[71 C]
[79 C]
[87 C]
[95 C]
[103 C]
[111C]
[119 C (POR)]

Active Trip Point 0 Fan Speed: 100

Active Trip Point 1:

[Disabled]
[15 C]
[23 C]
[31 C]
[39 C]
[47 C]
[55 C]

	[63 C]
	[71 C]
	[79 C]
	[87 C]
	[95 C]
	[103 C]
	[111C]
	[119 C (POR)]
Active Trip Point 1 Fan Speed:	75
Passive Trip Point :	
	[Disabled]
	[15 C]
	[23 C]
	[31 C]
	[39 C]
	[47 C]
	[55 C]
	[63 C]
	[71 C]
	[79 C]
	[87 C]
	[95 C]
	[103 C]
	[111C]
	[119 C (POR)]
Passive TC1 Value	1
Passive TC2 Value	5
Passive TSP Value	10
Active Trip Points:	
	[Disabled]
	[Enabled]
Passive Trip Points:	
	[Disabled]
	[Enabled]
CriticalTrip Points:	
	[Disabled]
	[Enabled]
PCH Temp Read:	
	[Disabled]
	[Enabled]

CPU Energy Read: [Disabled]
[Enabled]

CPU Temp Read: [Disabled]
[Enabled]

Alert Enable Lock: [Disabled]
[Enabled]

CPU Temp 72
CPU Fan Speed 65

DPTF Configuration

DPTF Configuration

Hardware Health Monitor

Hardware Health Monitor

Thermal Sensor 1 Temp 0.0 C
Thermal Sensor 2 Temp 0.0 C
Thermal Sensor 3 Temp 0.0 C
Thermal Sensor 4 Temp 0.0 C
CPU Fan Speed 0 rpm

3.4.4 Trusted Computing

Configuration

Security Device Support: [Disabled]
[Enabled]

NO Security Device Found

3.4.5 ACPI Settings

ACPI Settings

Enable Hibernation: [Disabled]
[Enabled]

ACPI Sleep State: [Suspend]
[S3 (Suspend to RAM)]

3.4.6 Super IO Configuration

Super IO Configuration

Super IO Chip	IT8786
Serial Port 1 Configuration	
Serial Port 1 Configuration	
Serial Port:	[Disabled] [Enabled]
Device Settings	IO=3F8h; IRQ=4;
Change Settings:	[Auto] [IO=3F8h; IRQ=4] [IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;] [IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;] [IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;] [IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;]
COM1 Config:	[RS232 mode] [RS485 mode] [RS422 mode]
Serial Port 2 Configuration	
Serial Port 2 Configuration	
Serial Port:	[Disabled] [Enabled]
Device Settings	IO=2F8h; IRQ=4;
Change Settings:	[Auto] [IO=2F8h; IRQ=4] [IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;] [IO=2F8h; IRQ=3,4,5,6,7,10,11,12;] [IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;] [IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;]
Serial Port 3 Configuration	
Serial Port 3 Configuration	
Serial Port:	[Disabled]

Device Settings	[Enabled] IO=3E8h; IRQ=4;
Change Settings:	[Auto]
Serial Port 4 Configuration	
Serial Port 4 Configuration	
Serial Port:	[Disabled]
Device Settings	[Enabled] IO=2E8h; IRQ=4;
Change Settings:	[Auto]
Serial Port 5 Configuration	
Serial Port 5 Configuration	
Serial Port:	[Disabled]
Device Settings	[Enabled] IO=2F0h; IRQ=4;
Change Settings:	[Auto]
COM5 Config:	[RS485 mode] [RS422 mode]
Serial Port 6 Configuration	
Serial Port 6 Configuration	
Serial Port:	[Disabled]
Device Settings	[Enabled] IO=2F0h; IRQ=4;
Change Settings:	[Auto]
COM6 Config:	[RS485 mode] [RS422 mode]

3.4.7 Hardware Monitor

Pc Health Status

System temperature1 : +39 C
Fan1 Speed : 6887 RPM
CPU_CORE_VIN : +1.653 V
+1.2V : +1.236 V
+12V : +13.120 V
+5V : +5.123 V

Smart Fan Function

Fan 1 Setting

Fan 1 Setting

Smart Fan 1 Mode:

[Software Mode]

[Automatic Mode]

Fan 1 Type:

[PWM]

[RPM]

Tempurature select:

[TMPIN1]

[TMPIN2]

[TMPIN3]

Fan off temperature limit: 0
Fan start temperature limit: 30
Fan full speed temperature limit: 90
Fan start PWM: 75
PWM SLOPE SETTING: 3
Temperature: 4

3.4.8 AMI Graphic Output Protocol Policy

Intel(R) GOP Driver [18.0.1034]

Output Select: [DP1(ACTIVE)]

3.4.9 Network Stack Configuration

Network Stack:


[Disabled]

[Enabled]

3.4.10 NVMe Configuration

NVMe Configuration

3.5 Chipset Settings

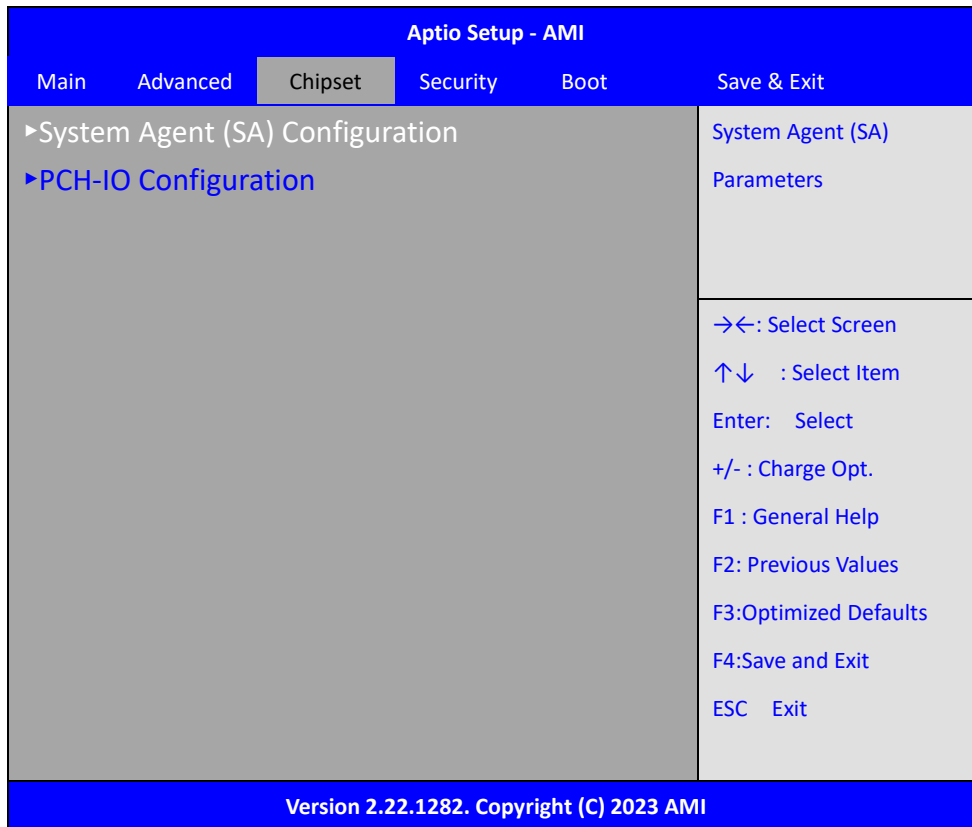

3.5.1 System Agent (SA) Configuration

System Agent (SA) Configuration

Memory Configuration

Memory Thermal Configuration

Memory Thermal Configuration

Memory Power and Thermal Throttling

Memory Power and Thermal Throttling

DDR PowerDown and idle counter:

[PCODE]

[BIOS]

FOR LPDDR Only: DDR PowerDown and Idle counter

[PCODE]

[BIOS]

REFRESH_2X_MODE:

[Disabled]

[1- Enabled for WARM or HOT]

[2- Enabled HOT only]

LPDDR Thermal Sensor:

[Disabled]

[Enabled]

SelfRefresh Enable:

[Disabled]

[Enabled]

SelfRefresh IdleTimer:

512

Throttler CKEMin Defeature:

[Enabled]

[Disabled]

Throttler CKKEMin Timer:

48

For LPDDR Only: Throttler CKEMin Defeature:

[Enabled]

[Disabled]

For LPDDR Only: Throttler CKKEMin Timer: 64

Dram Power Meter

Dram Power Meter

Use user provided power weights,
Scale factor, and channel power

Floor values:

[Disabled]

[Enabled]

Energy Scale Factor

4

Idle Energy Ch0Dimm0

10

PowerDown Energy Ch0Dimm0

6

Activate Energy Ch0Dimm0

172

Read Energy Ch0Dimm0

212

Write Energy Ch0Dimm0

221

Idle Energy Ch0Dimm1

10

PowerDown Energy Ch0Dimm1

6

Activate Energy Ch0Dimm1

172

Read Energy Ch0Dimm1

212

Write Energy Ch0Dimm1

221

Idle Energy Ch1Dimm0

10

PowerDown Energy Ch1Dimm0

6

Activate Energy Ch1Dimm0

172

Read Energy Ch1Dimm0	212
Write Energy Ch1Dimm0	221
Idle Energy Ch1Dimm1	10
PowerDown Energy Ch1Dimm1	6
Activate Energy Ch1Dimm1	172
Read Energy Ch1Dimm1	212
Write Energy Ch1Dimm1	221

Memory Thermal Reporting

Lock Thermal Management Registers:

[Disabled]

[Enabled]

Memory Thermal Reporting

Extern Therm Status:

[Disabled]

[Enabled]

Closed Loop Therm Manage:

[Disabled]

[Enabled]

Open Loop Therm Manage:

[Disabled]

[Enabled]

Thermal Threshold Settings

Warm Threshold Ch0 Dimm0	255
Warm Threshold Ch0 Dimm1	255
Hot Threshold Ch0 Dimm0	255
Hot Threshold Ch0 Dimm1	255
Warm Threshold Ch1 Dimm0	255
Warm Threshold Ch1 Dimm1	255
Hot Threshold Ch1 Dimm0	255
Hot Threshold Ch1 Dimm1	255

Thermal Throttle Budget Settings

Warm Budget Ch0 Dimm0	255
Warm Budget Ch0 Dimm1	255
Hot Budget Ch0 Dimm0	255
Hot Budget Ch0 Dimm1	255
Warm Budget Ch1 Dimm0	255

Warm Budget Ch1 Dimm1	255
Hot Budget Ch1 Dimm0	255
Hot Budget Ch1 Dimm1	255

Memory RAPL

Memory RAPL

Rap1 Power Floor Ch0	0
Rap1 Power Floor Ch1	0

RAPL PL Lock:

[Disabled]
[Enabled]

RAPL PL 1 enable:

[Disabled]
[Enabled]

RAPL PL 1 Power	0
RAPL PL 1 WindowX	0
RAPL PL 1 WindowY	0

RAPL PL 2 enable:

[Disabled]
[Enabled]

RAPL PL 2 Power	222
RAPL PL 2 WindowX	1
RAPL PL 2 WindowY	10

Memory Thermal Management:

[Disabled]
[Enabled]

Memory Training Algorithms:

Early Command Training:

[Disabled]
[Enabled]

SenseAmp Offset Training:

[Disabled]
[Enabled]

Early ReadMPR Timing Centering 2D:

[Disabled]
[Enabled]

Read MPR Training:

[Disabled]
[Enabled]

Receive Enable Training:	[Disabled] [Enabled]
Jedec Write Leveling:	[Disabled] [Enabled]
LPDDR4 Write DQ DQS Retraining:	[Disabled] [Enabled]
Early Write Time Centering 2D:	[Disabled] [Enabled]
Early Read Time Centering 2D:	[Disabled] [Enabled]
Write Timing Centering 1D:	[Disabled] [Enabled]
Write Voltage Centering 1D:	[Disabled] [Enabled]
Read Timing Centering 1D:	[Disabled] [Enabled]
Dimm ODT Training* :	[Disabled] [Enabled]
Max RTT_WR:	[ODT Off] [120 Ohms]
DIMM RON Training*:	[Disabled] [Enabled]
Write Drive Strength/Equalization 2D*:	[Disabled] [Enabled]
Write Slew Rate Training*:	[Disabled] [Enabled]
Read ODT Training*:	[Disabled] [Enabled]

Read Equalization Training*:	[Disabled] [Enabled]
Read Amplifier Training*:	[Disabled] [Enabled]
Write Timing Centering 2D:	[Disabled] [Enabled]
Read Timing Centering 2D:	[Disabled] [Enabled]
Command Voltage Centering:	[Disabled] [Enabled]
Write Voltage Centering 2D:	[Disabled] [Enabled]
Read Voltage Centering 2D:	[Disabled] [Enabled]
Late Command Training:	[Disabled] [Enabled]
Round Trip Latency:	[Disabled] [Enabled]
Turn Around Timing Training:	[Disabled] [Enabled]
Rank Margin Tool:	[Disabled] [Enabled]
Rank Margin Tool Per Bit:	[Disabled] [Enabled]
Margin Check Limit:	[Disabled] [L1] [L2] [Both]
Margin Limit Check L2:	100

Memory Test:	[Disabled] [Enabled]
DIMM SPD Alias Test:	[Disabled] [Enabled]
Receive Enable Centering 1D:	[Disabled] [Enabled]
Retrain Margin Check:	[Disabled] [Enabled]
Write Drive Strength Up/ Dn independently:	[Disabled] [Enabled]
Command Slew Rate Training:	[Disabled] [Enabled]
Command Drive Strength and Equalization:	[Disabled] [Enabled]
Command Normalization:	[Disabled] [Enabled]
Early DQ Write Drive Strength and Equalization Training:	[Disabled] [Enabled]
Read Voltage Centering 1D:	[Disabled] [Enabled]
Write TC0 Comp Training:	[Disabled] [Enabled]
Clock TC0 Comp Training:	[Disabled] [Enabled]
Dimm ODT CA Training:	[Disabled] [Enabled]

Write TCO DqsTraining: [Disabled]
 [Enabled]

Duty Cycle Correction: [Disabled]
 [Enabled]

DQ DFE Training: [Disabled]
 [Enabled]

Sense Amplifier Correction Training: [Disabled]
 [Enabled]

Memory Configuration

Memory RC Version 0.0.4.104
 Memory Data Rate 3200 MTPS
 Memory Timings (tCL-tRCD-tRP-tRAS) 22-22-22-52

Channel 0 Slot 0 Not Populated / Disabled
 Channel 0 Slot 1 Not Populated / Disabled
 Channel 1 Slot 0 Populated & Enabled
 Size 8192 MB (DDR4)
 Number of Ranks 1
 Manufacturer Samsung
 Channel 1 Slot 1 Not Populated / Disabled

Memory ratio/reference clock
 Options moved to
 Overclock->Memory->Custom Profile
 Menu

MRC ULT Safe Config: [Disabled]
 [Enabled]

Safe Mode Support: [Disabled]
 [Enabled]

Maximum Memory Frequency: [Auto]
 [1067]
 [1200]
 [1333]
 [1400]

	[1600]
	[1800]
	[1867]
	[2000]
	[2133]
	[2200]
	[2400]
	[2600]
	[2667]
	[2800]
	[2933]
	[3000]
	[3200]
	[3467]
	[3600]
	[3733]
	[4000]
	[4200]
	[4267]
HOB Buffer Size:	
	[Auto]
	[1B]
	[1KB]
	[Max (assuming 63KB total HOB size)]
Max TOLUD:	
	[Dynamic]
	[1 GB]
	[1.25 GB]
	[1.5 GB]
	[1.75 GB]
	[2 GB]
	[2.25 GB]
	[2.5 GB]
SA GV:	
	[Disabled]
	[Fixed Low]
	[Fixed Mid]
	[Fixed High]
	[Enabled]
DDR Speed Control:	
	[Auto]
	[Manual]

Retrain on Fast Fail:	[Disabled] [Enabled]
DDR4_1DPC:	[Disabled] [Enabled on DIMM0 only] [Enabled on DIMM1 only] [Enabled]
Enable RH Prevention:	[Disabled] [Enabled]
REFRESH_PANIC_WM:	9
REFRESH_HP_WM:	8
Exit On Failure (MRC):	[Disabled] [Enabled]
Enable/Disable IED (Intel Enhanced Debug):	[Enabled] [Disabled]
Ch Hash Support:	[Disabled] [Enabled]
Ch Hash Mask:	12492
Ch Hash Interleaved Bit:	[BIT6] [BIT7] [BIT8] [BIT9] [BIT10] [BIT11] [BIT12] [BIT13]
Extended Bank Hashing:	[Disabled] [Enabled]
Per Bank Refresh:	[Disabled] [Enabled]
Power Down Mode:	[Auto] [No Power Down]

	[APD]
	[PPD-DLLoff]
Page Close Idle Timeout:	[Enabled]
	[Disabled]
Memory Scrambler:	[Enabled]
	[Disabled]
Force ColdReset:	[Enabled]
	[Disabled]
Channel 0 DIMM Control:	[Enable both DIMMs]
	[Disable DIMM0]
	[Disable DIMM1]
	[Disable both DIMMs]
Channel 1 DIMM Control:	[Enable both DIMMs]
	[Disable DIMM0]
	[Disable DIMM1]
	[Disable both DIMMs]
Force Single Rank:	[Disabled]
	[Enabled]
Force Single Sub Channel:	[Disabled]
	[Enabled]
MRC TASK Debug Print Enable:	0
Memory Remap:	[Enabled]
	[Disabled]
Time Measure:	[Disabled]
	[Enabled]
DLL Weak Lock Support:	[Disabled]
	[Enabled]
Fast Boot:	[Disabled]
	[Enabled]
Train On Warm boot:	[Disabled]

	[Enabled]
Rank Margin Tool Per Task:	[Enabled]
	[Disabled]
	[Enabled]
Training Tracing:	[Disabled]
	[Enabled]
Lpddr Mem WL Set:	[Set A]
	[Set B]
BDAT Memory Test Type	[Rank Margin Tool Rank]
Rank Margin Tool Loop Count:	0
Low Supply for LPDDR4 Data:	[Disabled]
	[Enabled]
Low Supply for LPDDR4 Clock/Command/Control:	[Disabled]
	[Enabled]
Memory Test on Warm Boot:	[Disabled]
	[Enabled]

Graphics Configuration

Graphics Configuration

Primary Display:

[Auto]
[IGFX]
[PEG]
[PCI]

External Gfx Card Primary Display Configuration

External Gfx Card Primary Display Configuration

Primary PCIE:

[Auto]
[PCIE 1]
[PCIE 2]
[PCIE 3]
[PCIE 4]
[PCIE 5]
[PCIE 6]

	[PCIE 7]
	[PCIE 8]
	[PCIE 9]
	[PCIE 10]
	[PCIE 11]
	[PCIE 12]
	[PCIE 13]
	[PCIE 14]
	[PCIE 15]
	[PCIE 16]
	[PCIE 17]
	[PCIE 18]
	[PCIE 19]
Internal Graphics:	[Auto]
	[Disabled]
	[Enabled]
GTT Size:	[2 MB]
	[4 MB]
	[8 MB]
Aperture Size:	[128 MB]
	[256 MB]
	[512 MB]
	[1024 MB]
	[2048 MB]
PSMI SUPPORT:	[Disabled]
	[Enabled]
DVMT- Pre-Allocated:	[0M]
	[32M]
	[64M]
	[96M]
	[128M]
	[160M]
	[4M]
	[8M]
	[12M]
	[16M]
	[20M]

	[24M]
	[28M]
	[32M/F7]
	[36M]
	[40M]
	[44M]
	[48M]
	[52M]
	[56M]
	[60M]
DVMT Total Gfx Mem:	[128M]
	[256M]
	[MAX]
DISM Size:	[0GB]
	[1GB]
	[2GB]
	[3GB]
	[4GB]
	[5GB]
	[6GB]
	[7GB]
Intel Graphics Pei Display Peim:	[Enabled]
	[Disabled]
VDD Enable:	[Disabled]
	[Enabled]
Configure GT for use:	[Enabled]
	[Disabled]
PAVP Enable:	[Enabled]
	[Disabled]
Cdynmax Clamping Enable:	[Enabled]
	[Disabled]
Cd Clock Frequency:	[172.8 Mhz]
	[307.2 Mhz]
	[556.8 Mhz]

	[652.8 Mhz]
	[Max CdClock freq based on Reference C1k]
Skip Full CD Clock Init:	[Enabled]
	[Disabled]
VBT Select:	[eDP]
	[MIPI]
IUER Button Enable:	[Disabled]
	[Enabled]
Intel(R) Ultrabook Event Support:	
Intel(R) Ultrabook Event Support	
IUER Slate Enable:	[Disabled]
	[Enabled]
IUER Dock Enable:	[Disabled]
	[Enabled]
VT-d:	[Disabled]
	[Enabled]

3.5.2 PCH-IO Configuration

PCH-IO Configuration

PCI Express Configuration

PCI Express Configuration

DMI Link ASPM Control:

[Disabled]

[L0s]

[L1]

[L0sL1]

[Auto]

PCIe Port assigned to LAN

Disabled

Port8xh Decode:

[Disabled]

[Enabled]

Peer Memory write Enable:

[Disabled]

	[Enabled]
Compliance Test Mode:	[Enabled]
	[Disabled]
	[Enabled]
PCH PCI Express Clock Gating:	[Platform-POR]
	[Enabled]
	[Disabled]
PCIe function swap:	[Disabled]
	[Enabled]
PCIe EQ settings	
PCIe EQ override:	[Disabled]
	[Enabled]
PCIe Express Root Port 1	
PCIe Express Root Port 1:	[Disabled]
	[Enabled]
Connection Type:	[Built - in]
	[Slot]
ASPM:	[Disabled]
	[L0s]
	[L1]
	[L0sL1]
	[Auto]
L1 Substates:	[Disabled]
	[L1.1]
	[L1.1 & L1.2]
ACS:	[Disabled]
	[Enabled]
PTM:	[Disabled]
	[Enabled]
DPC:	[Disabled]
	[Enabled]

EDPC:	[Disabled]
	[Enabled]
URR:	[Disabled]
	[Enabled]
FER:	[Disabled]
	[Enabled]
NFER:	[Disabled]
	[Enabled]
CER:	[Disabled]
	[Enabled]
SEFE:	[Disabled]
	[Enabled]
SENF:	[Disabled]
	[Enabled]
SECE:	[Disabled]
	[Enabled]
PME SCI:	[Disabled]
	[Enabled]
Hot Plug:	[Disabled]
	[Enabled]
Advanced Error Reporting:	[Disabled]
	[Enabled]
PCIe Speed:	[Auto]
	[Gen1]
	[Gen2]
	[Gen3]
Transmitter Half Swing:	[Disabled]
	[Enabled]
Detect Timeout:	0

Extra Bus Reserved:	0
Reserved Memory:	10
Reserved I/O:	4
PCH PCIe LTR Configuration	
LTR:	[Disabled] [Enabled]
Snoop Latency Override:	[Disabled] [Manual] [Auto]
Non Snoop Latency Override:	[Disabled] [Manual] [Auto]
Force LTR Override:	[Disabled] [Enabled]
LTR Lock:	[Disabled] [Enabled]
Extra options	
Detect Non-Compliance Device:	[Disabled] [Enabled]
Prefetchable Memory:	10
Reserved Memory	
Alignment:	1
Prefetchable Memory	
Alignment:	1
PCIe Express Root Port 2	
PCIe Express Root Port 2:	[Disabled] [Enabled]
Connection Type:	[Built - in] [Slot]
ASPM:	[Disabled] [L0s] [L1]

	[L0sL1]
	[Auto]
L1 Substates:	
	[Disabled]
	[L1.1]
	[L1.1 & L1.2]
ACS:	
	[Disabled]
	[Enabled]
PTM:	
	[Disabled]
	[Enabled]
DPC:	
	[Disabled]
	[Enabled]
EDPC:	
	[Disabled]
	[Enabled]
URR:	
	[Disabled]
	[Enabled]
FER:	
	[Disabled]
	[Enabled]
NFER:	
	[Disabled]
	[Enabled]
CER:	
	[Disabled]
	[Enabled]
SEFE:	
	[Disabled]
	[Enabled]
SENF:	
	[Disabled]
	[Enabled]
SECE:	
	[Disabled]
	[Enabled]
PME SCI:	
	[Disabled]
	[Enabled]

Hot Plug:	[Disabled]
	[Enabled]
Advanced Error Reporting:	[Disabled]
	[Enabled]
PCIe Speed:	[Auto]
	[Gen1]
	[Gen2]
	[Gen3]
Transmitter Half Swing:	[Disabled]
	[Enabled]
Detect Timeout:	0
Extra Bus Reserved:	0
Reserved Memory:	10
Reserved I/O:	4
PCH PCIe LTR Configuration	
LTR:	[Disabled]
	[Enabled]
Snoop Latency Override:	[Disabled]
	[Manual]
	[Auto]
Non Snoop Latency Override:	[Disabled]
	[Manual]
	[Auto]
Force LTR Override:	[Disabled]
	[Enabled]
LTR Lock:	[Disabled]
	[Enabled]
Extra options	
Detect Non-Compliance Device:	[Disabled]
	[Enabled]
Prefetchable Memory:	10

Reserved Memory	
Alignment:	1
Prefetchable Memory	
Alignment:	1
PCIe Express Root Port 3	
PCIe Express Root Port 3:	[Disabled]
	[Enabled]
Connection Type:	[Built - in]
	[Slot]
ASPM:	[Disabled]
	[L0s]
	[L1]
	[L0sL1]
	[Auto]
L1 Substates:	[Disabled]
	[L1.1]
	[L1.1 & L1.2]
ACS:	[Disabled]
	[Enabled]
PTM:	[Disabled]
	[Enabled]
DPC:	[Disabled]
	[Enabled]
EDPC:	[Disabled]
	[Enabled]
URR:	[Disabled]
	[Enabled]
FER:	[Disabled]
	[Enabled]
NFER:	[Disabled]
	[Enabled]

CER:	[Disabled]
	[Enabled]
SEFE:	[Disabled]
	[Enabled]
SENE:	[Disabled]
	[Enabled]
SECE:	[Disabled]
	[Enabled]
PME SCI:	[Disabled]
	[Enabled]
Hot Plug:	[Disabled]
	[Enabled]
Advanced Error Reporting:	[Disabled]
	[Enabled]
PCIe Speed:	[Auto]
	[Gen1]
	[Gen2]
	[Gen3]
Transmitter Half Swing:	[Disabled]
	[Enabled]
Detect Timeout:	0
Extra Bus Reserved:	0
Reserved Memory:	10
Reserved I/O:	4
PCH PCIe LTR Configuration	
LTR:	[Disabled]
	[Enabled]
Snoop Latency Override:	[Disabled]
	[Manual]
	[Auto]

Non Snoop Latency Override:

[Disabled]
[Manual]
[Auto]

Force LTR Override:

[Disabled]
[Enabled]

LTR Lock:

[Disabled]
[Enabled]

Extra options

Detect Non-Compliance Device:

[Disabled]
[Enabled]

Prefetchable Memory: 10

Reserved Memory

Alignment: 1

Prefetchable Memory

Alignment: 1

PCIe Express Root Port 4 Lane configured as USB/SATA/UFS

PCIe Express Root Port 5 Lane configured as USB/SATA/UFS

PCI Express Root Port 6 Lane configured as USB/SATA/UFS

PCI Express Root Port 7

PCI Express Root Port 7:

[Disabled]
[Enabled]

Connection Type:

[Built-in]
[Slot]

ASPM:

[Disabled]
[L0s]
[L1]
[L0sL1]
[Auto]

L1 Substates:

[Disabled]
[L1.1]
[L1.1 & L1.2]

ACS:	[Disabled] [Enabled]
Multi-VC:	[Disabled] [Enabled]
VC to TC Mapping	
TC0:	VC0
TC1:	[VC0] [VC1]
TC2:	[VC0] [VC1]
TC3:	[VC0] [VC1]
TC4:	[VC0] [VC1]
TC5:	[VC0] [VC1]
TC6:	[VC0] [VC1]
TC7:	[VC0] [VC1]
PTM:	[Disabled] [Enabled]
DPC:	[Disabled] [Enabled]
EDPC:	[Disabled] [Enabled]
URR:	[Disabled] [Enabled]
FER:	

	[Disabled]
	[Enabled]
NFER:	
	[Disabled]
	[Enabled]
CER:	
	[Disabled]
	[Enabled]
SEFE:	
	[Disabled]
	[Enabled]
SENF:	
	[Disabled]
	[Enabled]
SECE:	
	[Disabled]
	[Enabled]
PME SCI:	
	[Disabled]
	[Enabled]
Hot Plug:	
	[Disabled]
	[Enabled]
Advanced Error Reporting:	
	[Disabled]
	[Enabled]
PCIe Speed:	
	[Auto]
	[Gen1]
	[Gen2]
	[Gen3]
Transmitter Half Swing:	
	[Disabled]
	[Enabled]
Detect Timeout:	0
Extra Bus Reserved:	0
Reserved Memory:	10
Reserved I/O:	4
PCH PCIe LTR Configuration	
LTR:	
	[Disabled]
	[Enabled]

Snoop Latency Override:	[Disabled]
	[Manual]
	[Auto]
Non Snoop Latency Override:	[Disabled]
	[Manual]
	[Auto]
Force LTR Override:	[Disabled]
	[Enabled]
LTR Lock:	[Disabled]
	[Enabled]
Extra options	
Detect Non-Compliance Device:	[Disabled]
	[Enabled]
Prefetchable Memory:	10
Reserved Memory	
Alignment:	1
Prefetchable Memory	
Alignment:	1
PCIE clocks	
Clock0 assignment:	[Platform-POR]
	[Enabled]
	[Disabled]
ClkReq for Clock0:	[Platform-POR]
	[Disabled]
Clock1 assignment:	[Platform-POR]
	[Enabled]
	[Disabled]
ClkReq for Clock1:	[Platform-POR]
	[Disabled]
Clock2 assignment:	[Platform-POR]
	[Enabled]

	[Disabled]
ClkReq for Clock2:	[Platform-POR] [Disabled]
Clock3 assignment:	[Platform-POR] [Enabled] [Disabled]
ClkReq for Clock3:	[Platform-POR] [Disabled]
Clock4 assignment:	[Platform-POR] [Enabled] [Disabled]
ClkReq for Clock4:	[Platform-POR] [Disabled]
Clock5 assignment:	[Platform-POR] [Enabled] [Disabled]
ClkReq for Clock5:	[Platform-POR] [Disabled]

SATA Configuration

SATA Configuration

SATA Controller(s):

[Enabled]
[Disabled]

SATA Mode Selection:

AHCI

SATA Ports Multiplier:

[Enabled]
[Disabled]

SATA Test Mode:

[Enabled]
[Disabled]

Software Feature Mask Configuration

Software Feature Mask Configuration

HDD Unlock:

[Disabled]
[Enabled]

LED Locate:	[Disabled] [Enabled]
Serial ATA Port 0	Empty
Software Preserve	unknown
Port 0:	[Disabled] [Enabled]
Hot Plug:	[Disabled] [Enabled]
Configured as eSATA	Hot Plug supported
External:	[Disabled] [Enabled]
Spin Up Device:	[Disabled] [Enabled]
SATA Device Type:	[Hard Disk Drive] [Solid State Drive]
Topology:	[Unknown] [ISATA] [Direct Connect] [Flex] [M2]
SATA Port 0 DevSlp:	[Disabled] [Enabled]
SATA Port 0 RxPolarity:	[Disabled] [Enabled]
DITO Configuration:	[Disabled] [Enabled]
DITO Value	625
DM Value	15
Serial ATA Port 1	Empty

Software Preserve	unknown
Port 1:	
	[Disabled]
	[Enabled]
Hot Plug:	
	[Disabled]
	[Enabled]
Configured as eSATA	Hot Plug supported
External:	
	[Disabled]
	[Enabled]
Spin Up Device:	
	[Disabled]
	[Enabled]
SATA Device Type:	
	[Hard Disk Drive]
	[Solid State Drive]
Topology:	
	[Unknown]
	[ISATA]
	[Direct Connect]
	[Flex]
	[M2]
SATA Port 1 DevSlp:	
	[Disabled]
	[Enabled]
SATA Port 1 RxPolarity:	
	[Disabled]
	[Enabled]
DITO Configuration:	
	[Disabled]
	[Enabled]
DITO Value	625
DM Value	15
Serial ATA Port 2	Empty
Software Preserve	unknown
Port 2:	
	[Disabled]
	[Enabled]
Hot Plug:	
	[Disabled]

Configured as eSATA External:	[Enabled] Hot Plug supported
	[Disabled] [Enabled]
Spin Up Device:	[Disabled] [Enabled]
SATA Device Type:	[Hard Disk Drive] [Solid State Drive]
Topology:	[Unknown] [ISATA] [Direct Connect] [Flex] [M2]
SATA Port 2 DevSlp:	[Disabled] [Enabled]
SATA Port 2 RxPolarity:	[Disabled] [Enabled]
DITO Configuration:	[Disabled] [Enabled]
DITO Value	625
DM Value	15

USB Configuration

USB Configuration	
XHCI Compliance Mode:	[Disabled] [Enabled]
xDCI Support:	[Disabled] [Enabled]
USB2 PHY Sus Well Power Gating:	[Disabled] [Enabled]
USB3 Link Speed Selection:	[GEN1]

	[GEN2]
USB PDO Programming:	[Disabled] [Enabled]
USB Overcurrent:	[Disabled] [Enabled]
USB Internal Pullup resistor:	[Disabled] [Enabled]
USB Overcurrent Lock:	[Disabled] [Enabled]
USB Port Disable Override:	[Disabled] [Select Per-Pin]
USB Device/HOST Mode Override:	[Disabled] [Select Per-Pin]
USB UCSI ACPI device:	[Disabled] [Enabled]
SCS Configuration	
eMMC 5.1 Controller:	[Disabled] [Enabled]
eMMC 5.1 HS400 Mode:	[Disabled] [Enabled]
Enable HS400 software tuning:	[Disabled] [Enabled]
Enable HS400 software tuning:	[33 0hm] [40 0hm] [50 0hm]
SDCard 3.0 Controller:	[Disabled] [Enabled]
Smart Battery Configuration	
Smart Battery	

State After G3

[Enabled] [Disabled]

[S5 state]

[S0 state]

3.6 Security Settings



3.6.1 Administrator Password



3.6.2 User Password



3.7 Boot Settings

Aptio Setup - AMI					
Main	Advanced	Chipset	Security	Boot	Save & Exit
Boot Configuration					Number of seconds toWait for
	Setup Prompt Timeout		1		Setup Activation key.
	Bootup NumLock State		[Off]		65535(0xFFFF)means Indef
	Quiet Boot		[Enabled]		inite waiting.
Boot Option Priorities					
	Fast Boot		[Disabled]		
					→←: Select Screen ↑↓ : Select Item Enter: Select +/- : Charge Opt. F1 : General Help F2: Previous Values F3:Optimized Defaults F4:Save and Exit ESC Exit
Version 2.22.1282. Copyright (C) 2023 AMI					

Setup Prompt Timeout
 Bootup Numlock State:

[1]

[On]
 [off]

Quiet Boot:

[Disabled]


[Enabled]

Fast Boot:

[Disabled]

[Enabled]

3.8 Save & Exit Settings

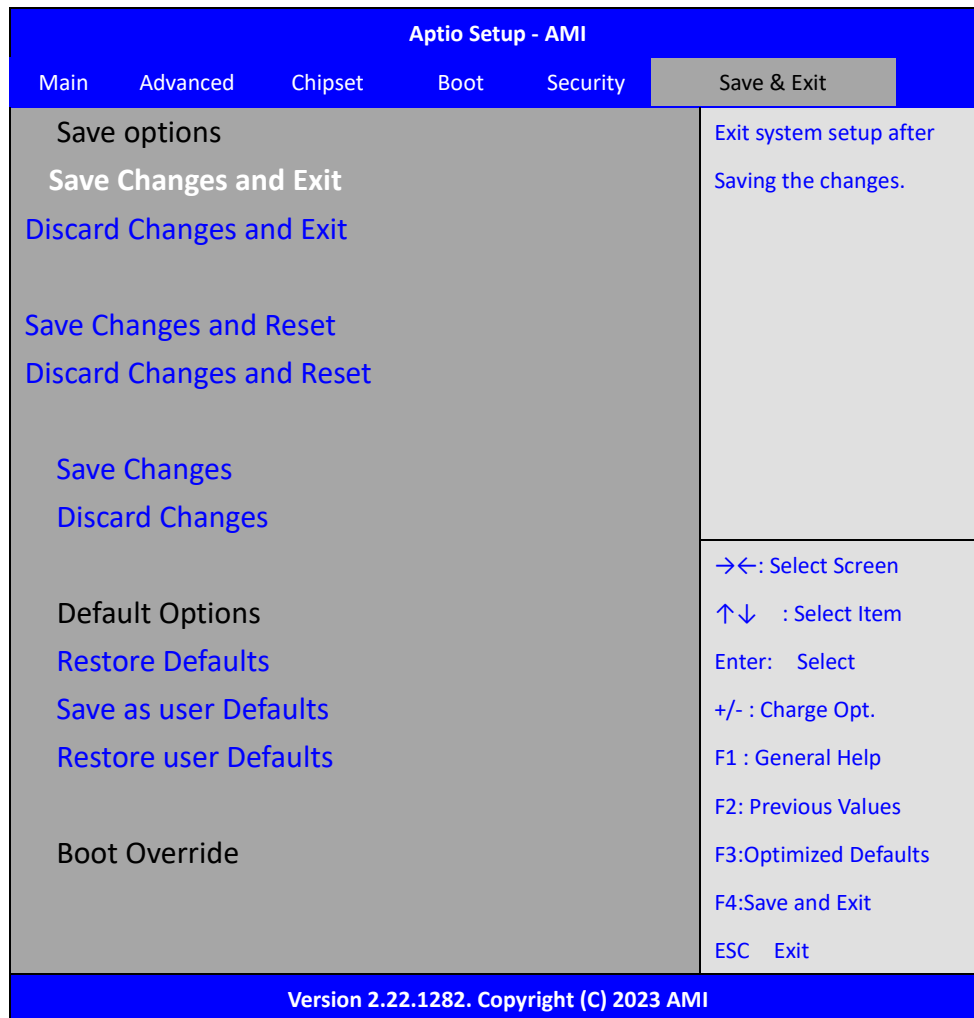

Save Changes and Exit

Save & Exit Setup save Configuration and exit ?

[Yes]

[No]

Discard Changes and Exit

Exit Without Saving Quit without saving?

[Yes]

[No]

Save Changes and Reset

Reset the system after Saving The changes?

[Yes]

[No]

Discard Changes and Reset

Reset system setup without Saving any changes?

[Yes]

[No]

Save Changes

Save Setup done so far to any of the setup options?

[Yes]

[No]

Discard Changes

Discard Changes done so far to any of the setup options?

[Yes]

[No]

Restore Defaults

Restore /Load Defaults values for all the setup options?

[Yes]

[No]

Save as user Defaults

Save the changes done so far as User Defaults?

[Yes]

[No]

Restore user Defaults

Restore the User Defaults to all the setup options?

[Yes]

[No]

Chapter 4 Installation of Drivers

This chapter describes the installation procedures for software and drivers under the windows 10. The software and drivers are included with the motherboard. The contents include **Intel Chipset, Graphics chipset driver, Audio driver, Intel LAN Driver, Intel® Serial I/O, Intel® Management and Security Status Installer, Intel® Management Engine Components and Intel® HID Event Filter**. The instructions are as below.


Important Note:

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the installation of drivers.

4.1 Intel Chipset

To install the Intel chipset driver, please follow the steps below.


Step 1. Here is welcome page. Please make sure you save and exit all programs before install. Click **Next**.

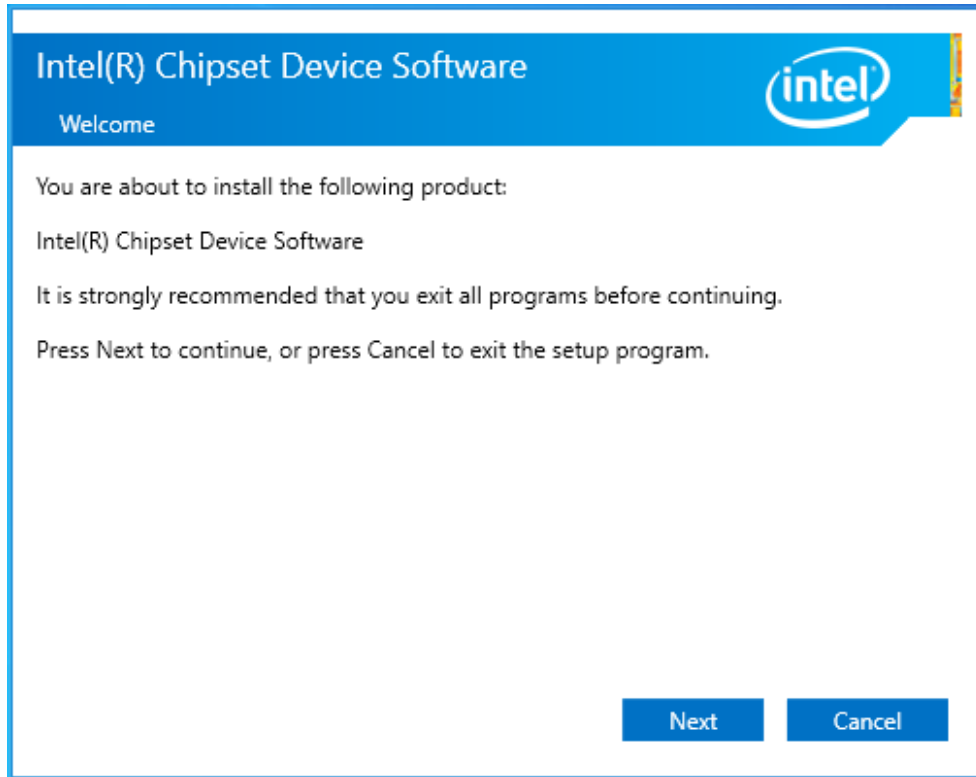


Step 2. Read the license agreement. Click **Accept** to accept all of the terms of the license agreement.



Step 3. Click **Install** to begin the installation.

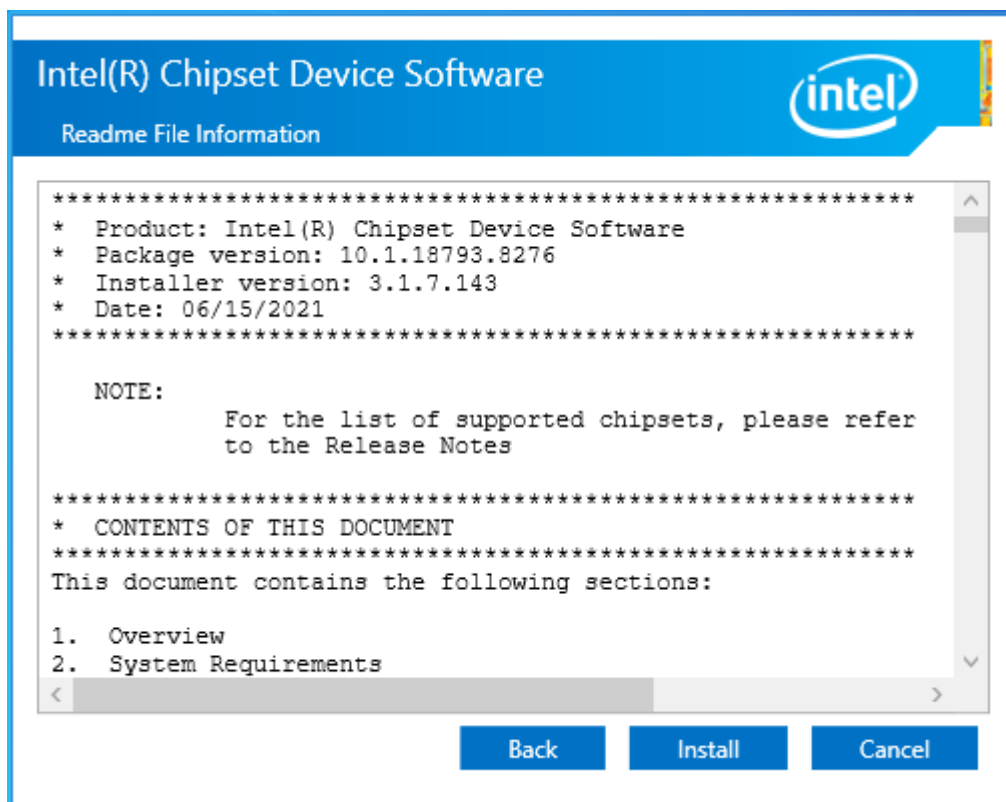

Step 4. Select **Restart Now** to reboot your computer for the changes to take effect.

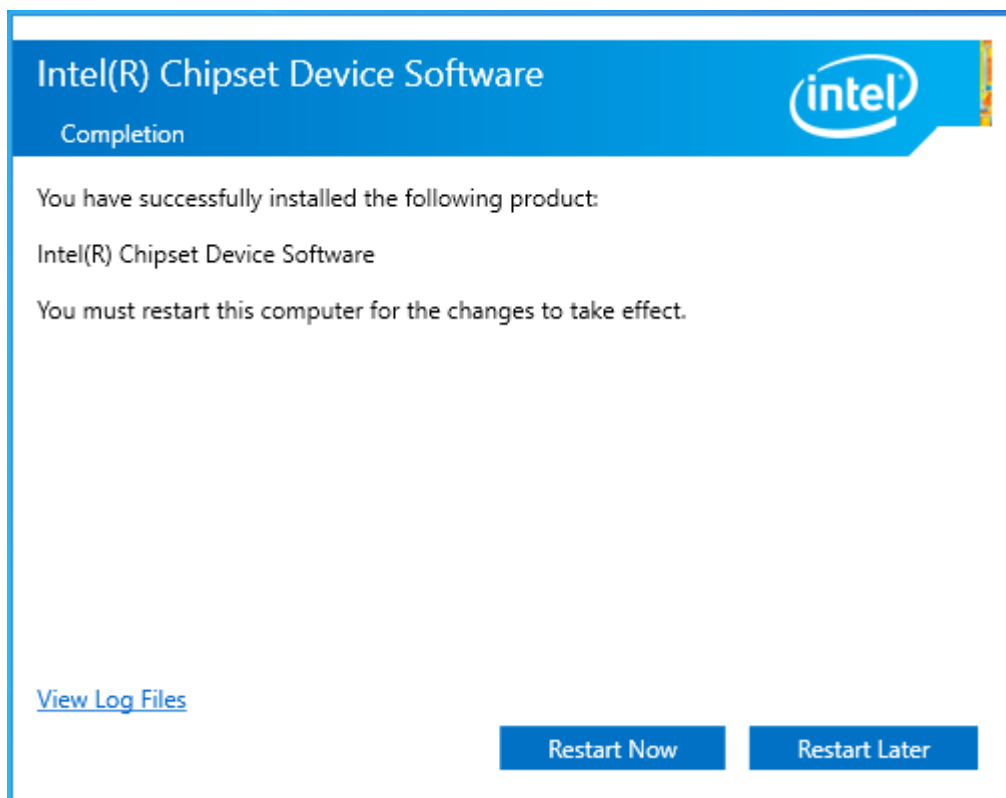


4.2 Intel® HD Graphics Chipset

To install the Intel® HD Graphics Chipset, please follow the steps below.


Step 1. Click **Begin installation**.




Step 2. Read the license agreement. Click **Yes** to accept all of the terms of the license agreement. And Click **Next** to setup program

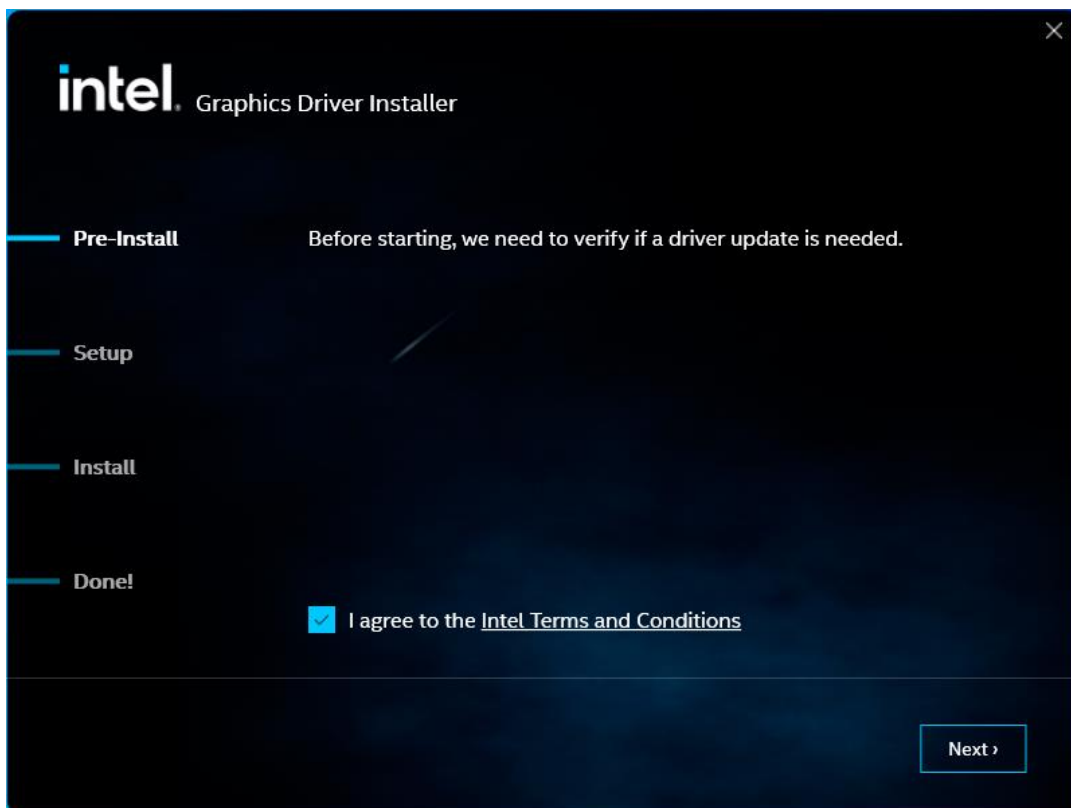

Step 3. Choose **Install** function and Click **Start** to setup program.

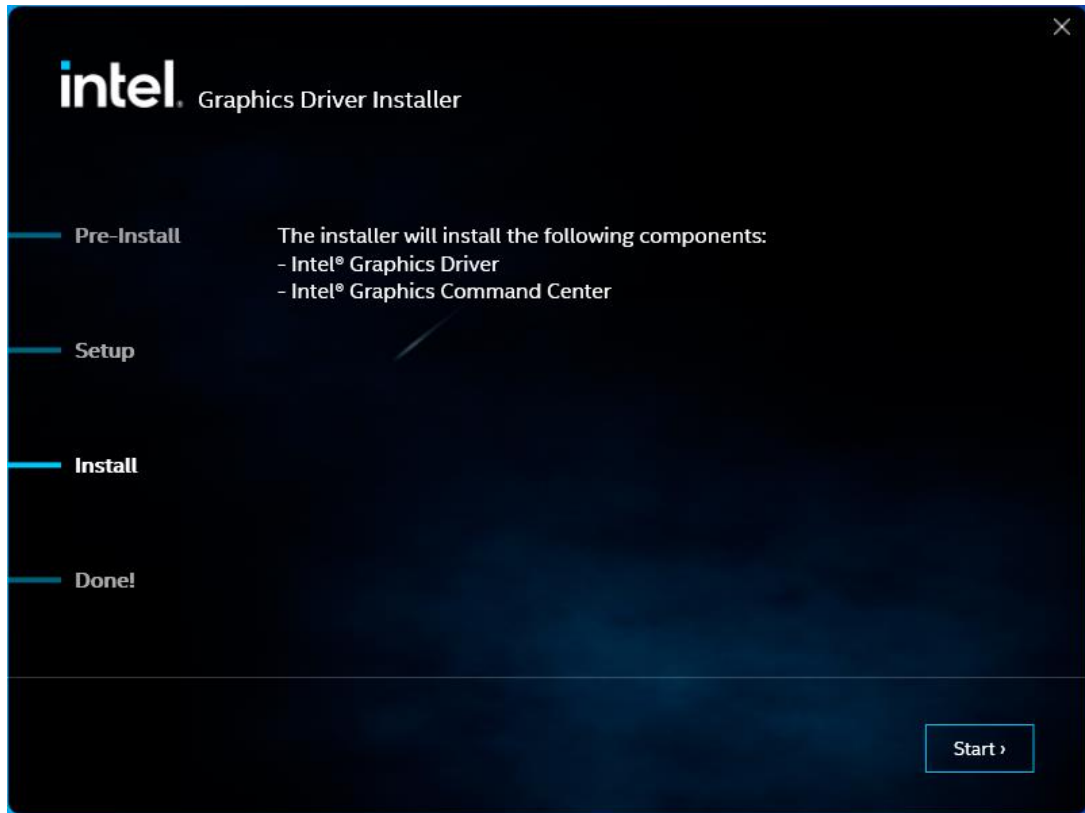


Step 4. Click **Finish** to complete installation.

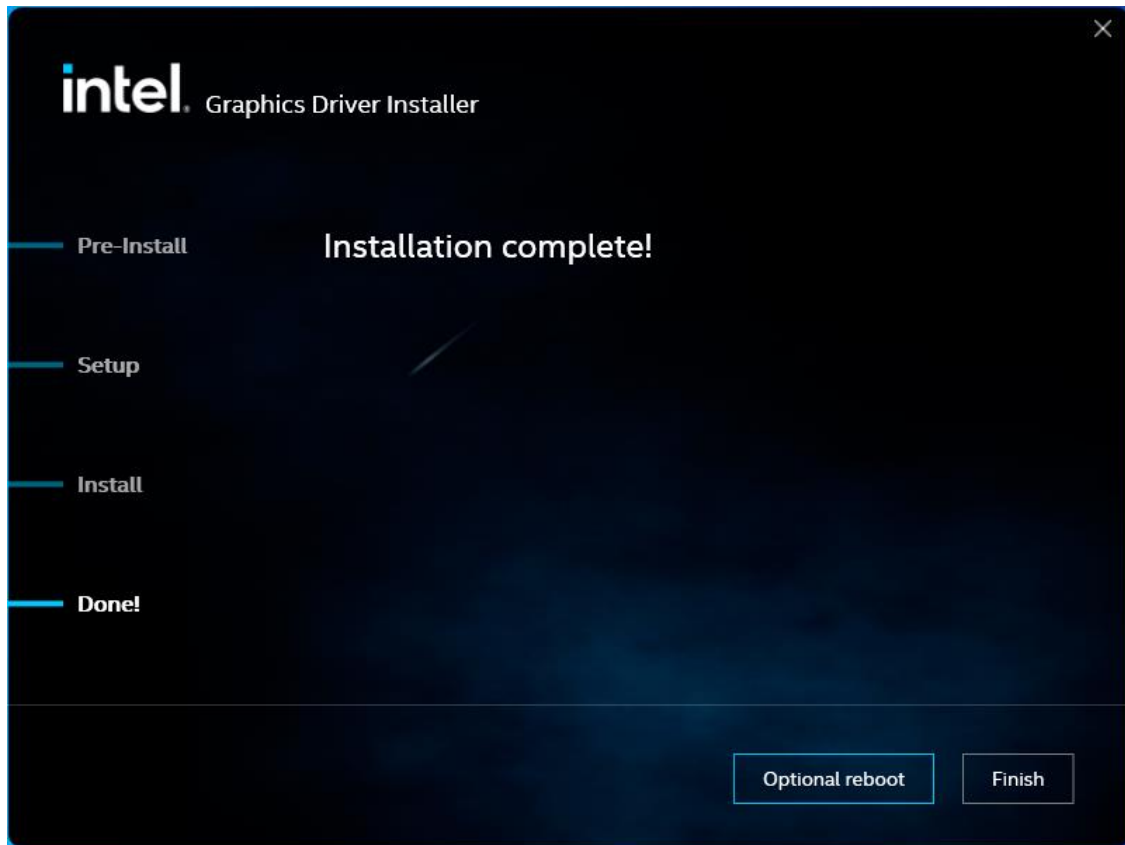


4.3 Realtek HD Audio Driver Installation

To install the Realtek HD Audio Driver, please follow the steps below.

Step 1. Click **Next** to continue.

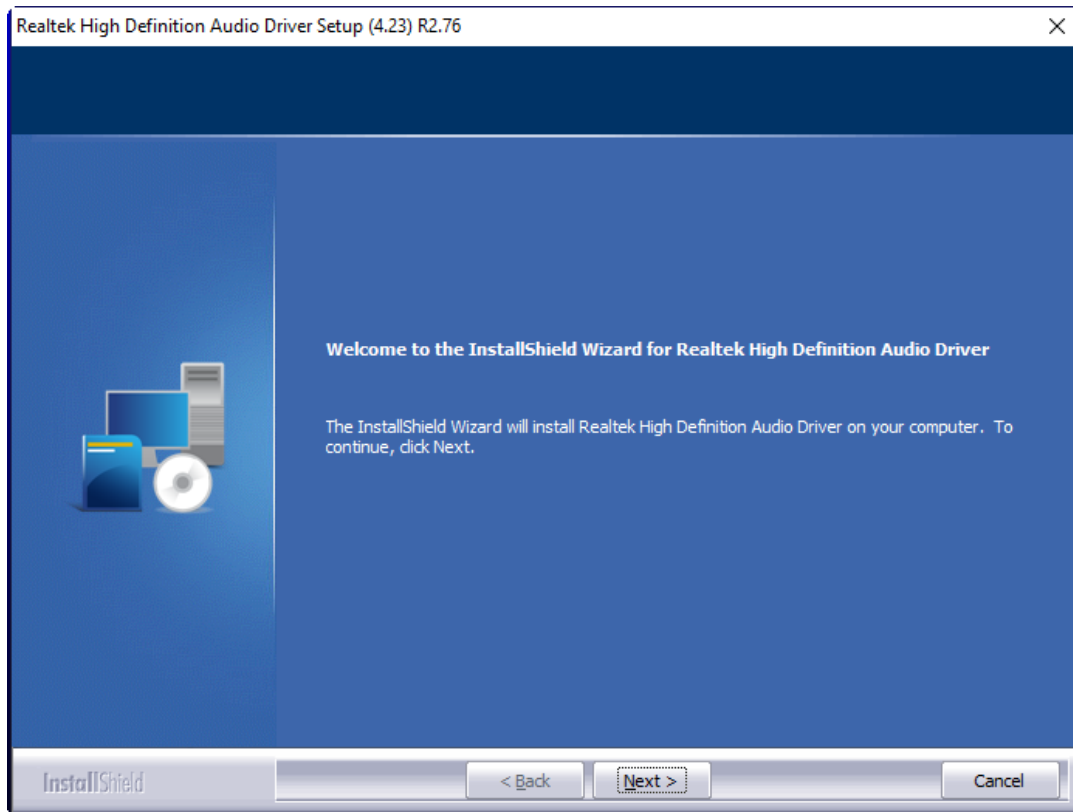


Step 2. Click **Yes, I want to restart my computer now.** Click **Finish** to complete the installation.

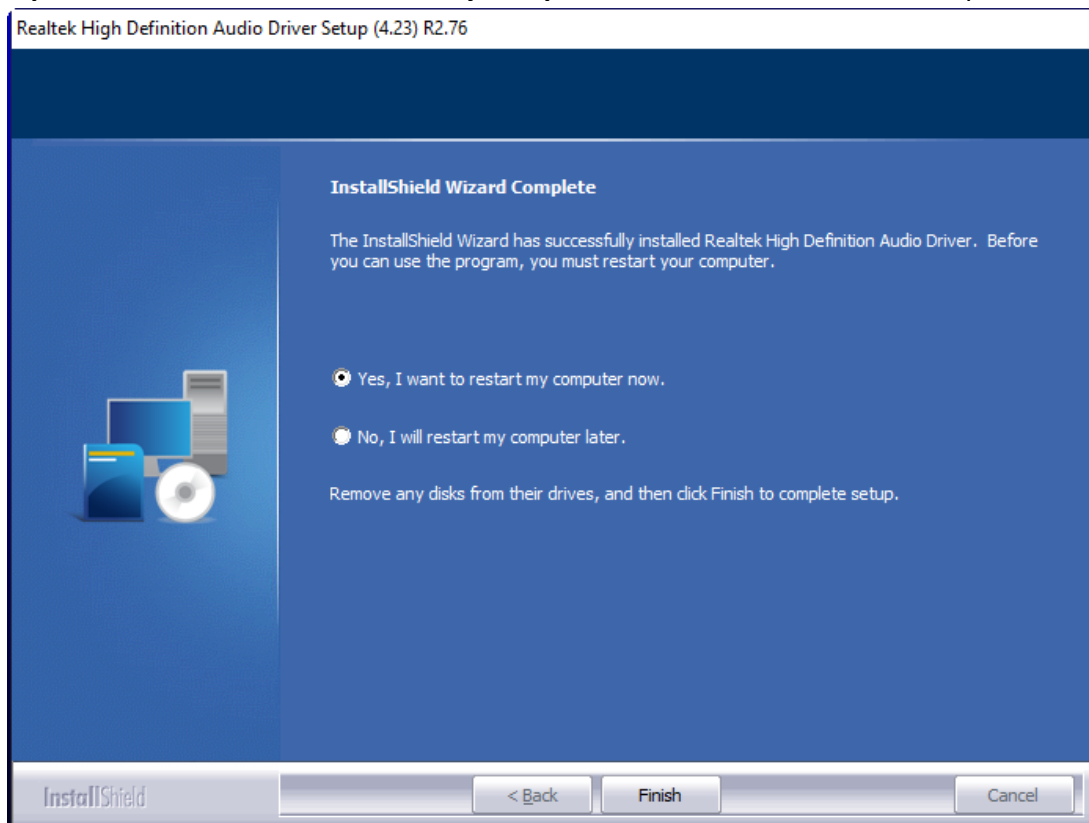


4.4 Intel® Management Engine Interface

To install the Intel® Management Engine Interface, please follow the steps below.


Step 1. Select setup language you need. Click **Next** to continue.

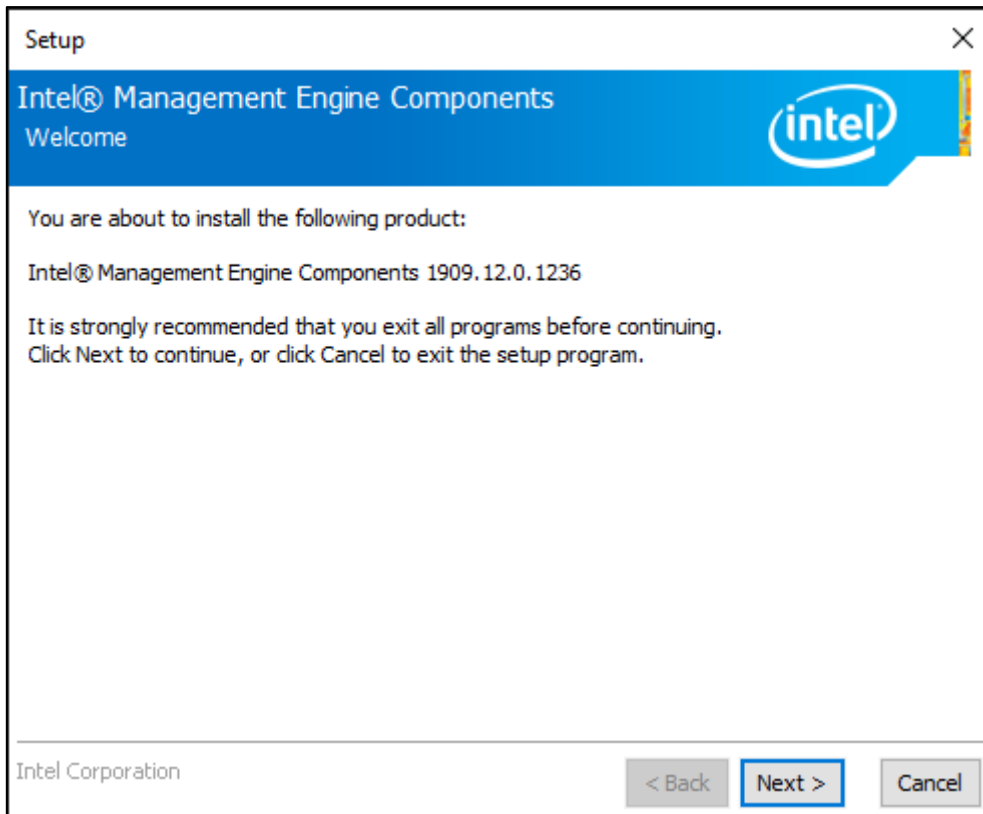


Step 2. Choose **I accept the terms in the License Agreement** and click **Next** to begin the installation.

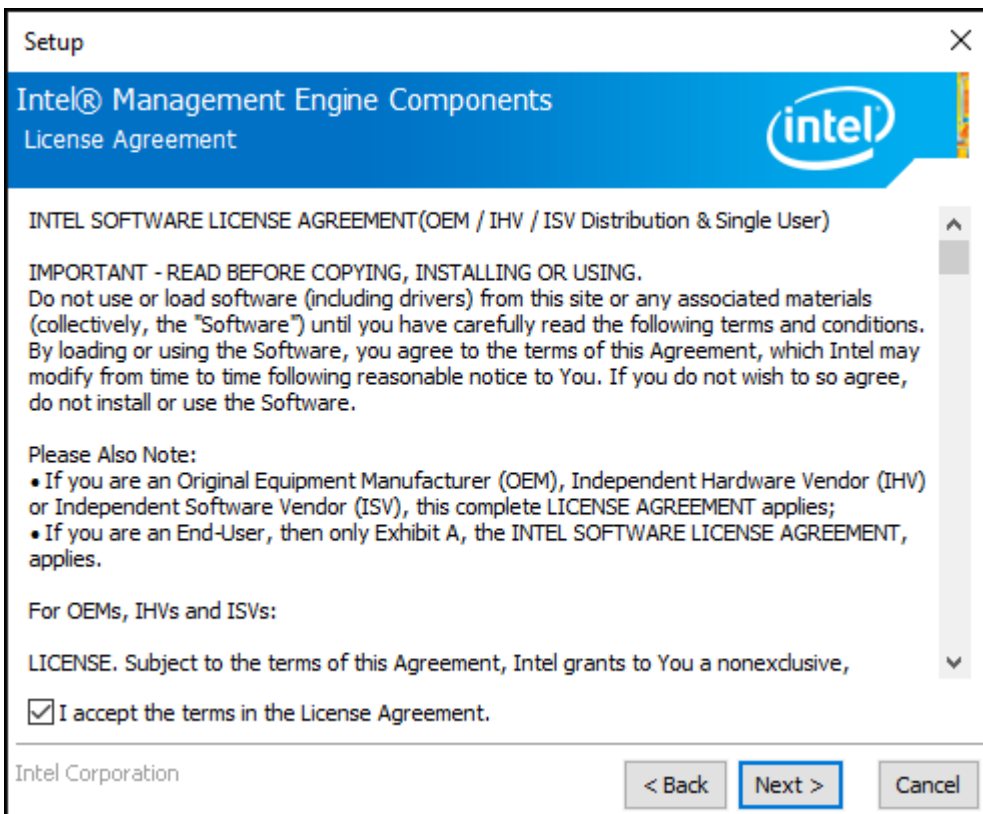

Step 3. Click **Next** to continue.

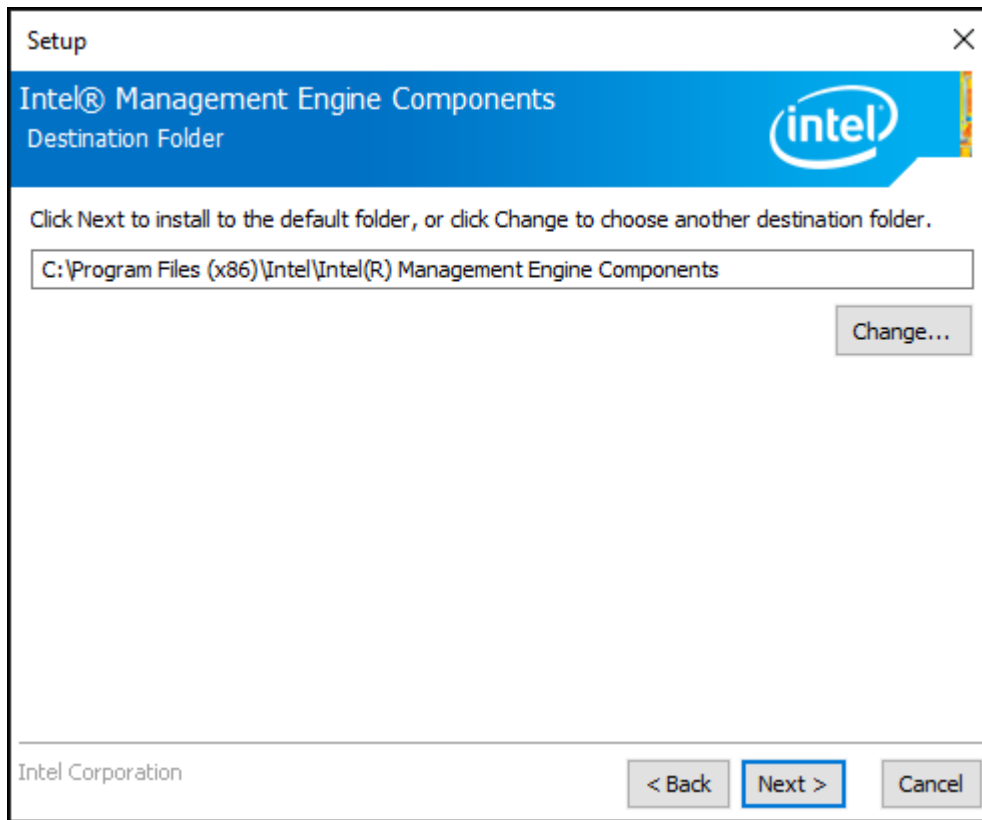


Step 4. Click **Finish** to complete the installation.

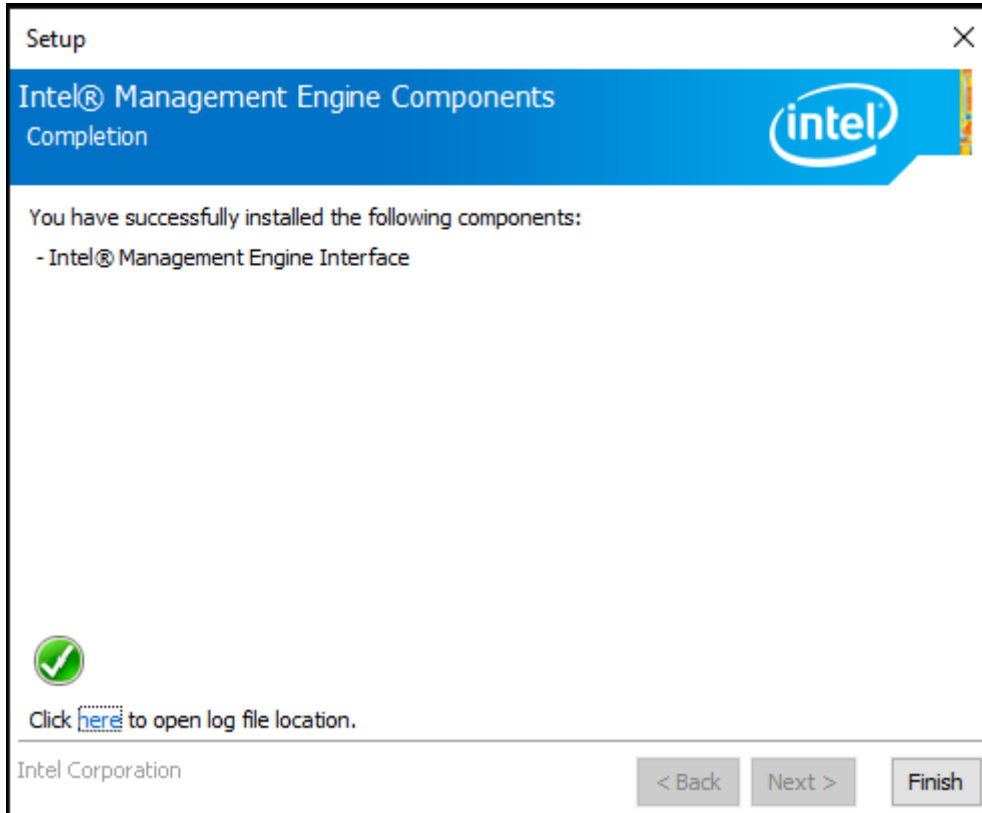


4.5 LAN Driver

To install the LAN driver, please follow the steps below.


Step 1. Click **Next** to continue.

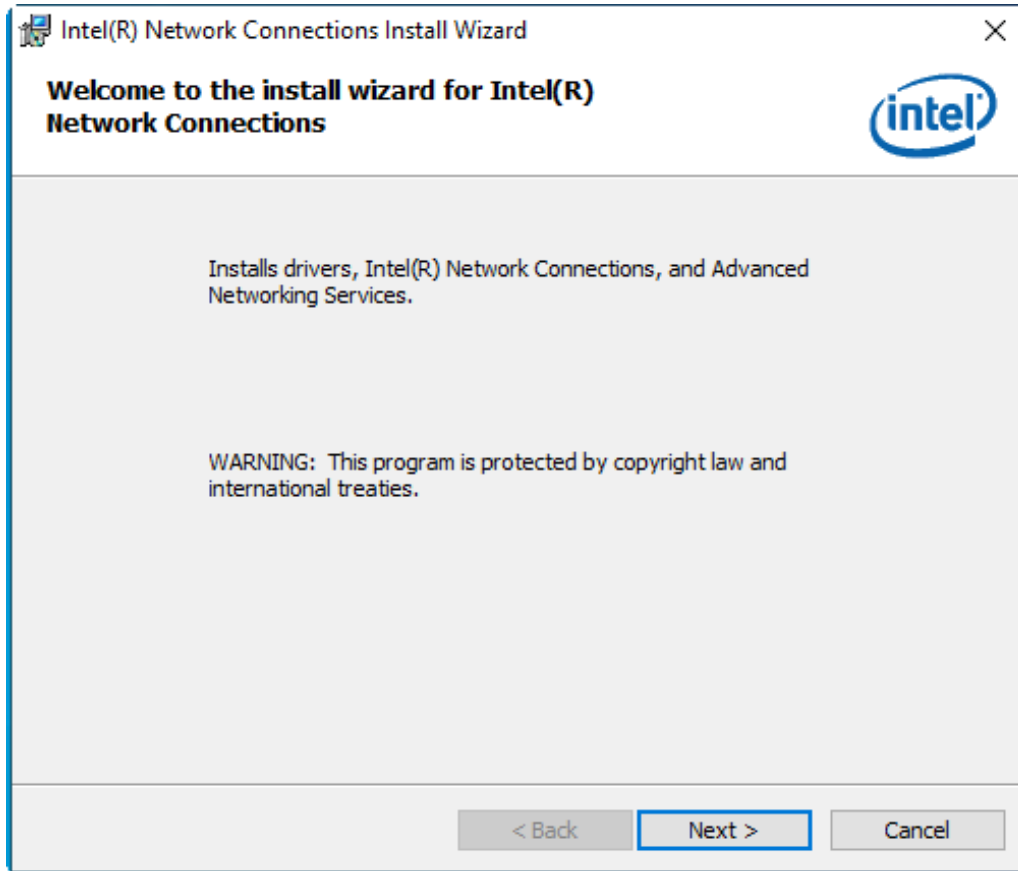


Step 2. Choose **I accept the terms in the License Agreement** and click **Next** to begin the installation.

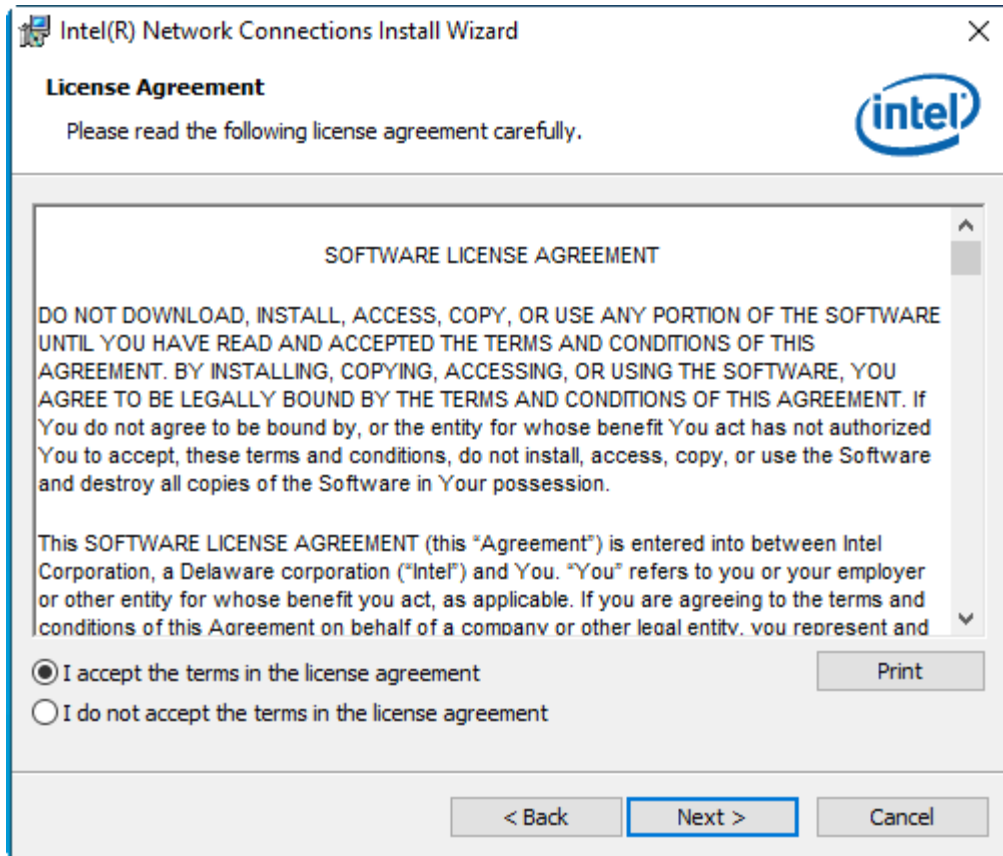

Step 3. Click **Next** to continue.

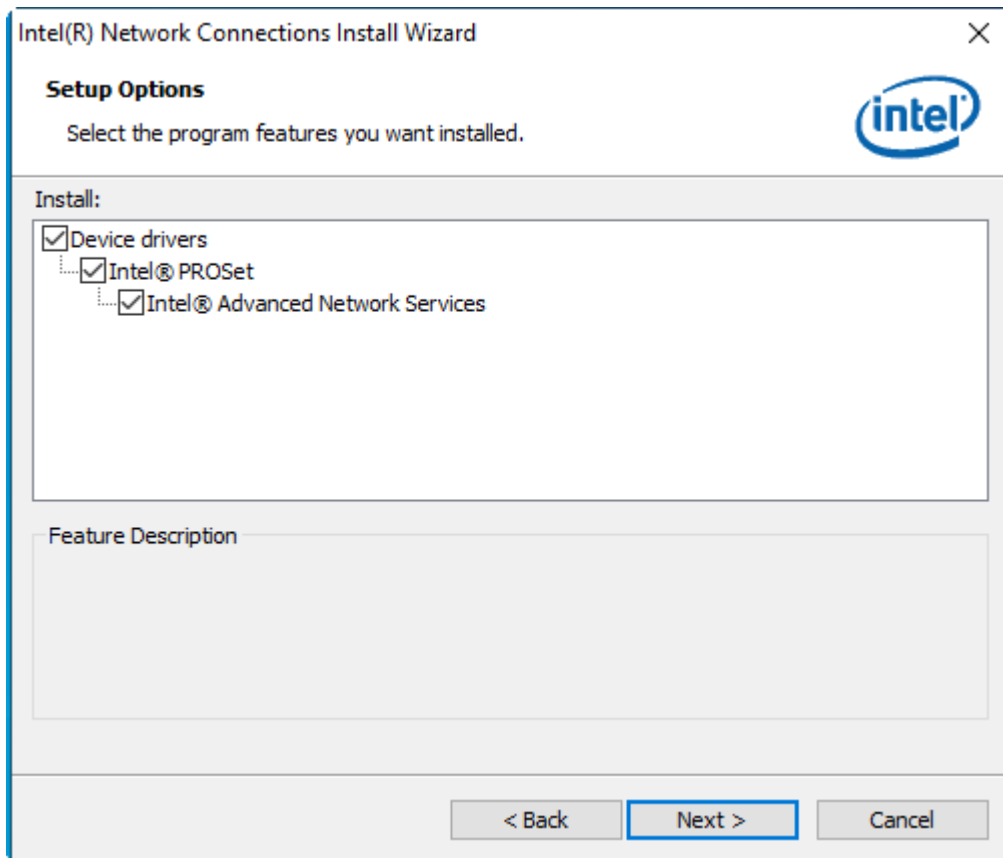

Step 4. Click **Install** to begin the installation.

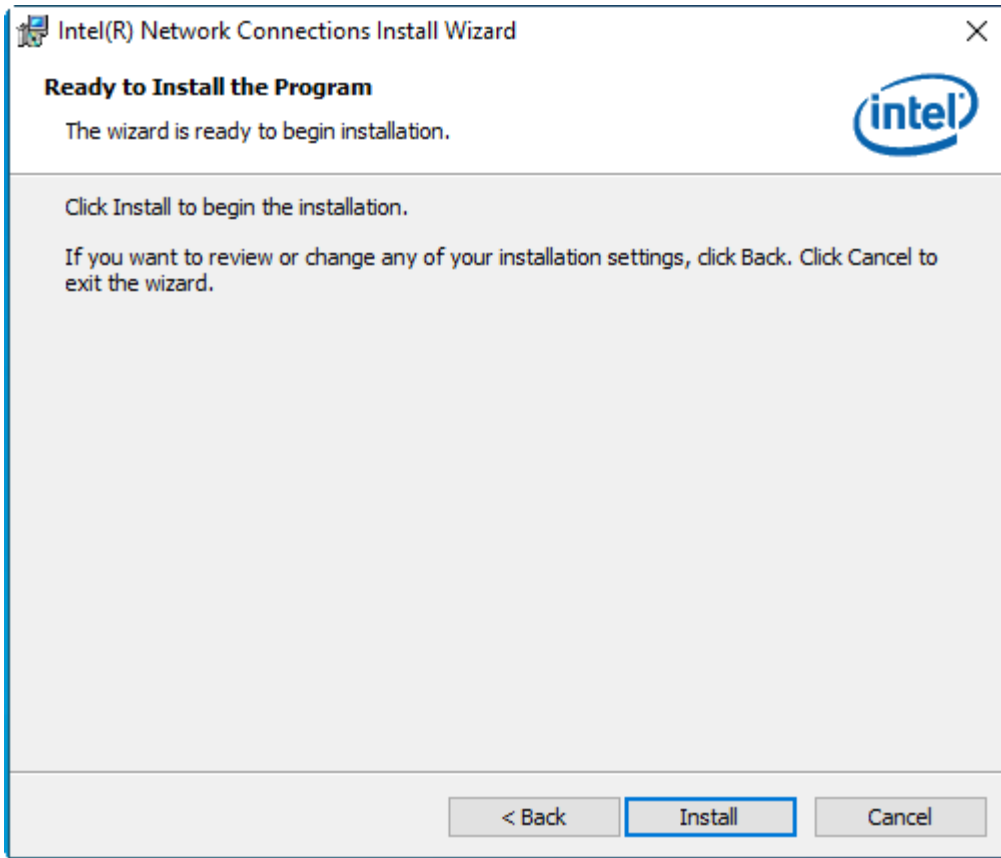

4.6 Touch Screen Installation

This chapter describes how to install drivers and other software that will allow your touch screen work with different operating systems.

4.6.1 Windows 10 Universal Driver Installation for PenMount 6000 Series

Before installing the Windows 10 driver software, you must have the Windows 10 system installed and running on your computer. You must also have one of the following PenMount 6000 series controller or control boards installed: PM6500, PM6300.


Resistive Touch

If you have an older version of the PenMount Windows 7 driver installed in your system, please remove it first. Follow the steps below to install the PenMount DMC6000 driver.


Step 1. Click **Next** to continue.



Step 2. Read the license agreement. Click **I Agree** to agree the license agreement.

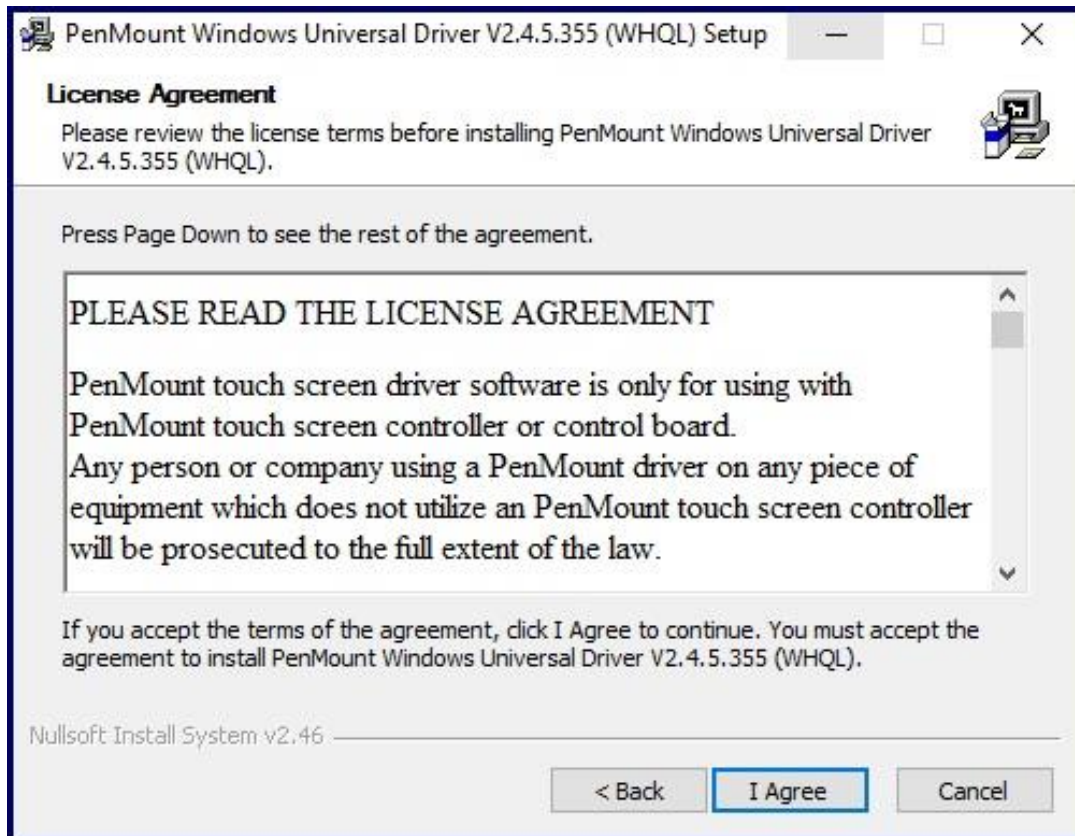


Step 3. Choose the folder in which to install PenMount Windows Universal Driver. Click **Install** to start the installation.

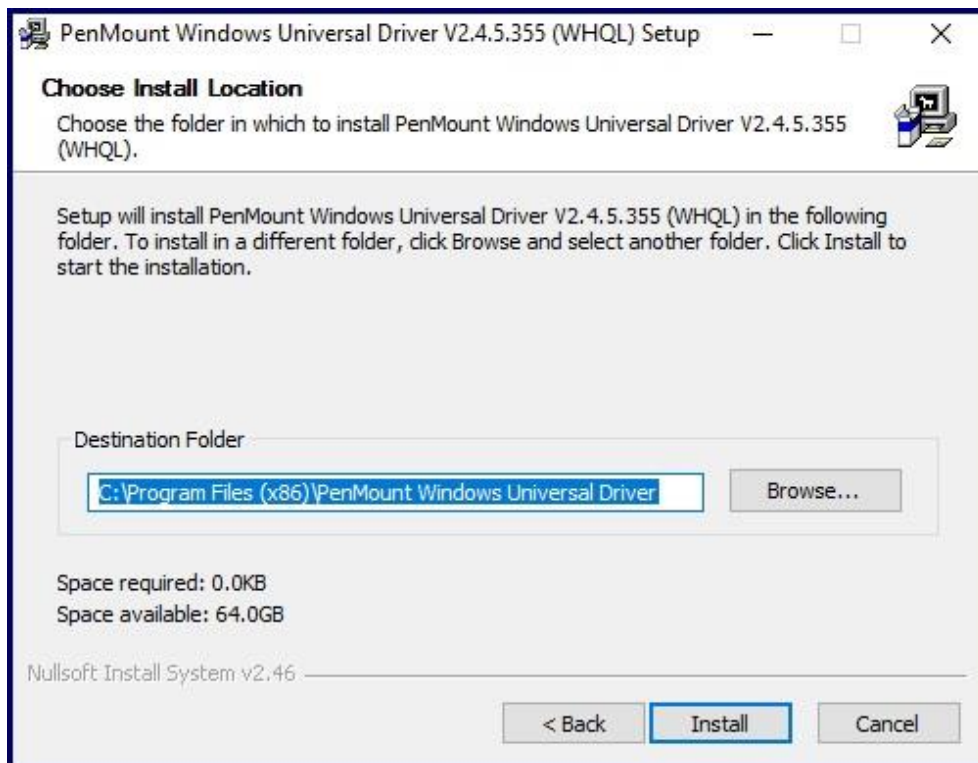

Step 4. Click **Yes** to continue.



Step 5. Click **Finish** to complete installation.

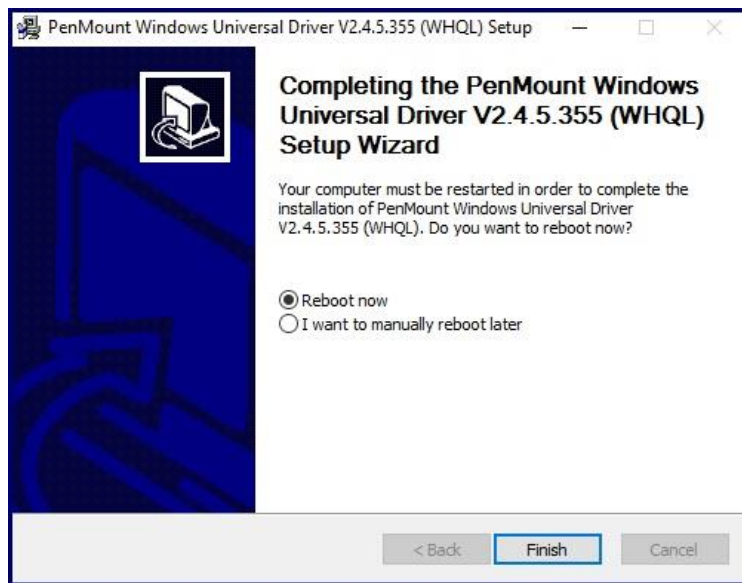

4.6.2 Software Functions

Resistive Touch

Upon rebooting, the computer automatically finds the new 6000 controller board. The touch screen is connected but not calibrated. Follow the procedures below to carry out calibration.


1. After installation, click the PenMount Monitor icon “PM” in the menu bar.
2. When the PenMount Control Panel appears, select a device to “Calibrate.”

PenMount Control Panel (Resistive Touch)

The functions of the PenMount Control Panel are **Device**, **Multiple Monitors**, **Tools** and **About**, which are explained in the following sections.

Device

In this window, you can find out that how many devices be detected on your system.

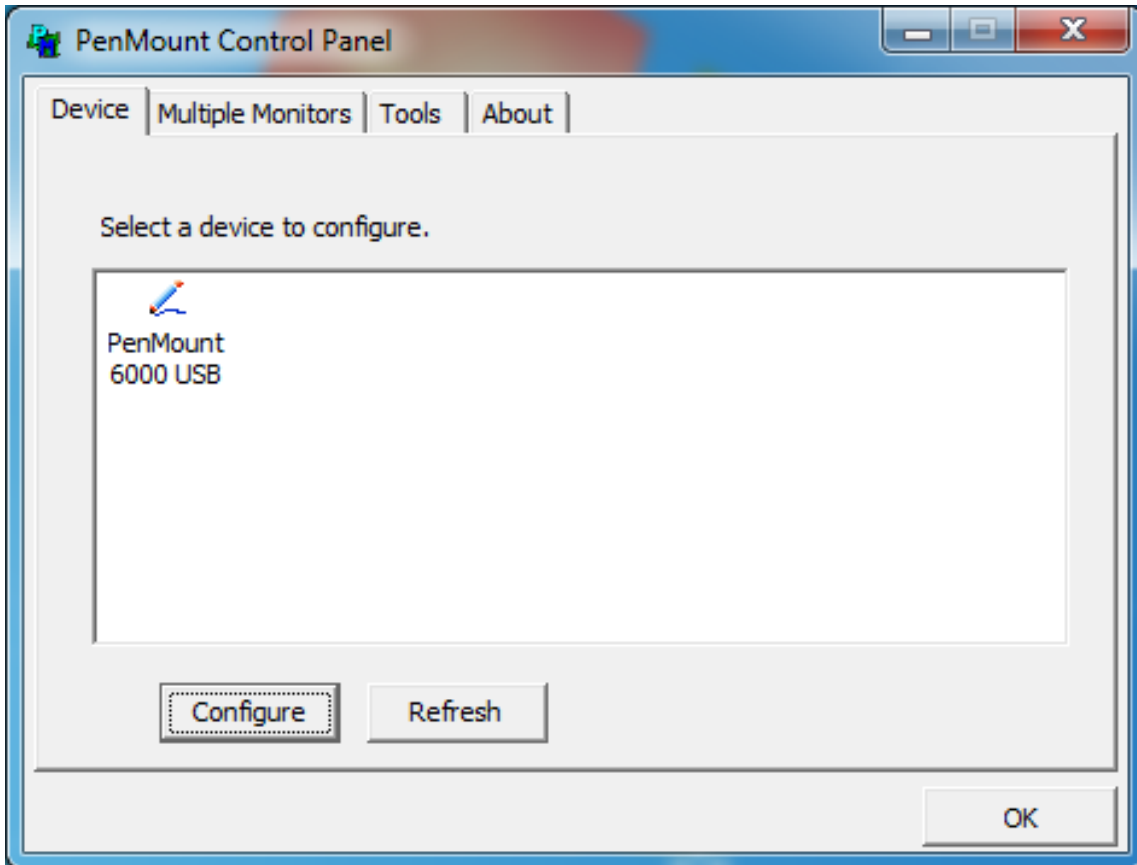


Calibrate


This function offers two ways to calibrate your touch screen. 'Standard Calibration' adjusts most touch screens. 'Advanced Calibration' adjusts aging touch screens.


Standard Calibration	Click this button and arrows appear pointing to red squares. Use your finger or stylus to touch the red squares in sequence. After the fifth red point calibration is complete. To skip, press 'ESC'.
Advanced Calibration	Advanced Calibration uses 4, 9, 16 or 25 points to effectively calibrate touch panel linearity of aged touch screens. Click this button and touch the red squares in sequence with a stylus. To skip, press ESC'.

Step 1. Please select a device then click “Configure”. You can also double click the device too.

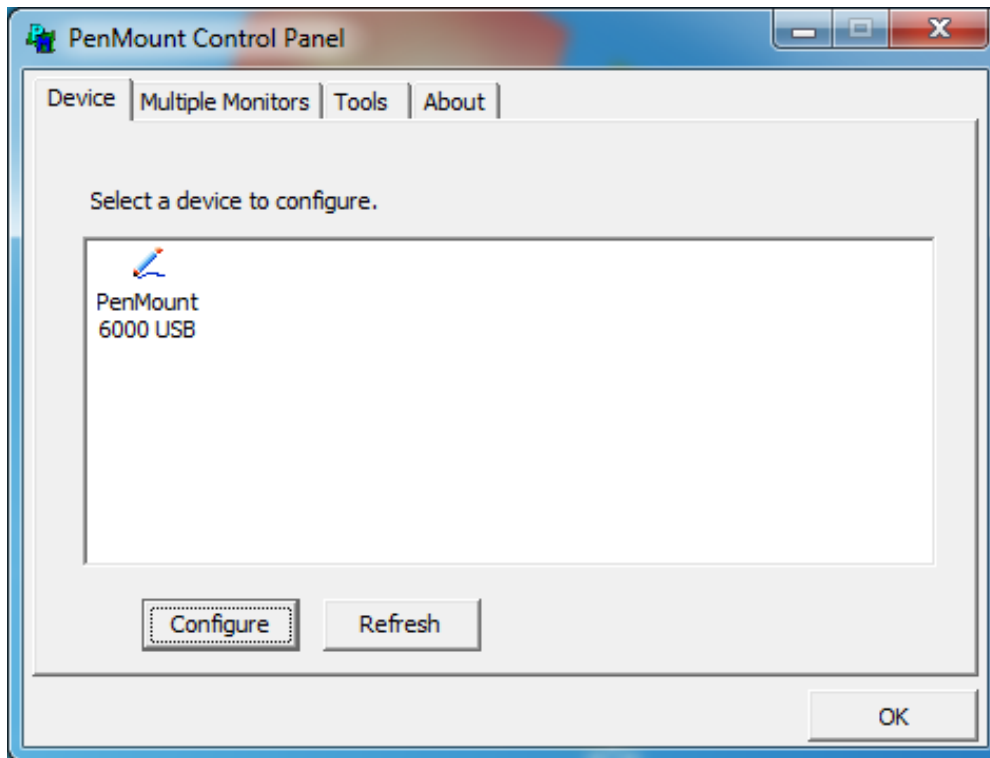


Step 2. Click “Standard Calibration” to start calibration procedure

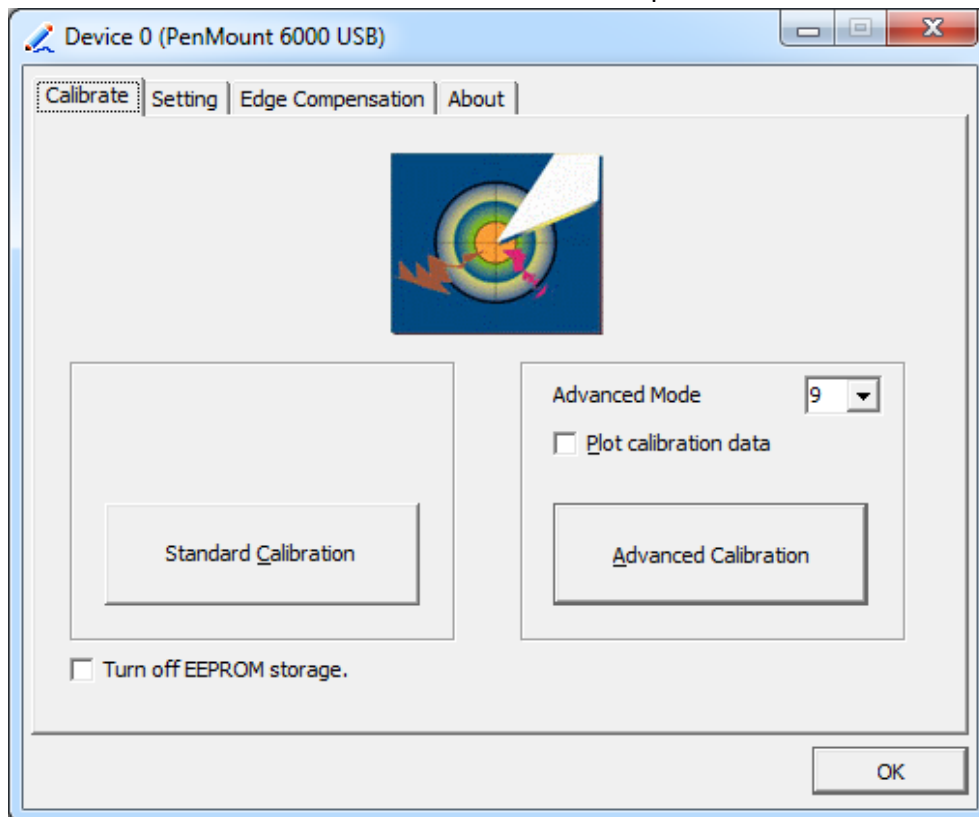

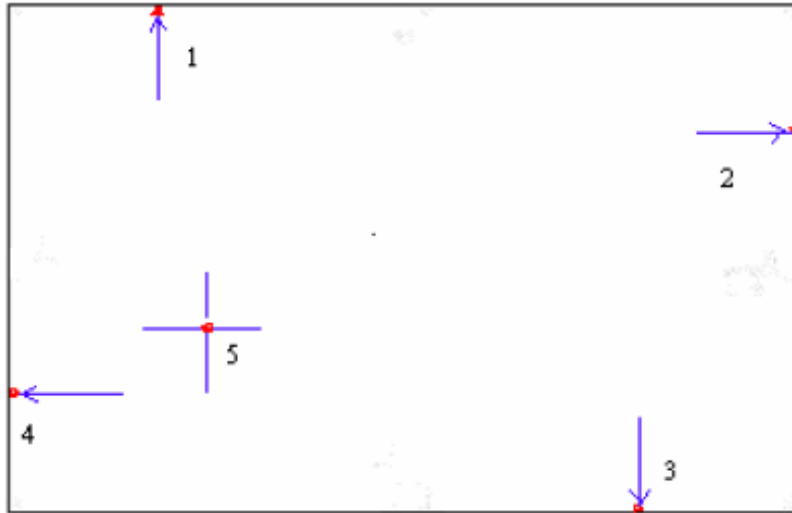

NOTE: The older the touch screen, the more Advanced Mode calibration points you need for an accurate calibration. Use a stylus during Advanced Calibration for greater accuracy. Please follow the step as below:

Step 3. Select **Device** to calibrate, then you can start to do **Advanced Calibration**.

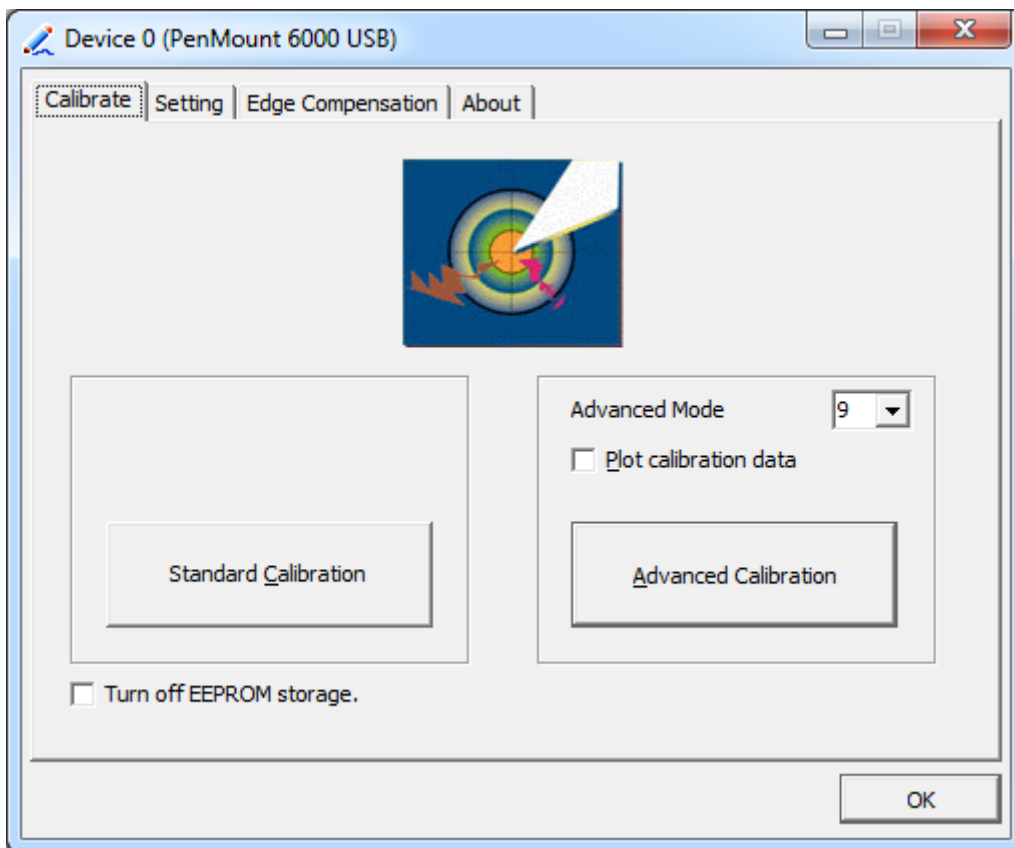


NOTE: Recommend to use a stylus during Advanced Calibration for greater accuracy.



Plot Calibration Data	Check this function and a touch panel linearity comparison graph appears when you have finished Advanced Calibration. The blue lines show linearity before calibration and black lines show linearity after calibration.
Turn off EEPROM storage	The function disable for calibration data to write in Controller. The default setting is Enable.

Setting

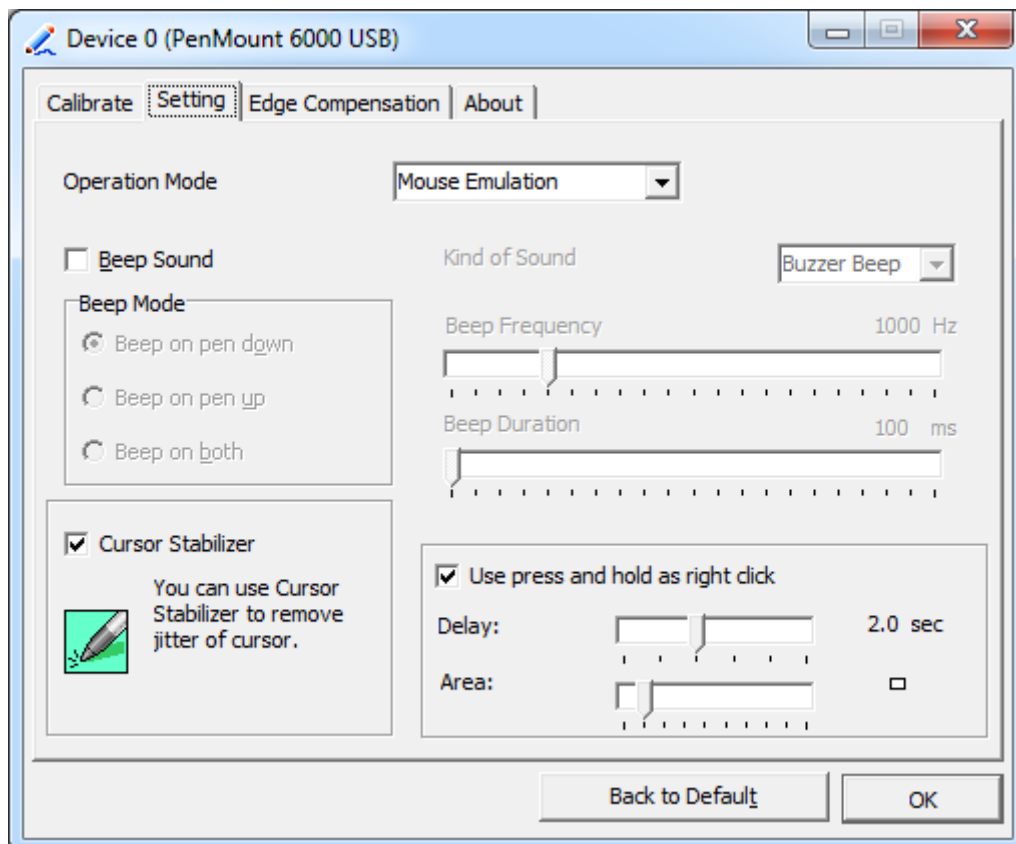


Touch Mode	This mode enables and disables the mouse's ability to drag on-screen icons – useful for configuring POS terminals. Mouse Emulation – Select this mode and the mouse functions as normal and allows dragging of icons.
------------	--

	Click on Touch – Select this mode and mouse only provides a click function, and dragging is disabled.
Beep Sound	Enable Beep Sound – turns beep function on and off Beep on Pen Down – beep occurs when pen comes down Beep on Pen Up – beep occurs when pen is lifted up Beep on both – beep occurs when comes down and lifted up Beep Frequency – modifies sound frequency Beep Duration – modifies sound duration
Cursor Stabilizer	Enable the function support to prevent cursor shake.
Use press and hold as right click	You can set the time out and area for you need.


Edge Compensation

You can use Edge Compensation to calibrate more subtly.

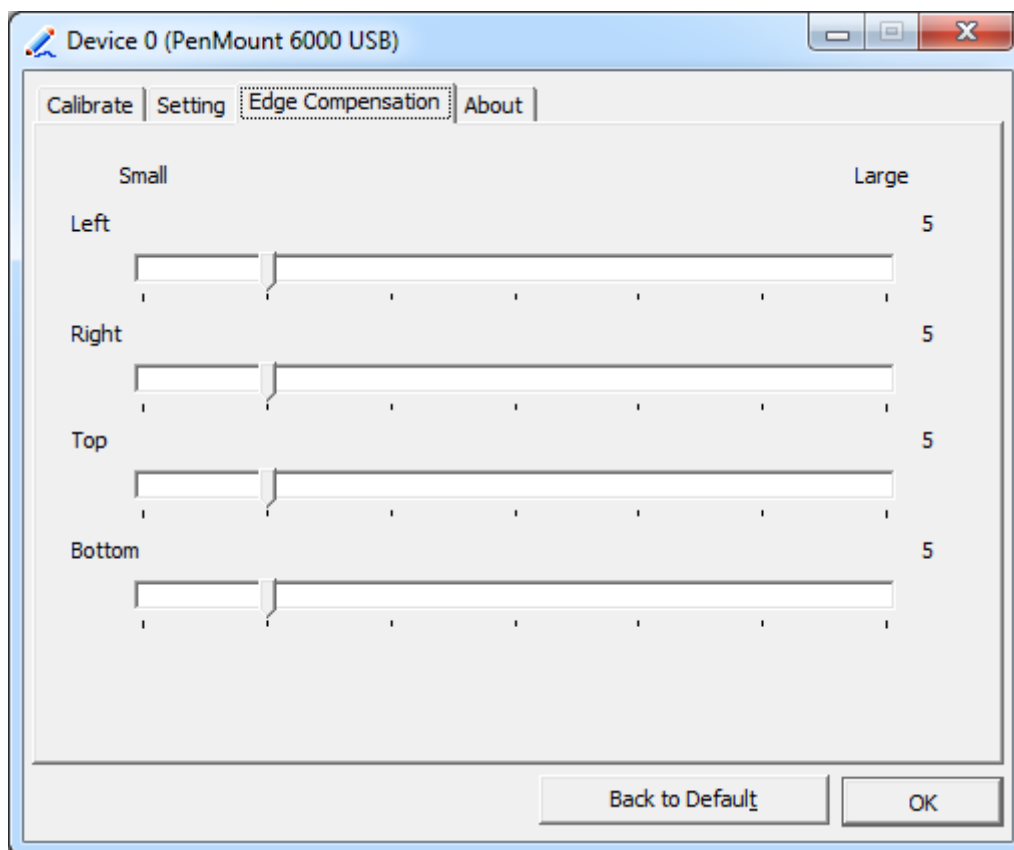

About

This panel displays information about the PenMount controller and driver version.

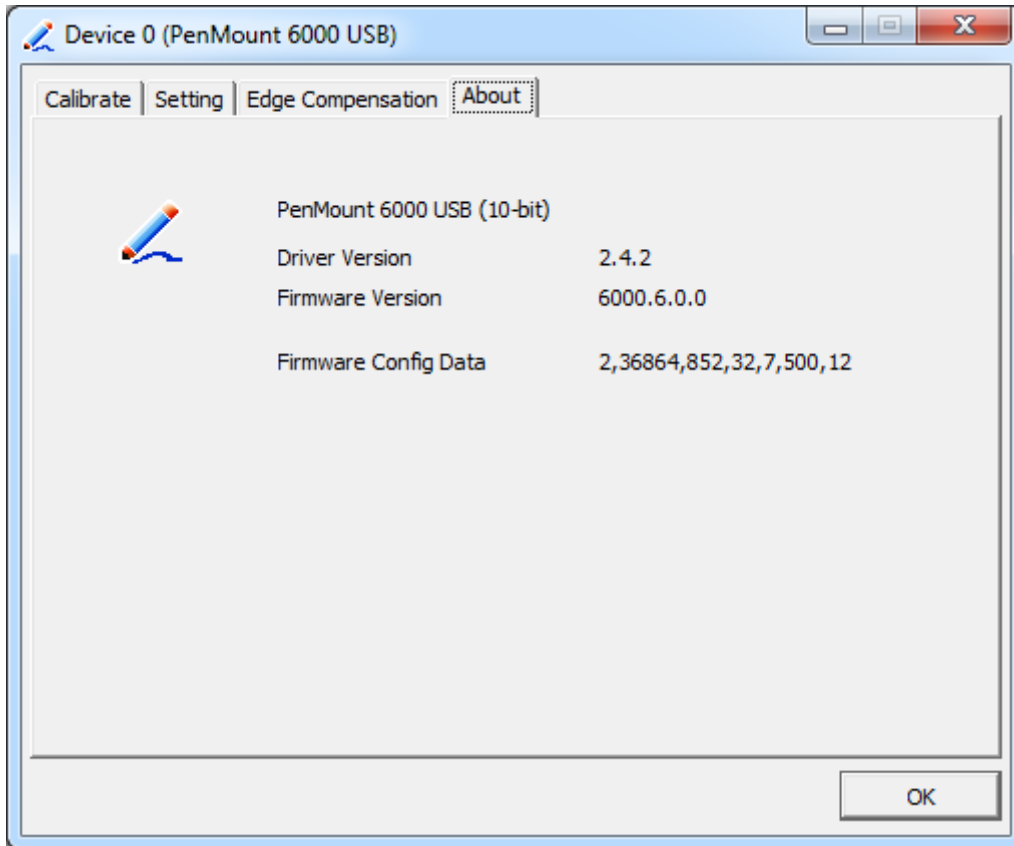


Multiple Monitors

Multiple Monitors support from two to six touch screen displays for one system. The PenMount drivers for Windows 7/8/8.1 support Multiple Monitors. This function supports from two to six touch screen displays for one system. Each monitor requires its own PenMount touch screen control board, either installed inside the display or in a central unit. The PenMount control boards must be connected to the computer COM ports via the USB interface. Driver installation procedures are the same as for a single monitor. Multiple Monitors support the following modes:
Windows Extends Monitor Function
Matrox DualHead Multi-Screen Function
nVidia nView Function


NOTE: The Multiple Monitor function is for use with multiple displays only. Do not use this function if you have only one touch screen display. Please note once you turn on this function the rotating function is disabled.

Enable the multiple display function as follows:


1. Check the **Enable Multiple Monitor Support** box; then click **Map Touch Screens** to assign touch controllers to displays.

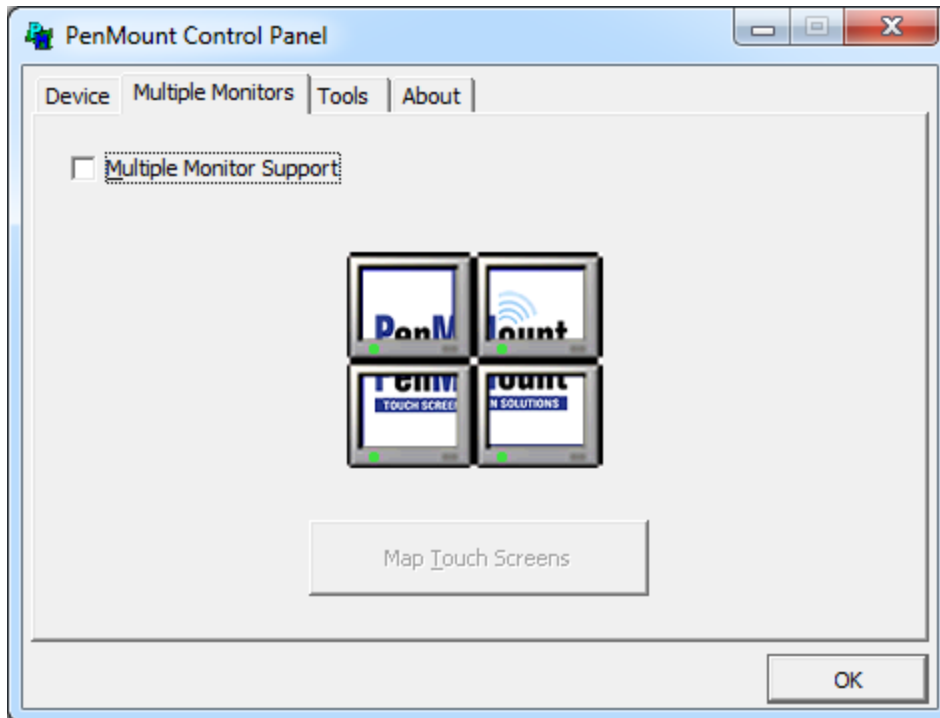

2. When the mapping screen message appears, click **OK**.
3. Touch each screen as it displays “Please touch this monitor”. Following this sequence and touching each screen is called **mapping the touch screens**.

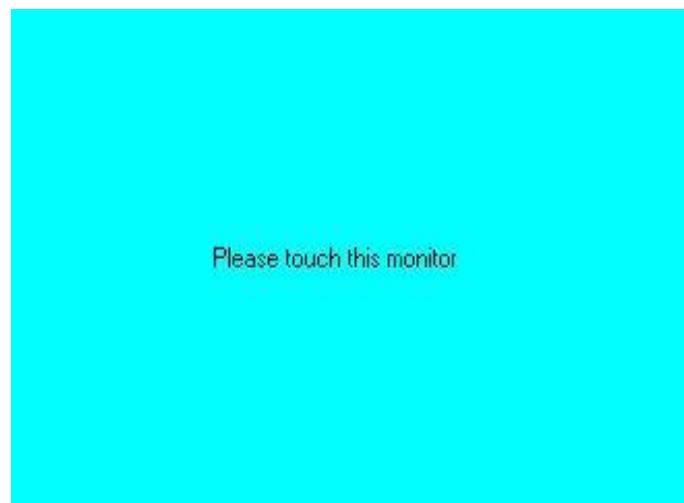

4. Touching all screens completes the mapping and the desktop reappears on the monitors.
5. Select a display and execute the “Calibration” function. A message to start calibration appears. Click **OK**.

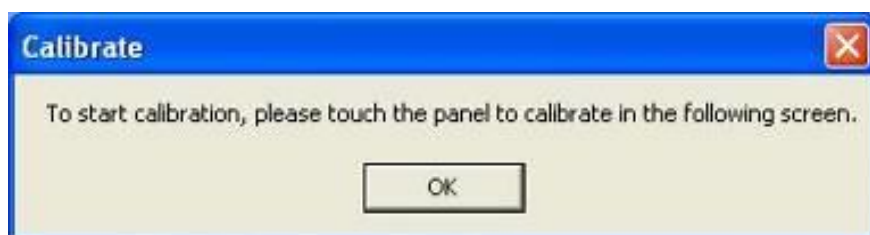


6. “Touch this screen to start its calibration” appears on one of the screens. Touch the screen.
7. “Touch the red square” messages appear. Touch the red squares in sequence.
8. Continue calibration for each monitor by clicking **Standard Calibration** and touching the red squares.

NOTES:

1. If you use a single VGA output for multiple monitors, please do not use the **Multiple Monitor** function. Just follow the regular procedure for calibration on each of your desktop monitors.
2. The Rotating function is disabled if you use the Multiple Monitor function.
3. If you change the resolution of display or screen address, you have to redo **Map Touch Screens**, so the system understands where the displays are.

About

This panel displays information about the PenMount controller and this driver version.

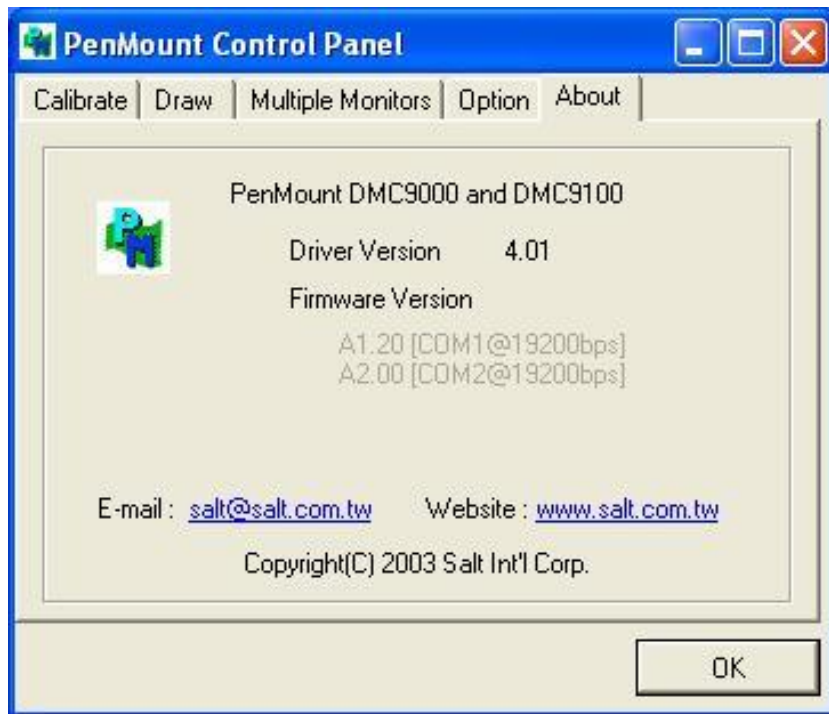

PenMount Monitor Menu Icon


The PenMount monitor icon (PM) appears in the menu bar of Windows 7/8/8.1 system when you turn on PenMount Monitor in PenMount Utilities.



PenMount Monitor has the following function



Control Panel	Open Control Panel Windows
---------------	-----------------------------------

Beep	Setting Beep function for each device
Right Button	<p>When you select this function, a mouse icon appears in the right-bottom of the screen.</p> <p>Click this icon to switch between Right and Left Button functions.</p> 
Exit	Exits the PenMount Monitor function.

Configuring the Rotate Function

1. Install the rotation software package.
2. Choose the rotate function (0°, 90°, 180°, 270°) in the 3rd party software. The calibration screen appears automatically. Touch this point and rotation is mapped.

